



Black and Decker Dustbuster CHV1410 Filter Button Replacement

This is the guide on how to replace the filter button on a black and decker dustbuster.

Written By: Ivette Muzquiz



INTRODUCTION

Sometimes the filter button can become jammed or broken. This guide will show how to take the housing apart and replace the filter button within the black and decker dustbuster. One thing to be aware of would be that the screws are deep within the outside of the housing so an extender could be needed to get to the screws.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [4mm Hex Socket](#) (1)
-

Step 1 — Filter Button





- To remove the filter and housing, press the green button labeled "Filter".

Step 2




- Unscrew and remove all 5 screws using the Phillips 0 screw bit. Each screw is 17.5 mm long.

Step 3

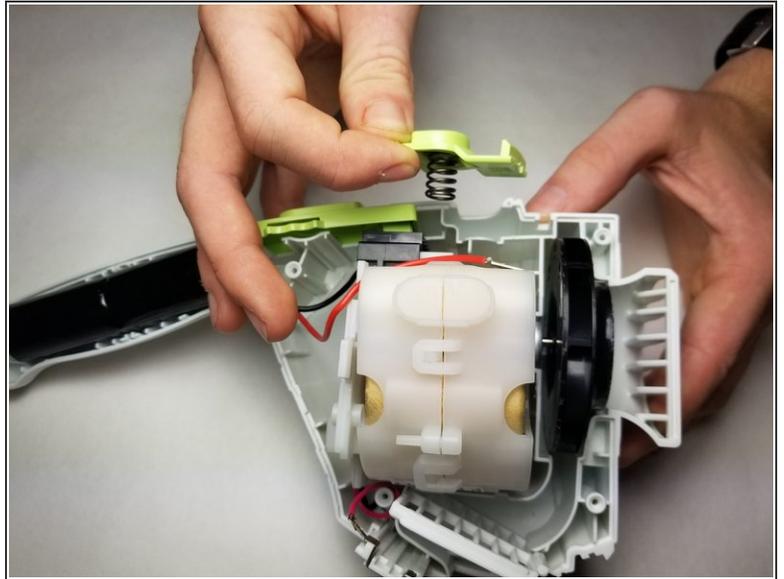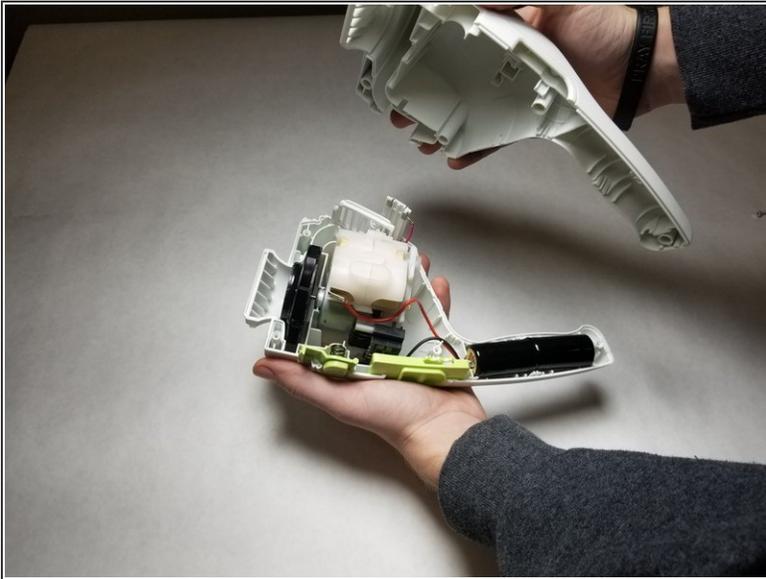

- Pull the housing apart.
- Note when the housing is taken apart some parts may fall out be sure to keep track of any parts that come out.
- Remove the filter button by pulling it out.

Step 4

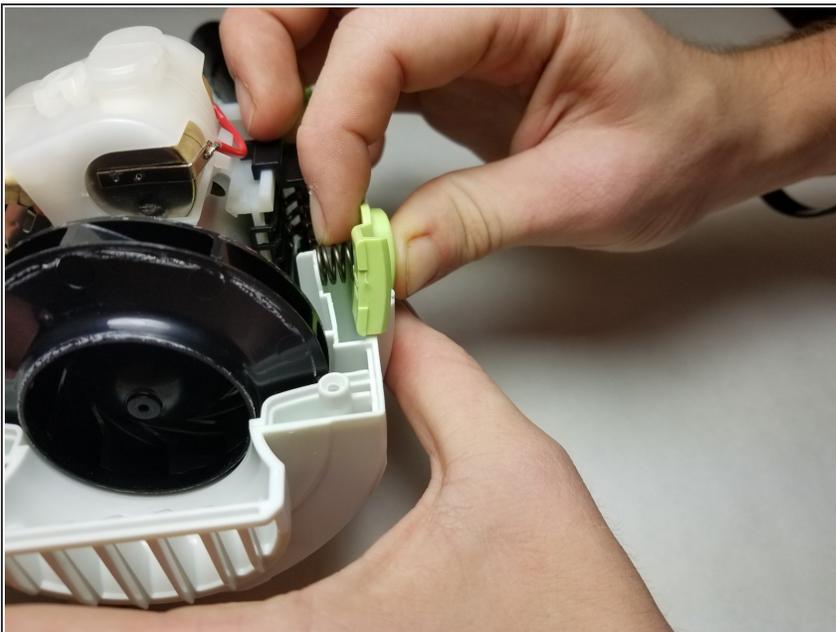

- Replace the new button by compressing the spring and placing it in the groove.

To reassemble your device, follow these instructions in reverse order.