



Black and Decker TR1278B Top Cover Replacement

This guide will show how to remove and replace the front cover of a Black and Decker TR1278B toaster.

Written By: Dominic Gamonez



INTRODUCTION

To work on the inside of the toaster, the top cover must first be removed. This guide provides instructions on how to remove the top cover.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Top Cover



- ⓘ Unplug the toaster before disassembly.
- Remove the carriage lever by pulling it away from the toaster.

Step 2



- ⓘ Toaster will be turned upside down. Clear crumb tray or work over a paper towel.
- Turn the toaster upside down.
- Unscrew all four 4mm screws on the bottom using a Phillip's head #2 (PH2) screwdriver.

Step 3




- Detach the bottom from the front cover using the plastic opening tool.

Step 4



- Turn the toaster right side up.
- ⚠ Support the bottom. The ribbon cable that connects the toaster to the front cover can be damaged.
- Lift the front cover.
- ⚠ Lift carefully. Again the ribbon cable can be damaged.

Step 5

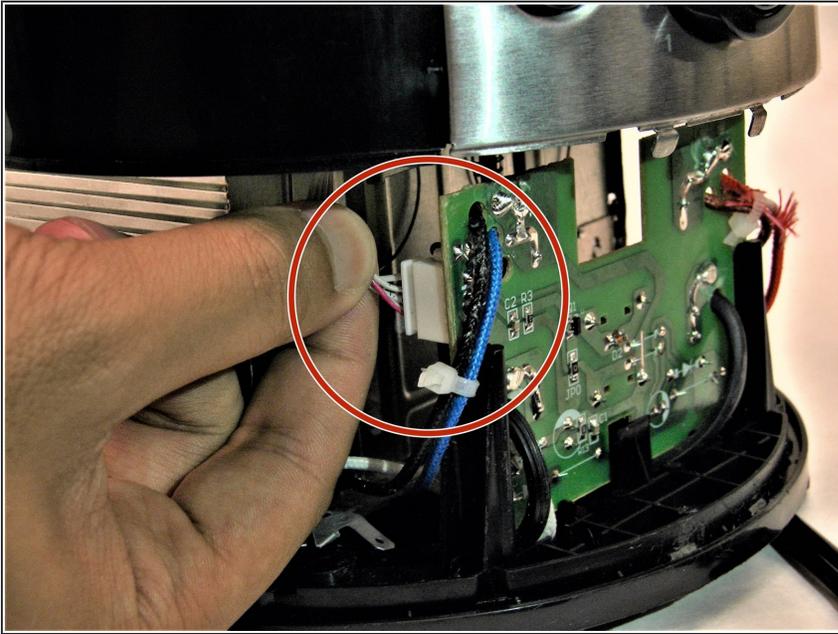

- Detach the bundled cable connector from the toaster by carefully pulling it away from the circuit board.

To reassemble your device, follow these instructions in reverse order.