



# Braven BRV-1M Outer Casing Replacement

In the event the casing of the Braven BRV-1M damaged, one can reference this guide on how to successfully replace the outer shell of the device.

Written By: Erik Oliva



---

## INTRODUCTION

Having a damaged outer casing can allow foreign material to enter the speaker. By following this guide, one can learn how to remove and replace the outer case of the device.

---

### TOOLS:


- [64 Bit Driver Kit](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Outer Casing



- To remove the outer casing, use a 3mm Hex bit to remove the 4 large 12mm Hex screws on both sides of the device.

## Step 2

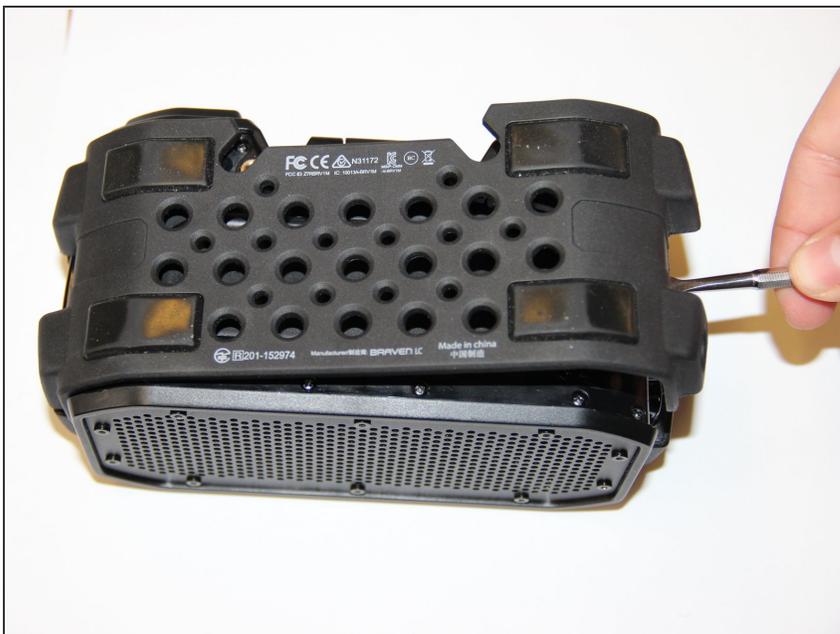


- Using the Metal Spudger, carefully pry each side of the rubber casing away from the device.
- ⓘ A little resistance should be felt, but not enough to bend the spudger.

### Step 3



- To remove the inner plastic casing, use a Phillips #00 head bit to remove the 16 small 9mm screws surrounding the top side of the device.

### Step 4

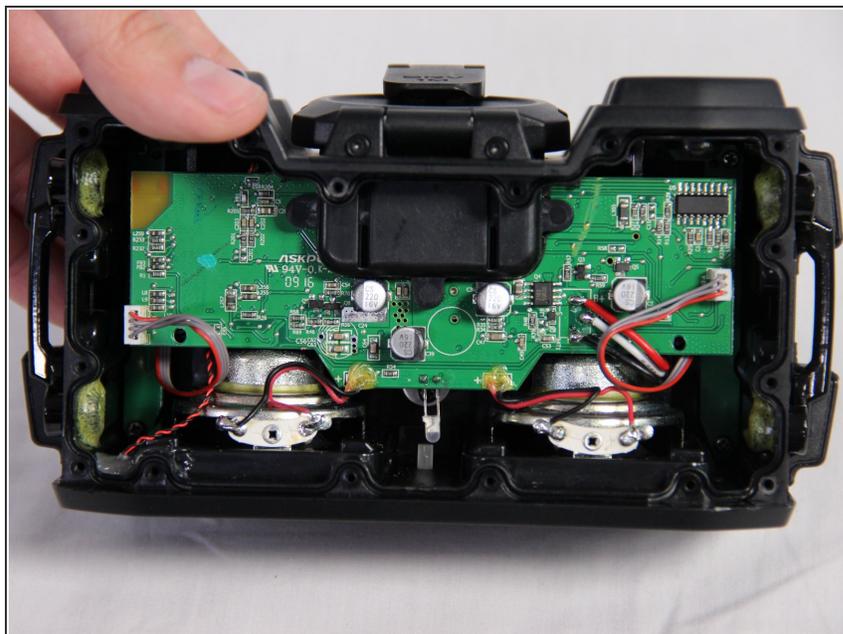

- Carefully lift away the housing and replace the broken casing/component. Replace using the new casing.

To reassemble your device, follow these instructions in reverse order.