


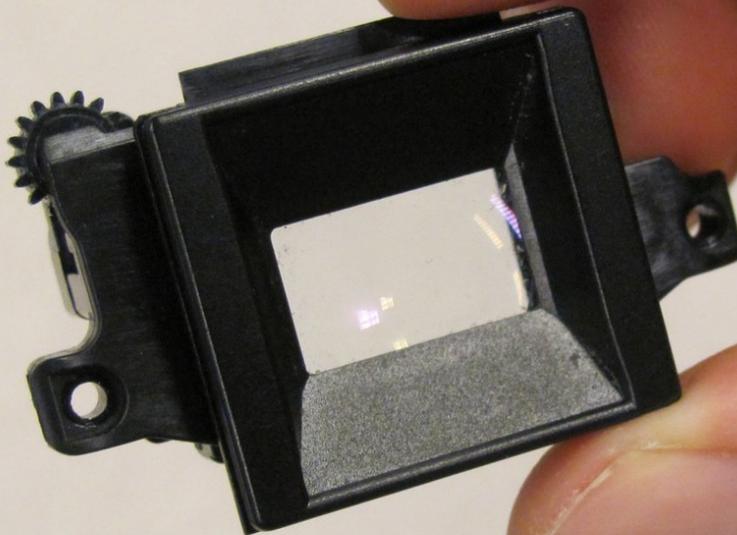

Canon EOS 30 Inner Eyepiece Replacement

Use this guide to get to the inner eyepiece for replacement.

Written By: Jackie



INTRODUCTION

This guide will help you step by step to reach and replace the inner eyepiece of canon EOS 30.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Front Panel



- Remove the two 4.8 mm black screws above the lens on the front of the camera.

Step 2



- Remove the 4.3 mm black screw under the lens ring, and the 4.8 mm black screw under the camera.

Step 3



- Remove the 4.8 mm black screw on the left side of the camera.

Step 4



- Remove the front panel by lifting it away from the camera's body.

Step 5 — Top Panel



- Slide the outer eyepiece upward to remove it.

Step 6



- Remove the two 4.75 mm black screws located on the top of the camera.

Step 7



- Remove the four 4.3 mm black screws near the bottom corners of the eyepiece at the back of the camera.


Step 8



- Slowly separate the top panel from the camera by pushing it upward.


⚠ Separating the top panel too far or quickly can damage the ribbon cable and connecting wires that are still attached to the top panel of the camera.

Step 9 — The Inner Eyepiece

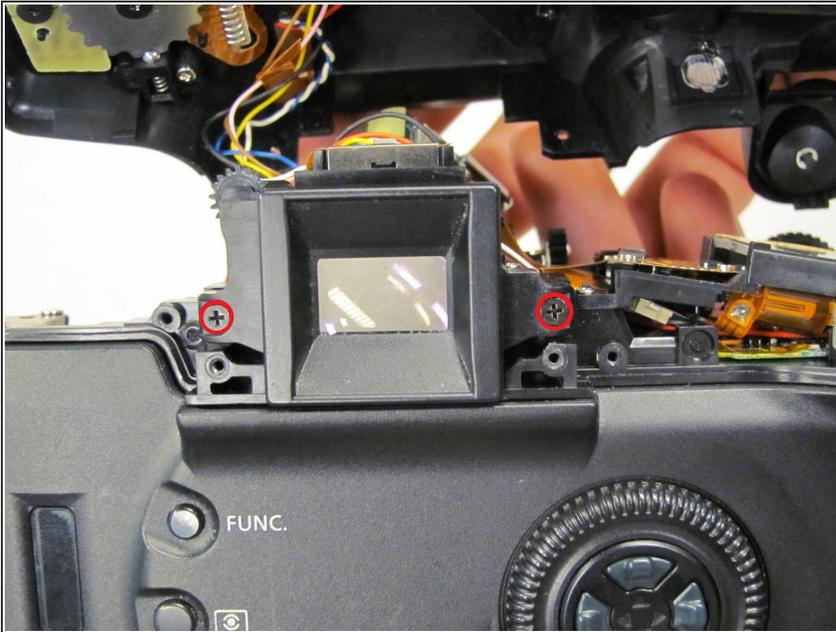

- Remove the two 9.5 mm black screws that attach the inner eyepiece to the camera's body and remove the eyepiece.

Step 10

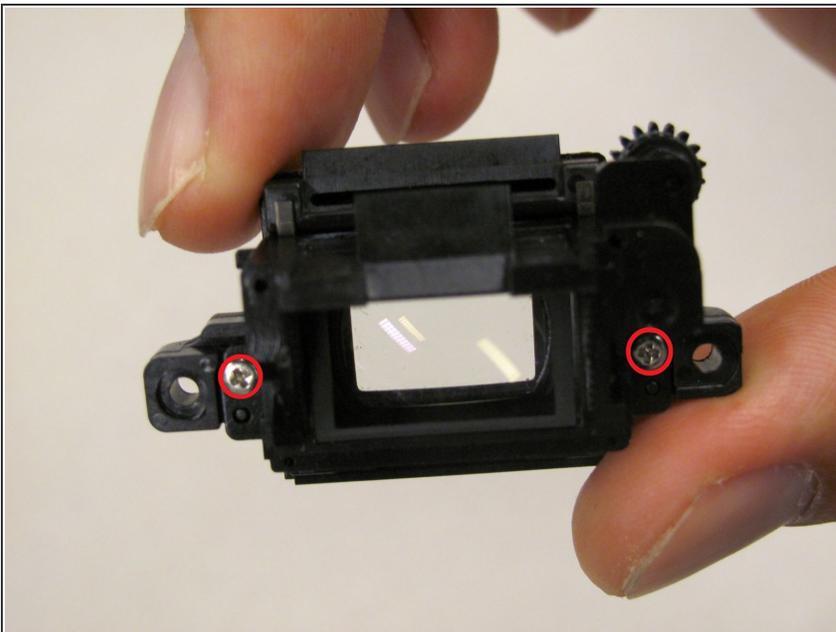

- Remove the two 4.3 mm silver screws on each side of the inner eyepiece.


Step 11



- Separate the inner eyepiece into three parts.


 The outer piece (left) has a small gear, which can easily fall off and get lost.

Step 12

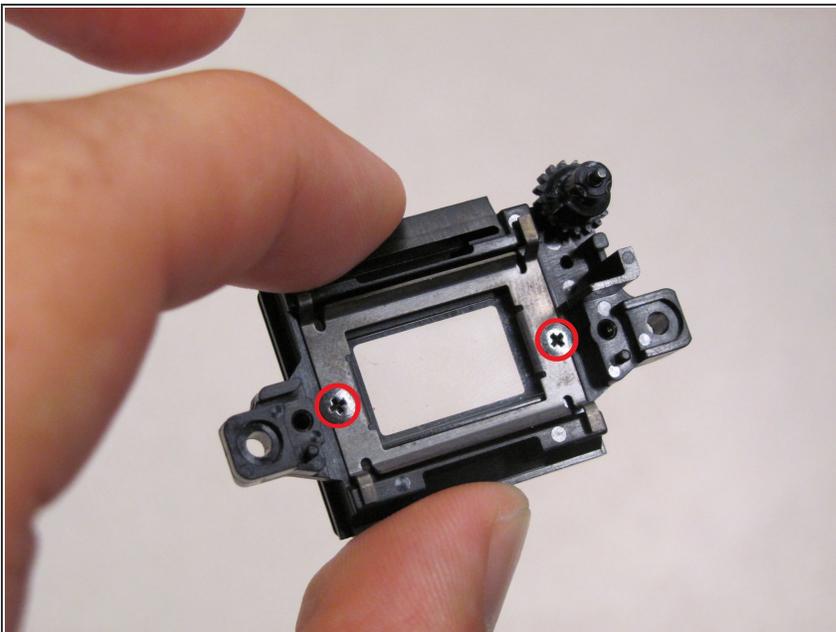

- Remove the two 3.6 mm black screws from the outer piece.

Step 13

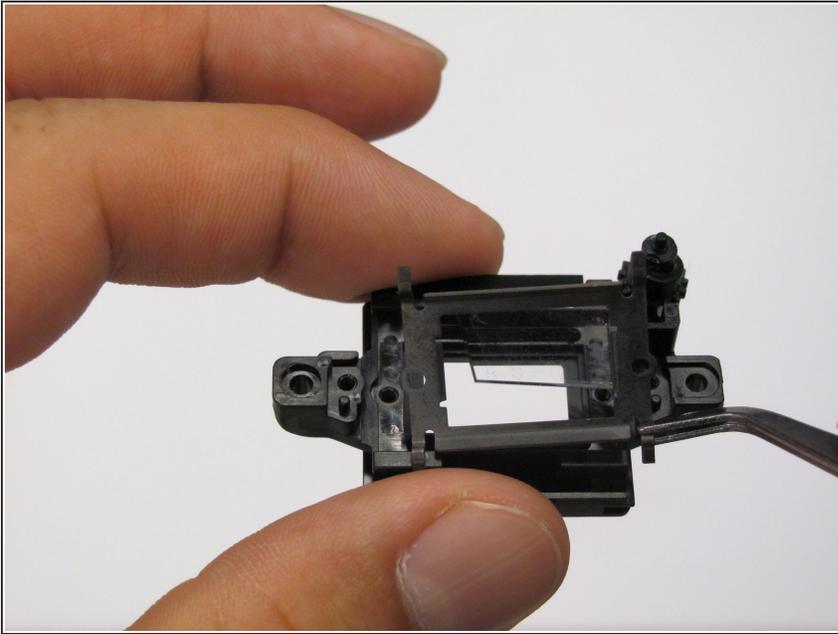

- Remove the glass panel and replace it.

⚠ When removing the glass panel make sure not to separate the small rubber piece attached around the frame.

To reassemble your device, follow these instructions in reverse order.