



Canon EOS 40D Date and Time Battery Replacement

This guide illustrates how to replace the Date and Time Battery in a Canon EOS 40D.

Written By: Doug Kruse



INTRODUCTION

If your date and time battery needs to be replaced, follow this guide to replace it. The required date and time battery is a CR2016 lithium.



PARTS:

- [CR 2016 3V Lithium Batteries](#) (1)
-

Step 1 — Battery



- Locate the battery compartment cover on the bottom of the camera below the shutter button.

Step 2



- Find the marked arrow on the battery compartment cover labeled "BATT. OPEN". Slide the lever following the arrow's direction and lift at the same time to release the latch.

Step 3




- Release the lever and allow the battery compartment cover to completely open.
- Remove the battery.

Step 4 — Date and Time Battery



- Remove the date and time battery holder by sliding it out of the slot.

Step 5

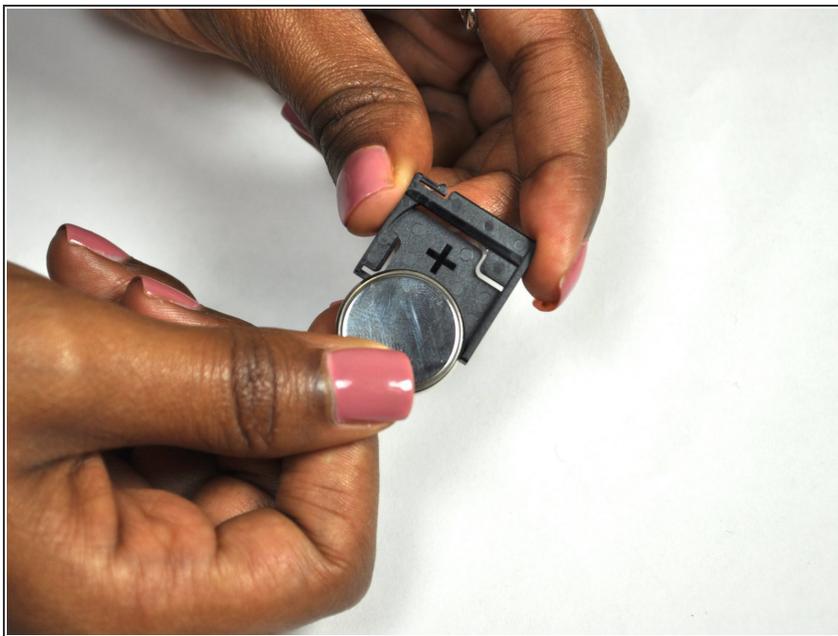

- Remove the date and time battery from the battery holder.

To reassemble your device, follow these instructions in reverse order.