



Canon EOS Rebel XS 35mm Bottom Cover and More Replacement

iFixit replacement guide for the bottom cover of the Canon EOS Rebel XS 35mm camera, along w/ parts underneath the bottom cover connected to plastic gears.

Written By: christiansvezia



This document was generated on 2020-04-04 06:57:18 AM (MST).

INTRODUCTION

This is a necessary procedure for replacing certain parts on the bottom of the Canon EOS Rebel XS 35mm camera (after removal of the bottom cover). This guide details how to remove these parts and put them back in, whether they're the same parts now fixed, or a new parts. The parts include two small metal plates, washers, screws, and gears.

TOOLS:

- [54 Bit Driver Kit](#) (1)

Just a PH000 screwdriver bit and screwdriver are necessary.

- [Tweezers](#) (1)

Not absolutely necessary.

Step 1 — Bottom Cover




- Remove 6 screws using a PH000 Screwdriver.
 - Remove 1 (7mm) screw
 - Remove 5 (4mm) screws

Step 2




- With your fingers, push on the bottom cover with a horizontal force until it clicks and separates.

Step 3

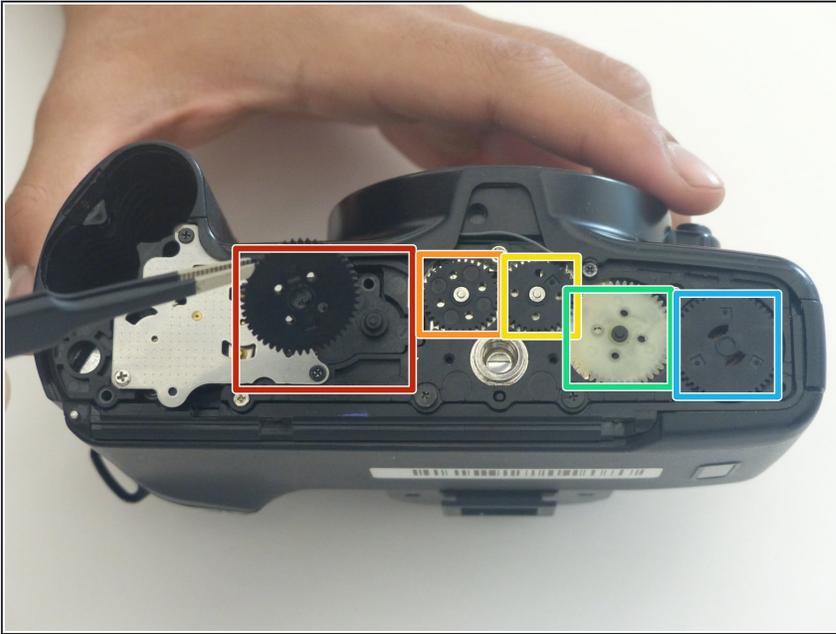


- With tweezers - although you can also use your fingers - you may remove these 5 gears (shown with colored squares around them) and place them somewhere else for the time being. They fall out easily while you're working, so this will help you stay organized.

Step 4 — Bottom Cover and More

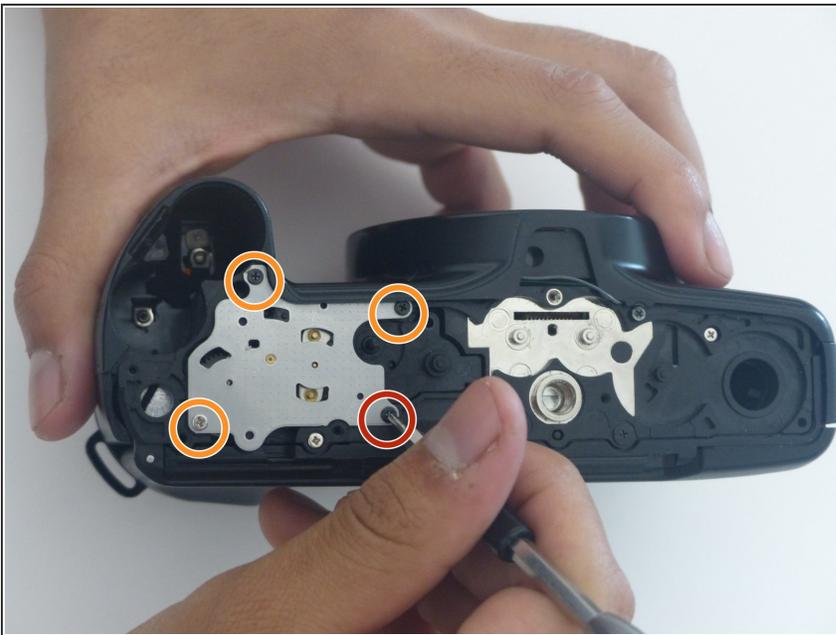


- Remove the 5mm silver Phillips #000 screw.
- Remove three 4mm Phillips #000 screws.

Step 5

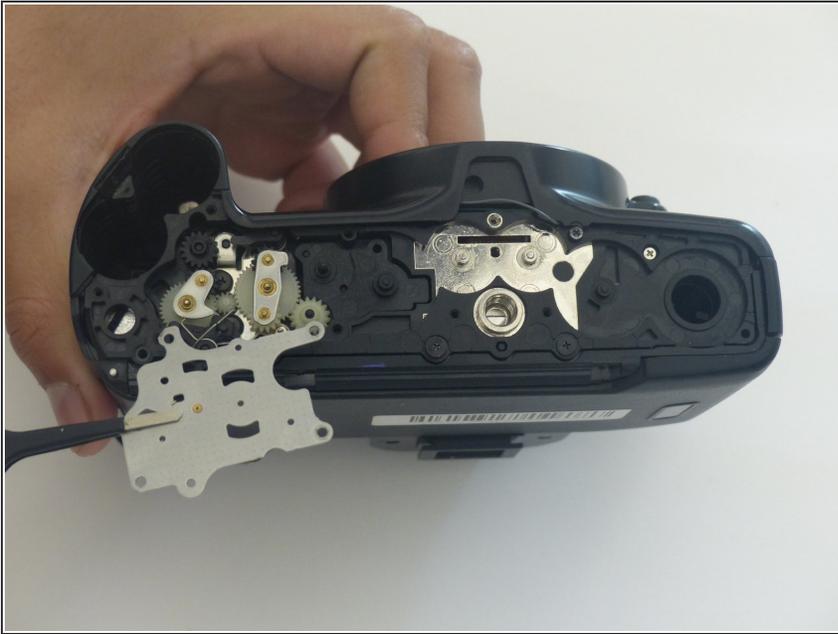


- Remove the silver plate with tweezers or fingers.

Step 6

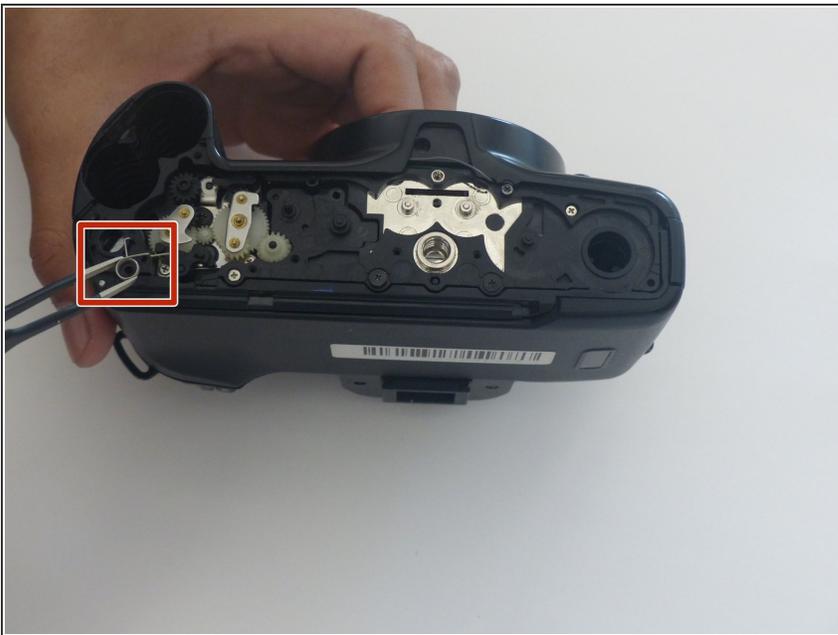


- ⚠ Be mindful of the spring attached to the plastic piece. Do not lose it.
- Remove the plastic black part.

Step 7

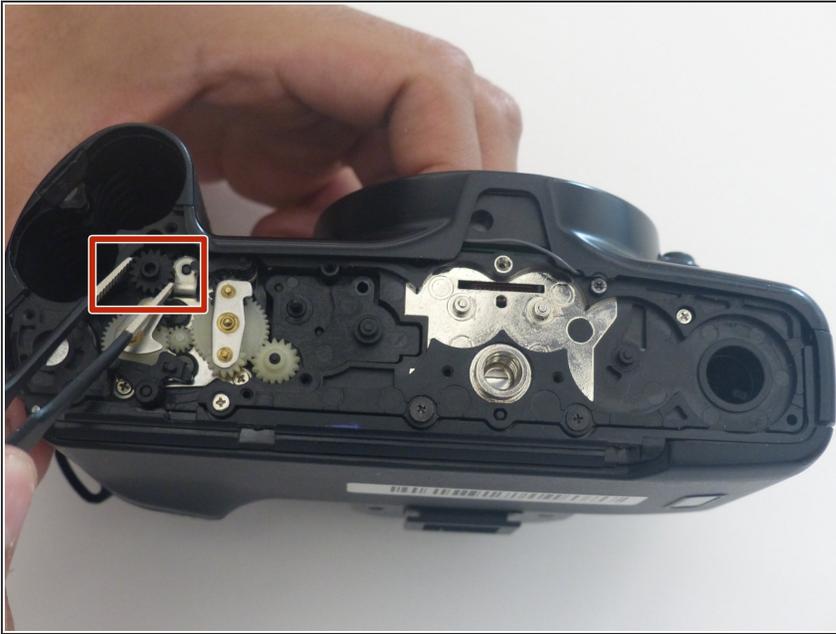


- Remove the black gear with tweezers or fingers.

Step 8

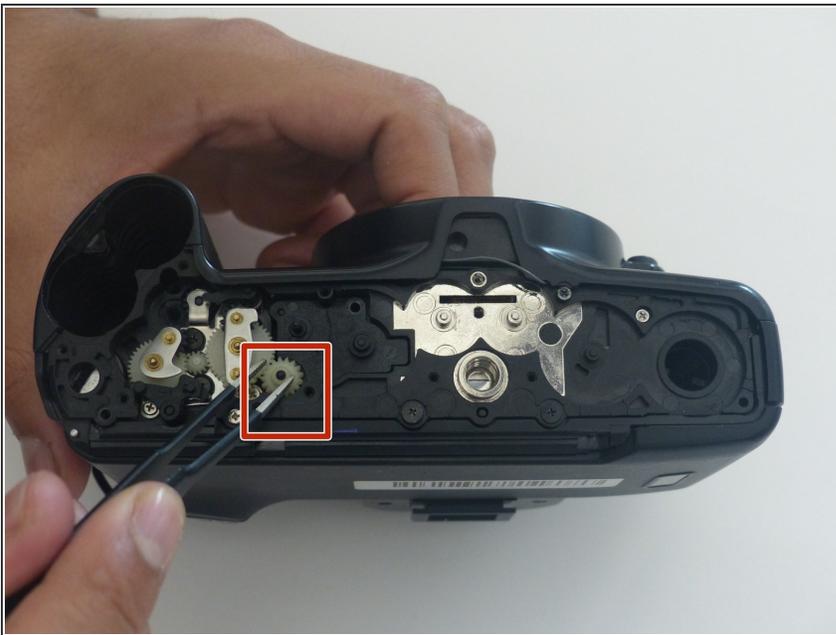


- Remove the gear with tweezers or fingers.

Step 9

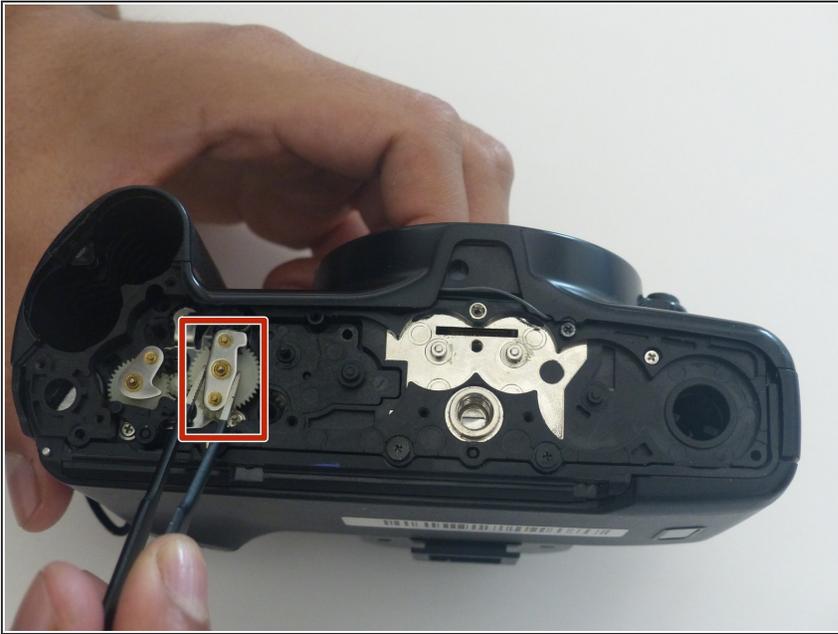


- Remove the part indicated in the picture with tweezers or fingers.

Step 10

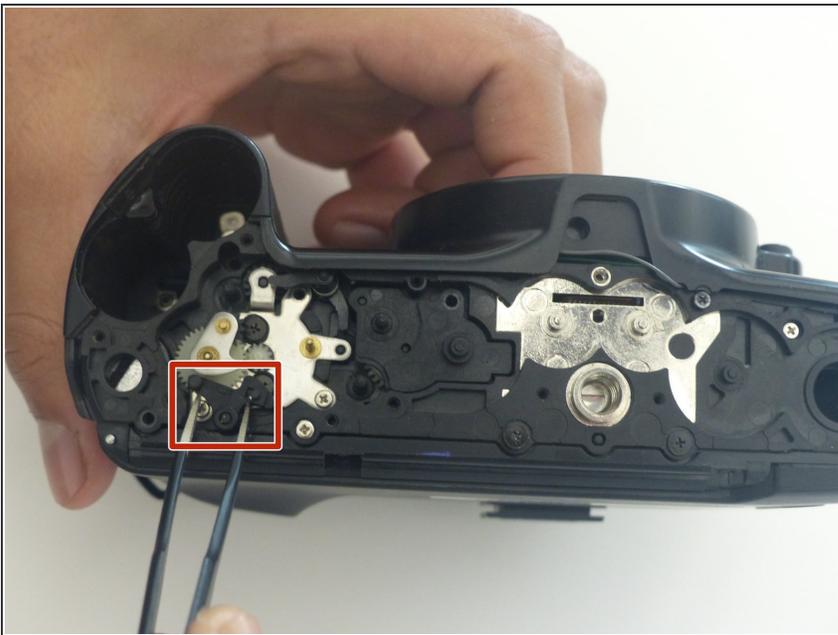

- Remove the part indicated in the picture with tweezers or fingers.

Step 11

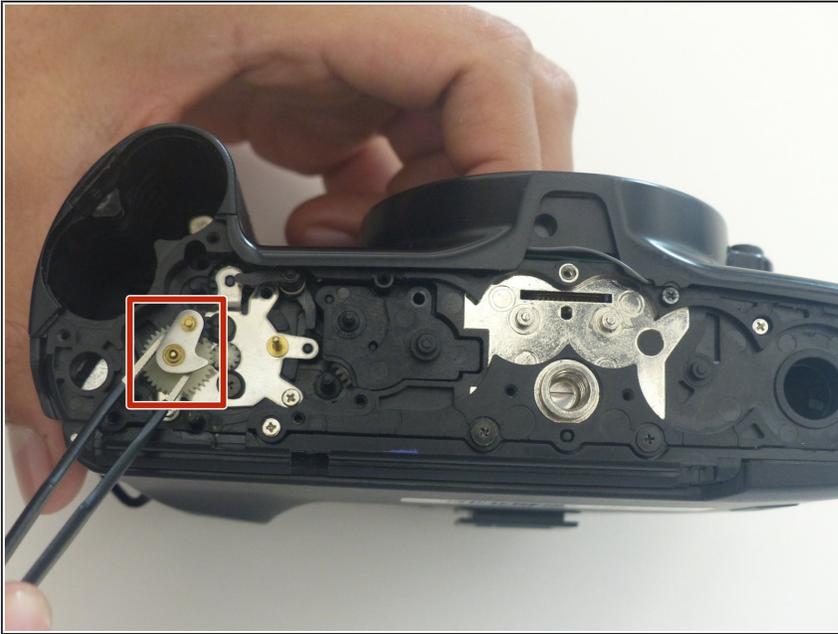

- Remove the part indicated in the picture with tweezers or fingers.

Step 12



- Remove two 3mm Phillips #000 screws.
- Remove two silver 3.5mm Phillips #000 screws.

Step 13



- Remove the second silver plate using tweezers or fingers.

To reassemble your device, follow these instructions in reverse order.