



# Canon EOS Rebel XS 35mm Film Replacement

This guide explains the simple process of replacing the old film with new film in the Canon EOS Rebel XS 35mm camera, released by Canon of Japan in 1993.

Written By: [christiansvezia](#)



## INTRODUCTION

This is the procedure for replacing the film that is to be used by the camera. This is a necessary procedure because film is what allows pictures to be taken! And eventually, the film runs out. Assuming you have bought a new film canister with fresh film in it, this guide will show you the simple procedure of changing out the old film for the new film.

P.S. Make sure to properly dispose of the old film!

## Step 1 — Film



- Push up on the switch on the right side of the camera (if you're facing the front of the camera) until you hear the clicking sound of the back latch opening.

## Step 2



- Fully open the back latch.

### Step 3



- Locate the film on the left side of the camera (if you're facing the back of the camera) and, like a battery, start pulling out the top portion of the film canister.

### Step 4



- Completely pull out the old film (make sure to properly dispose of film!)

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-04-04 04:49:59 AM (MST).

