




# Canon FS30 LCD Screen Replacement

This guide will show how to remove the LCD screen of a Canon FS30 camcorder using no tools.

Written By: Emanuel Keller

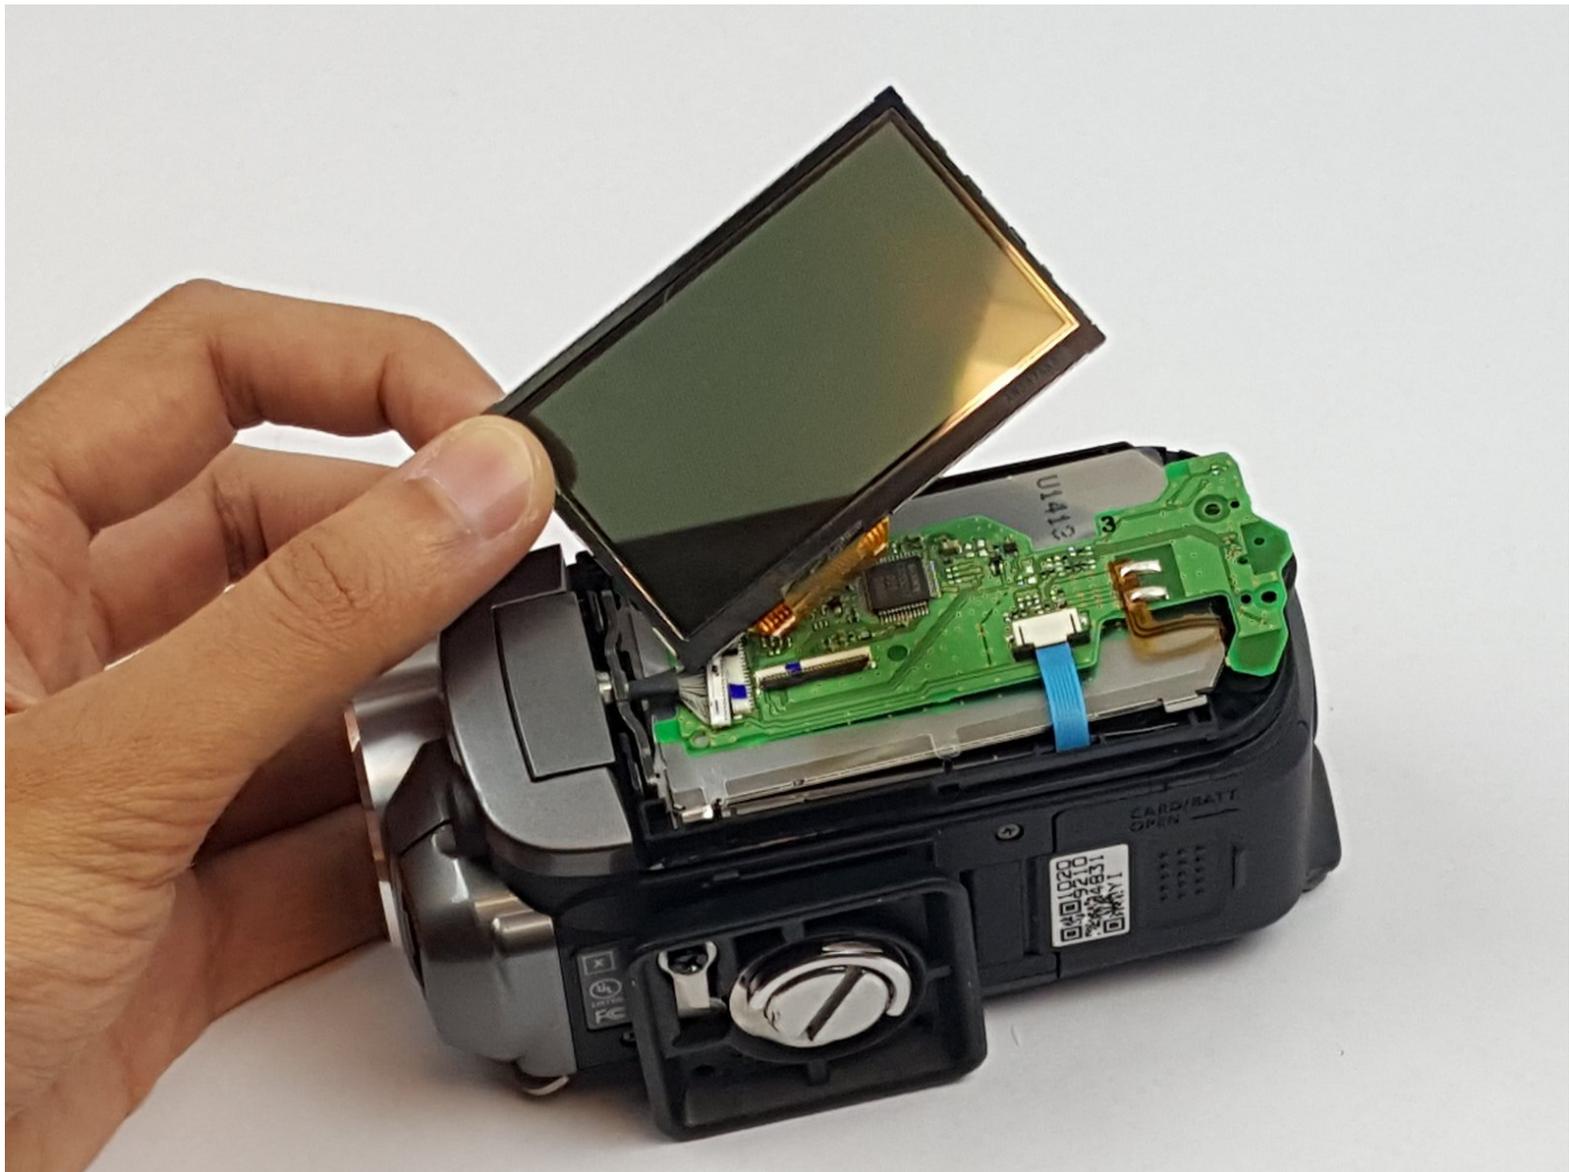

---

## INTRODUCTION

If your camcorder LCD screen is scratched, cracked or defective in any way, it will have to be replaced. This guide requires some tools and time.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — LCD Screen



- Locate battery compartment cover. Turn the device over and locate the battery compartment cover.
- Place a finger or thumb on the textured section of the battery compartment cover and push forward until you hear a click. Then lift the battery compartment cover.

## Step 2



- Locate the grey latch and move it aside. The battery is spring loaded and will pop up.
- Remove the battery.

## Step 3





- Using the Phillips #000, remove the two screws on the LCD panel.
- Using the Phillips #000, remove two more screws near the LCD panel swivel point.

## Step 4





- Use the plastic opening tool to remove the plastic cover from the LCD panel.

## Step 5

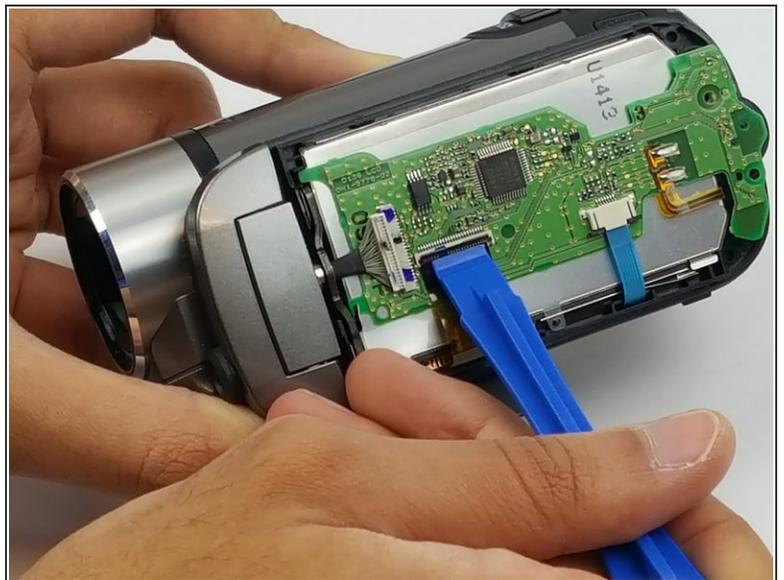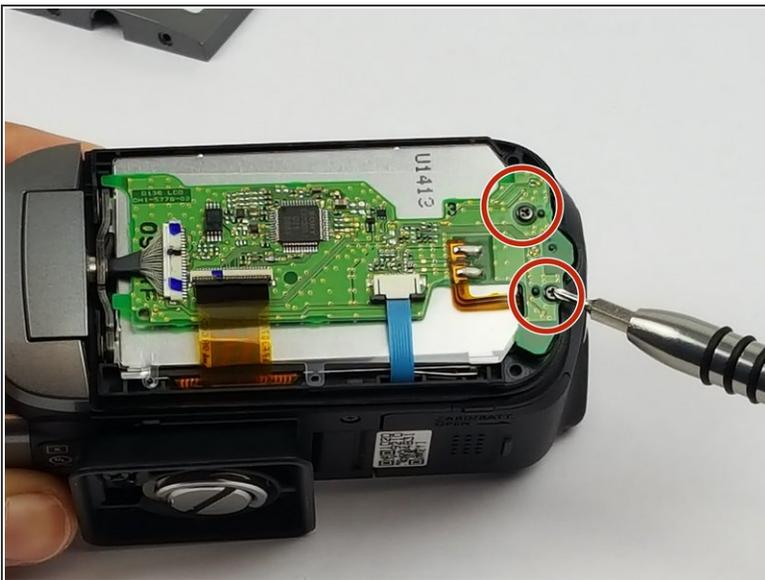

- Locate and remove two screws on the logic board.
- Use the plastic opening tool to open the ZIF (zero insertion force) connector. The LCD ribbon should pop up.

## Step 6

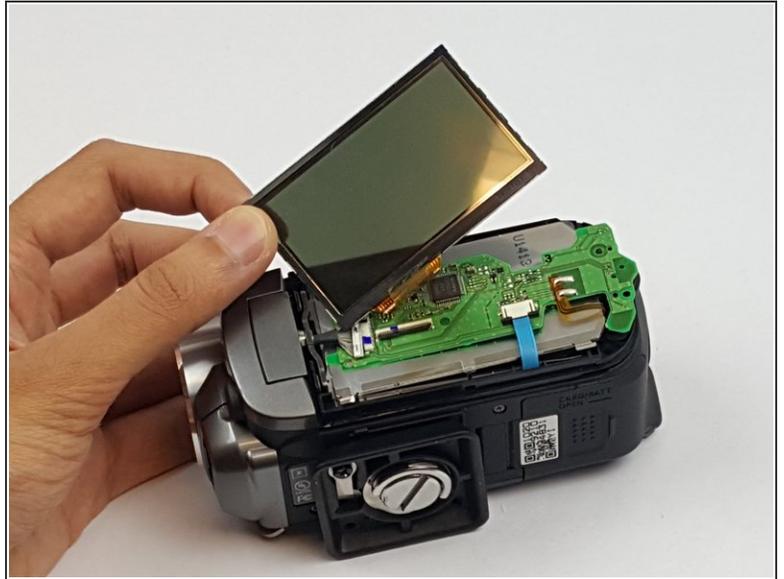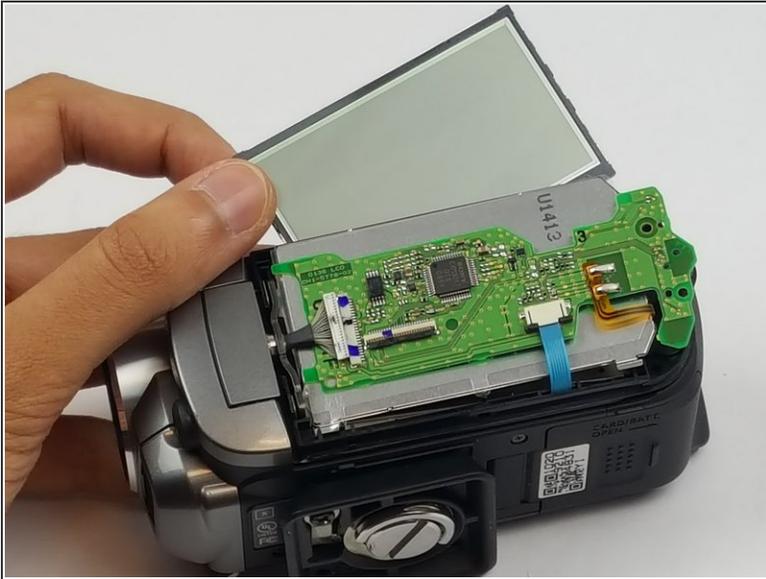

- Locate the LCD screen underneath the logic board and slide it out.

To reassemble your device, follow these instructions in reverse order.