



Canon PowerShot A590 IS Memory Card Replacement

This guide will instruct the user on how to replace the memory card in the Canon A590 IS.

Written By: Zach



INTRODUCTION

This guide will instruct the user on how to open the bottom hatch to access the batteries and memory card, and to remove and replace the memory card.


Step 1 — Open the Battery Hatch



 Be gentle with the hatch, it is fragile.

- *See [battery replacement](#) guide for help opening the hatch.

Step 2 — Locate Memory Card

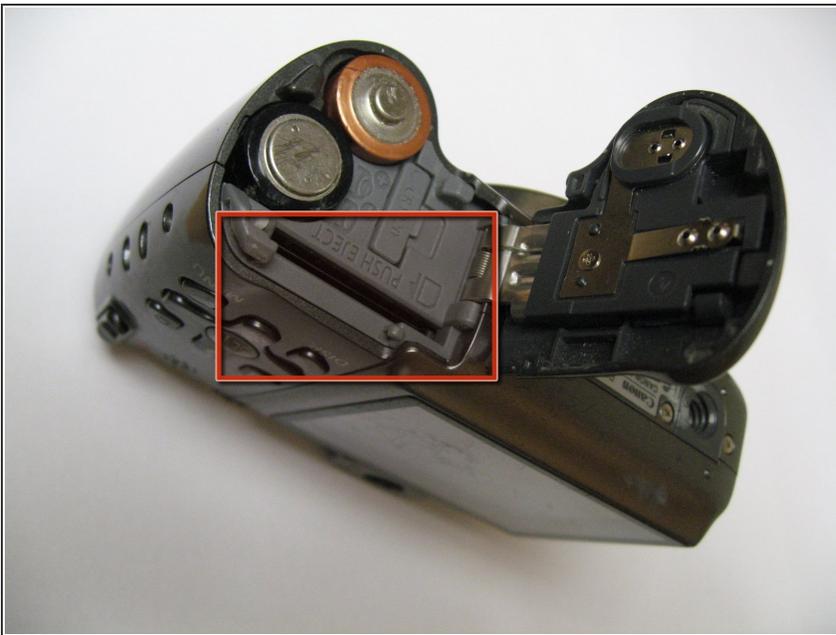

- The memory card slot is shown here in the red rectangle.

Step 3 — Remove Memory Card



- To eject your memory card, simply press it into the camera gently, and it will spring out.
- After it has been released from the camera, just pull it out.

Step 4 — Replace Memory Card



- To replace the memory card, make sure it is oriented with the label facing towards the front of the

camera, with the contacts going in first, facing the back of the camera.

- Push the card into the slot gently until you hear a 'click'. It will then be locked into place in the camera.

To reassemble your device, follow these instructions in reverse order.