



# Canon PowerShot A95 Viewfinder Replacement

Step by step instructions on repairing the viewfinder of the Canon PowerShot A95.

Written By: Elizabeth Kisner



---

## INTRODUCTION

This guide will allow you to repair or replace the viewfinder of the Canon PowerShot A95.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

*A magnetic screwdriver is preferable but not necessary.*

- [Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Viewfinder



- Locate the black “BATT OPEN” button on the underside of the camera.
- Slide the black “BATT OPEN” button to the right.
- Remove four AA batteries from the device.

## Step 2



- Locate and remove three screws on the underside of the camera (3x small Phillips head).
  - Keep all screws separated by step and in a place where they will not be lost.
- ⓘ Tip: a jewelry tray can be helpful for keeping all the screws secure and separated.

### Step 3




- Locate and remove two screws on the same side of the camera as the marked A/V port (2x small Phillips head).

### Step 4



- Using the blue plastic opening tool, remove the plastic covering you just removed screws from on the left side of camera.
- Gently pull up around edges until the plastic flap inside is pulled out and the piece swings upward (piece should pull free).

## Step 5

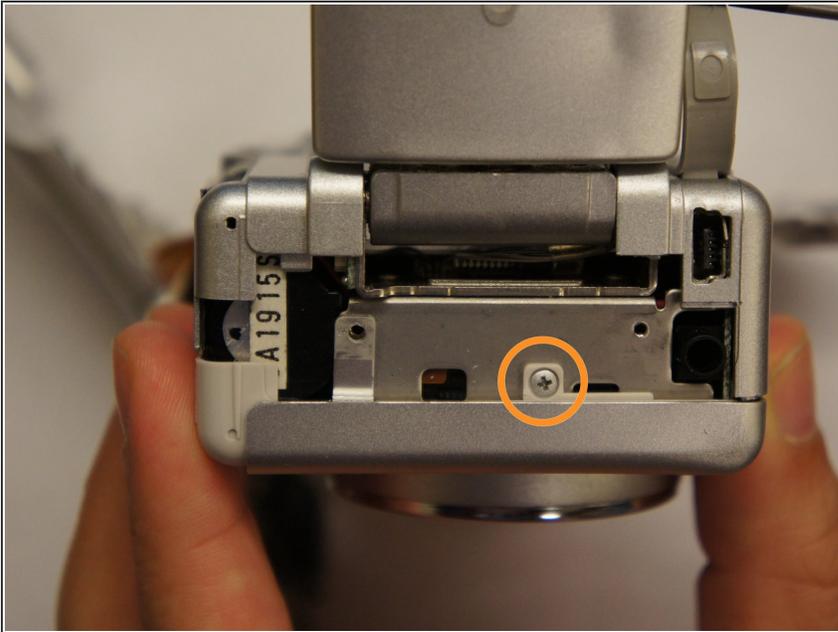


- Remove indicated screw holding front of camera in place.

## Step 6




- Push against the memory card cover in order to pull it outward toward you to reveal a screw underneath.
- Remove this screw (Phillips head).

## Step 7

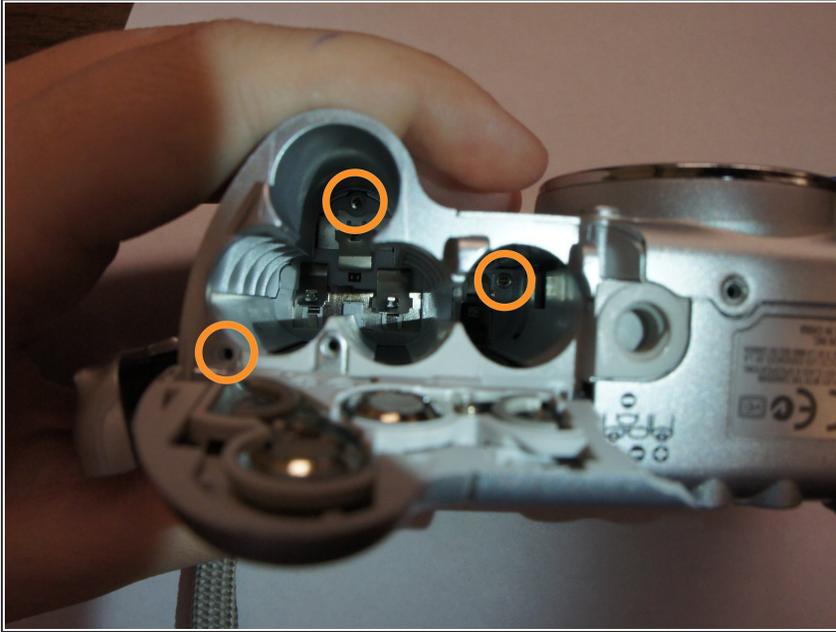


- Re-open the battery cover. Locate and remove the three screws under the battery cover (3x small, long Phillips head).
- Tip: using a magnetic screwdriver is very helpful, as the screws are difficult to reach.

## Step 8

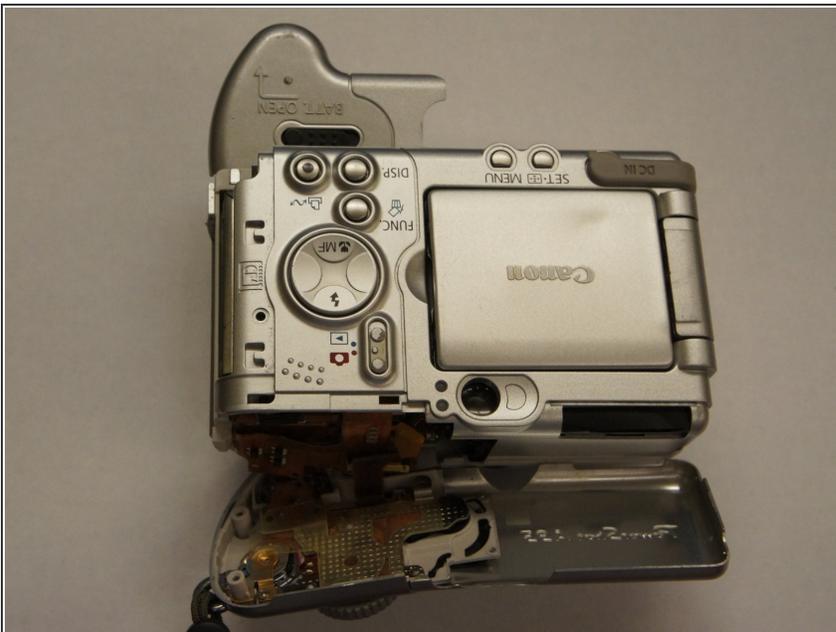


- Locate and lift the shutter button, speaker, and option wheel from the top of the camera.
- ⚠ Note: DO NOT pull too hard as there is a plug connecting the speaker to the camera.
- The memory card cover will pop off in this process.
- ⚠ Note the original location next to the loose pieces of hardware. This piece will remain attached to the device, so do not try to fully detach it.

## Step 9

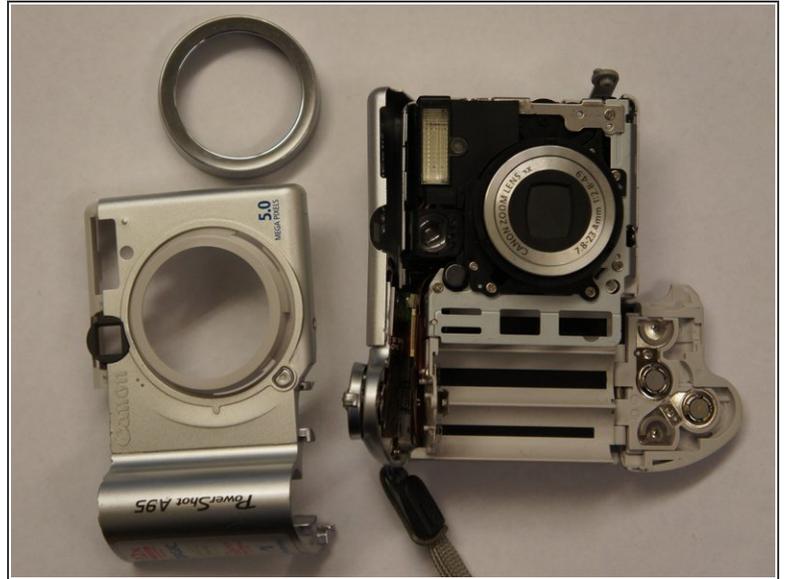

- Locate and press the button on the lower left corner of the lens.
- Separate the back casing from the front casing of the camera.
- Removing the casing may require the use of a spudger.


## Step 10

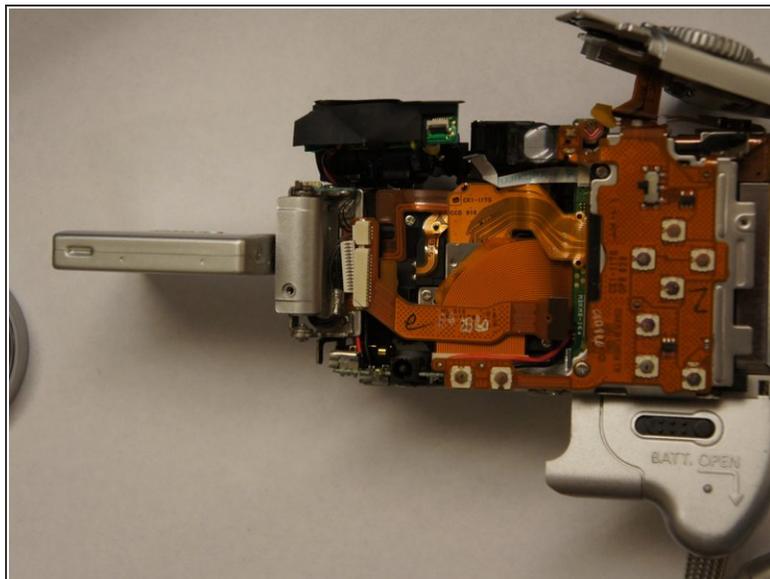

- Twist the LCD screen so it is perpendicular to the camera and snap the back casing off.

⚠ This piece will remain attached to the device, so do not try to fully detach it.

## Step 11

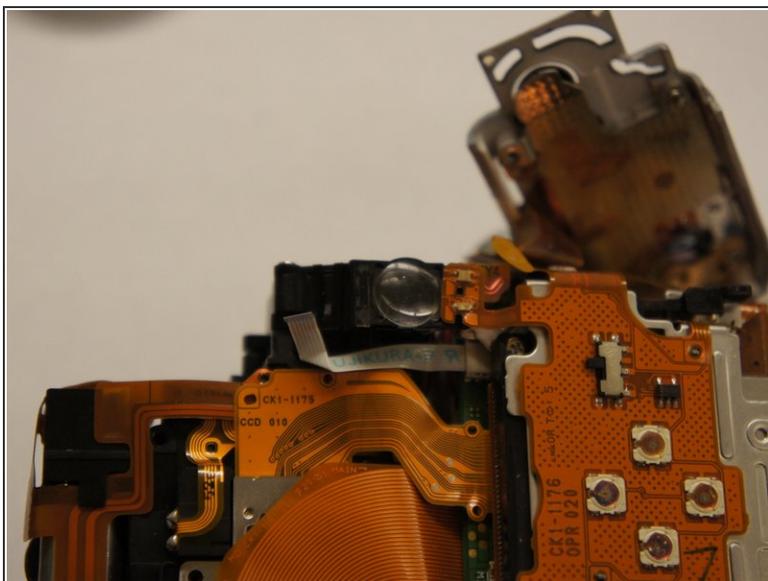

- Carefully jiggle the viewfinder until it comes loose from the camera.

To reassemble your device, follow these instructions in reverse order.