



Casdon Dyson Ball Battery Replacement

Guide of how to remove the batteries from the Casdon Dyson Ball.

Written By: Seldon Price



INTRODUCTION

By using the PH00 screwdriver, this guide will show how to remove the batteries from the Casdon Dyson Ball.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Remove one 9.2mm (0.36 in) screw using the PH00 screwdriver.
- Remove the battery cover by pulling it away from the vacuum once the 9.2mm (0.36 in) screw is removed.

Step 2



- Remove batteries from the vacuum by pulling them out and away from the vacuum.

To reassemble your device, follow these instructions in reverse order.