




Cineyo BT-03 Device Page Button Replacement

This guide will allow you to replace the button(s) of your device.

Written By: Rene Klopf

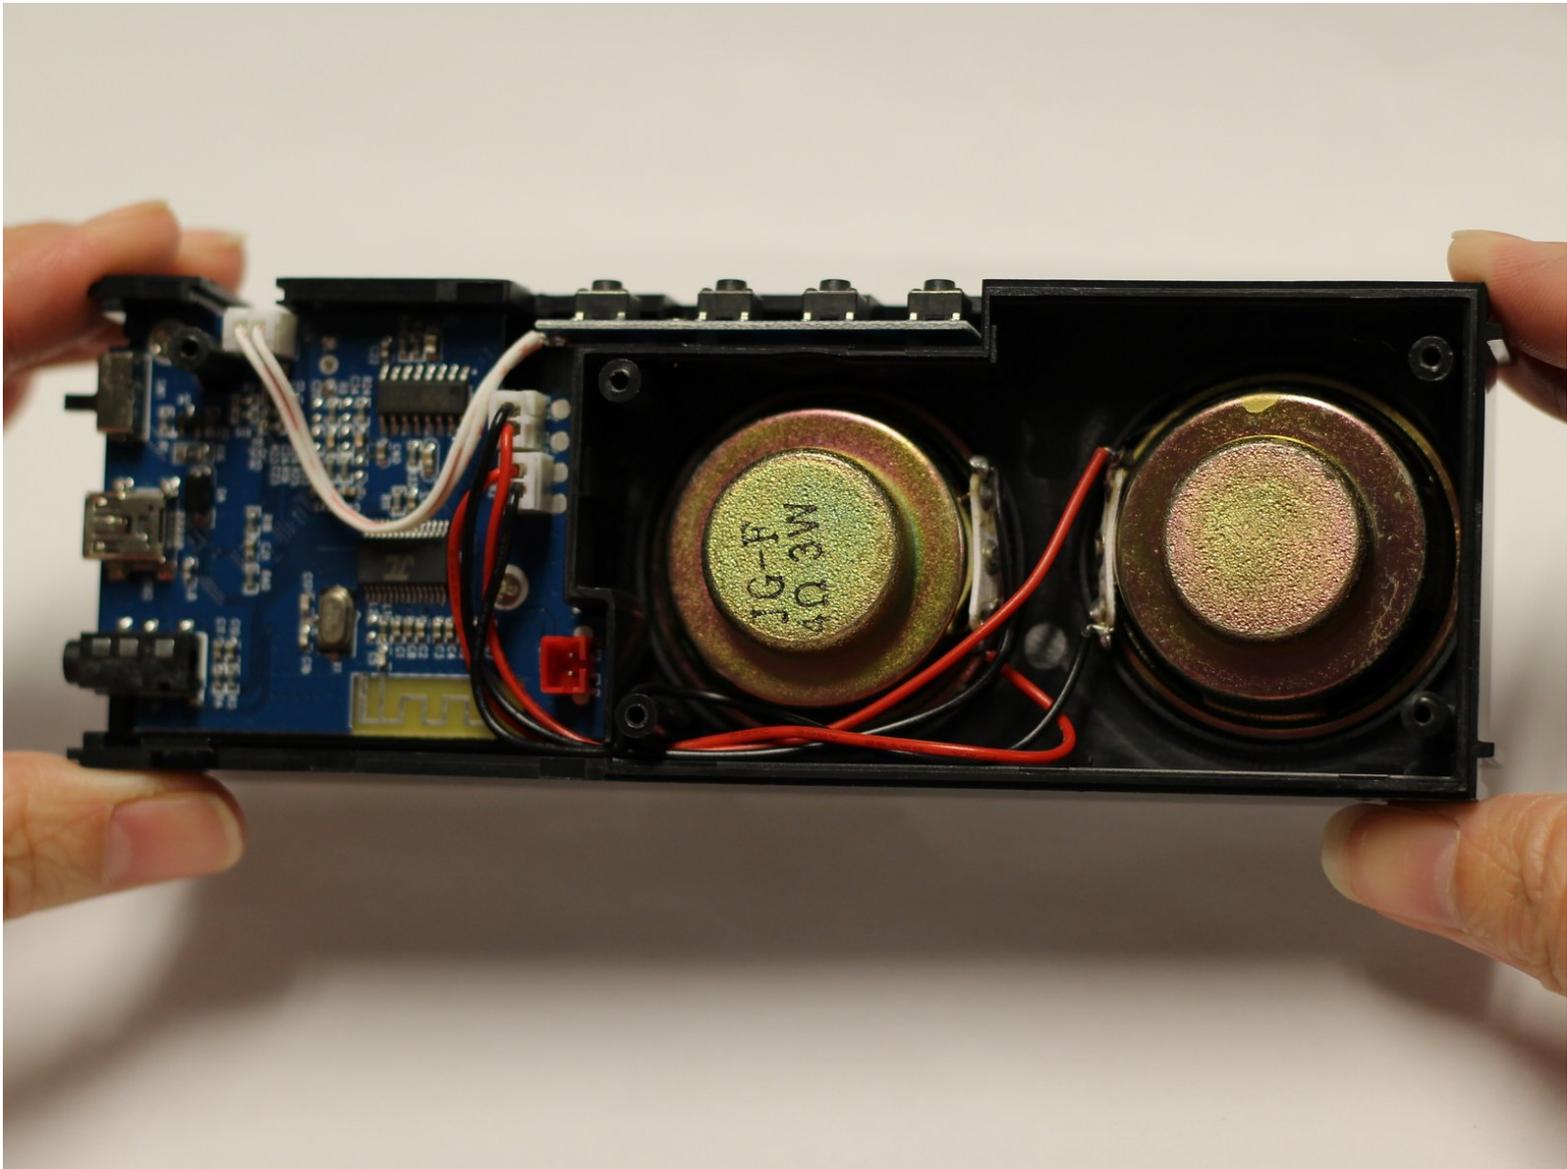

INTRODUCTION

This guide will take you step by step through the steps of replacing your devices buttons.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Portable Soldering Iron](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:


- [Button](#) (1)

Step 1 — Cineyo BT-03 Device Disassembly



- Remove the top (button side) rubber cover using your hands.

Step 2

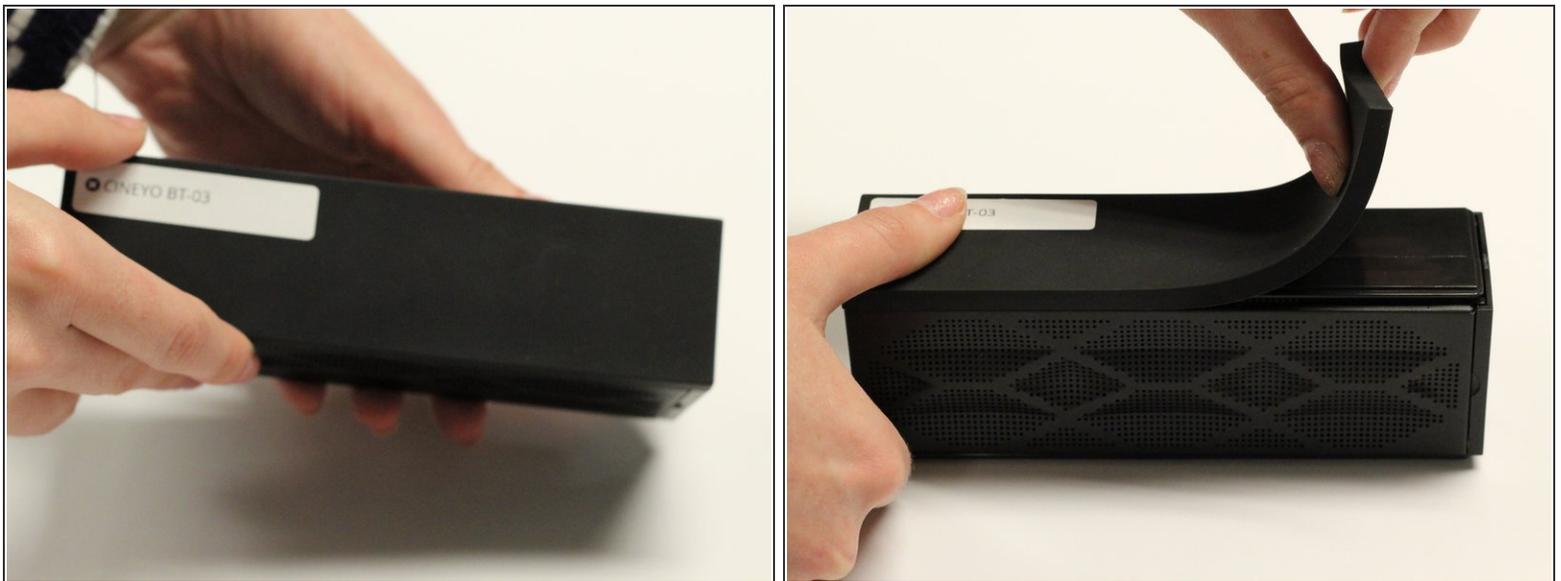


- Flip over the device and remove the bottom rubber cover using your hands.

Step 3



- Using your hands, pull off the plastic side cover (on the side with the audio jack) using the indented tab. The indented tab has been highlighted in the picture.

Step 4

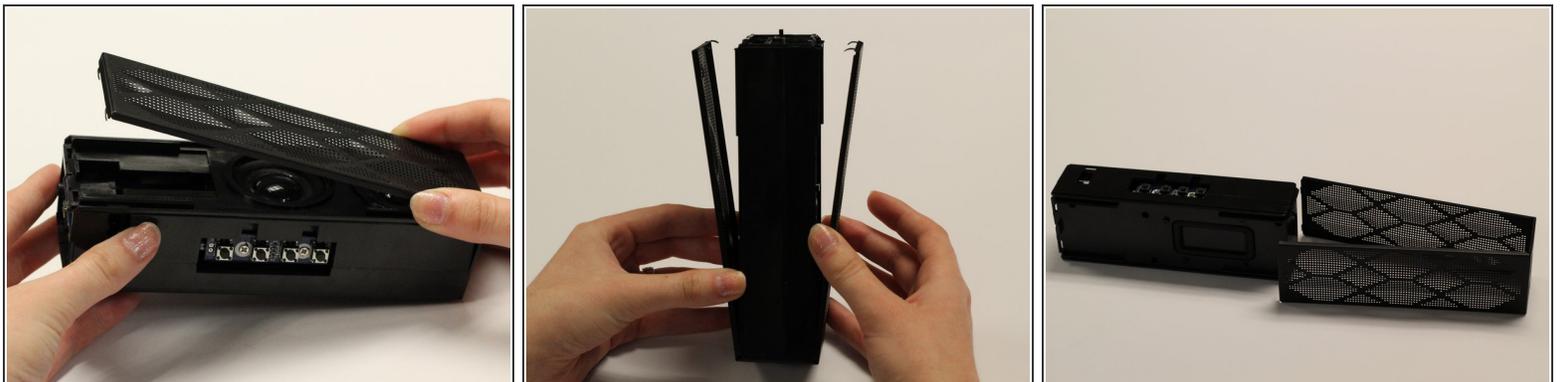

- Detach the plastic speaker cover on both the front and back sides. Then slide the cover off of the device.


i The cover should remain as one solid piece.

Step 5





- Remove the five 1 cm screws on the back side (opposite of the speakers) of the device using a Phillips #1 screwdriver.

Step 6

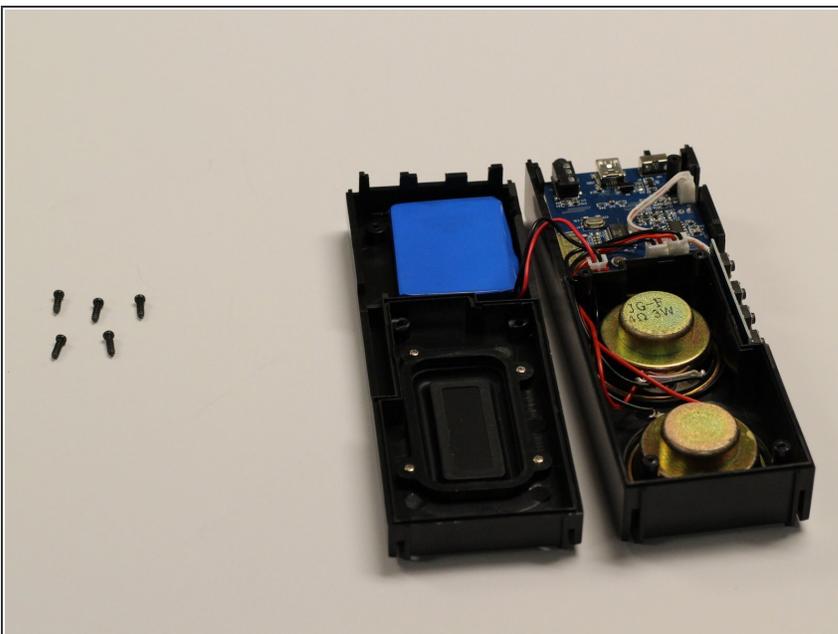



- Gently pull apart the two sections of the device.

Step 7 — Button

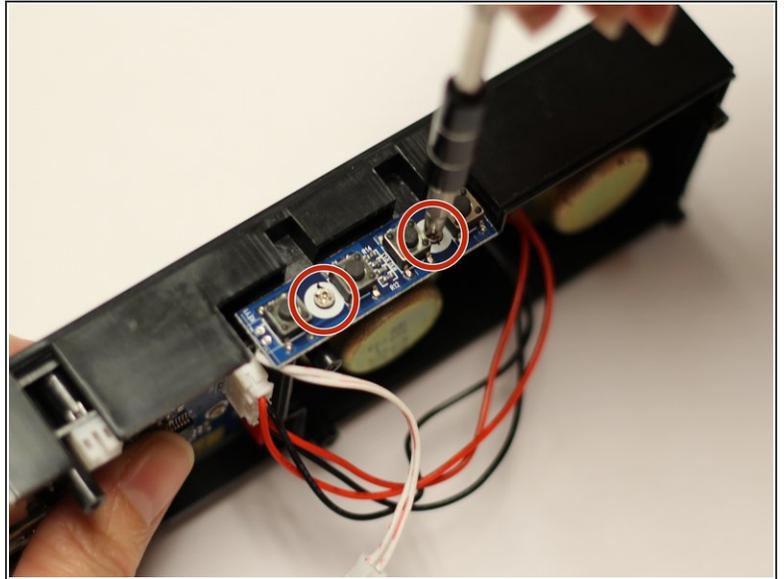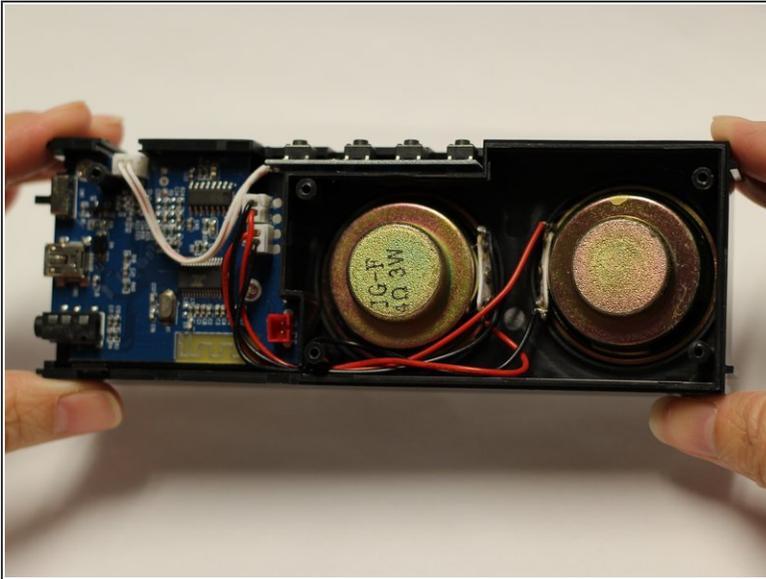


- With a Phillips #1 screwdriver, remove the two 5mm screws which attach the button mount to the plastic casing of the device.

Step 8

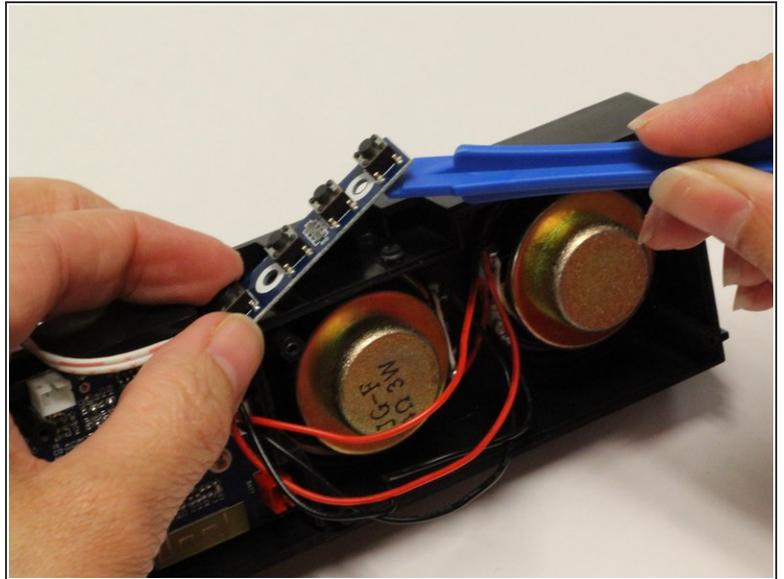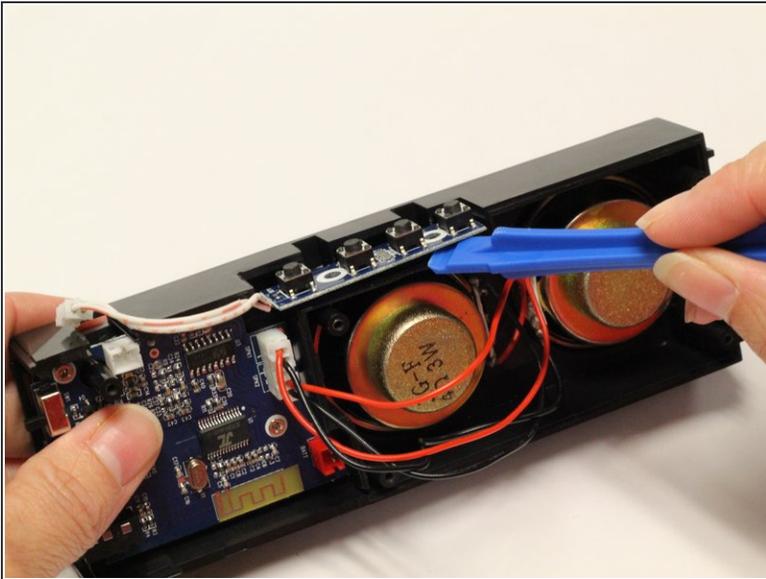

- Using a plastic opening tool, pry the button mount off of the plastic casing of the device.

Step 9

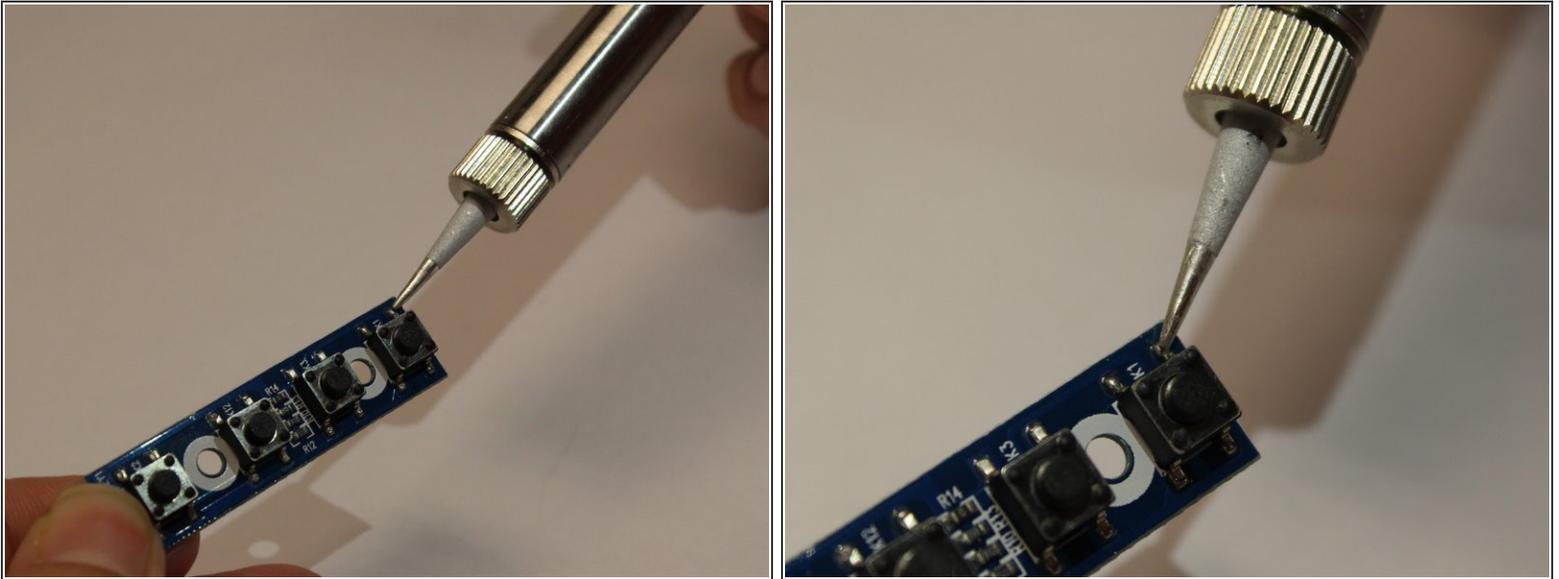

- Using a soldering iron and iFixit's [Soldering Guide](#), remove the individual buttons.

To reassemble your device, follow these instructions in reverse order.