



# Coolpix S01 The power button won't turn on Replacement

This guide will display steps of how to successfully replace the power button of this Nikon camera.

Written By: Rieana Hayes



---

## INTRODUCTION

This guide will show you how to remove the power button in order to replace it.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — The power button won't turn on



- First make sure the camera is powered off.
- Then take the Hex and PH000 bit to remove a 2mm screw on the left side of the camera.
- Next, remove the 2mm screw on the right side of the camera.


## Step 2

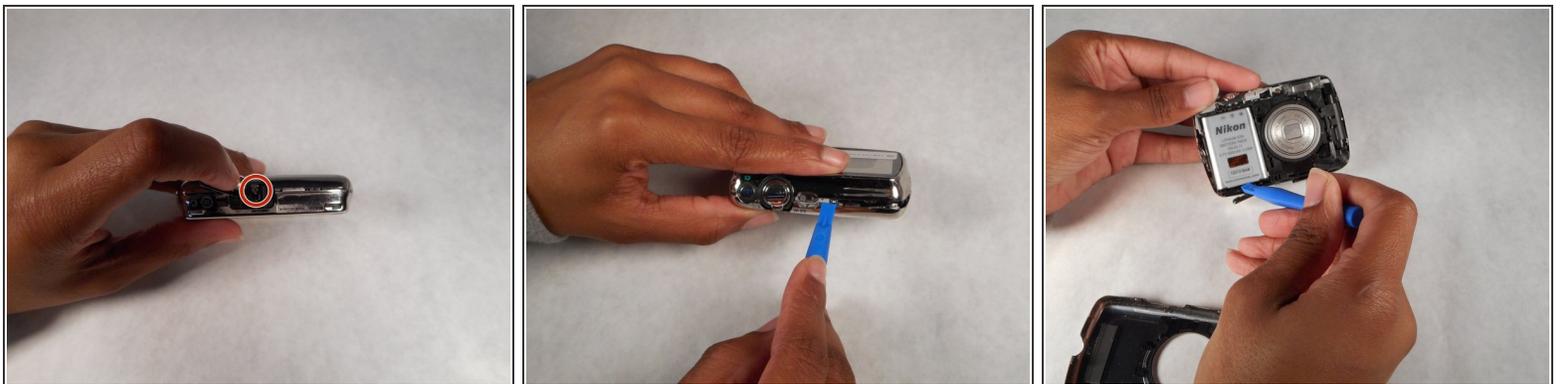

- Remove the 3mm screw from the bottom of the camera.
- Once the 2mm and 3mm screws are removed, use the plastic opening tool to lift the sides of the camera and reveal the inside of the camera.


 Be sure to remove the battery before continuing to repair.

### Step 3

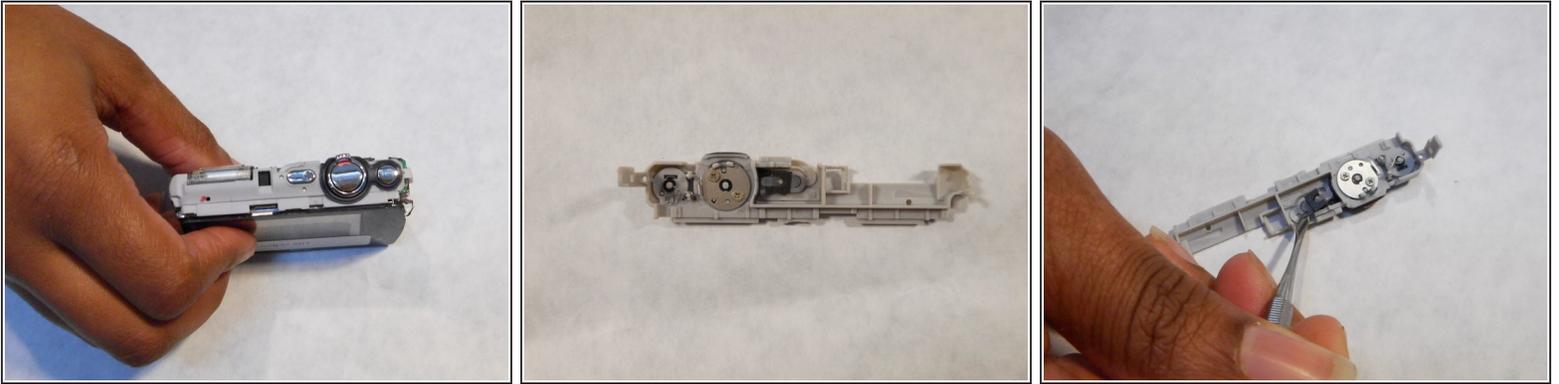

- After the battery is out, remove the gray button bar from the top of the camera with the smallest opening tool.
- With the gray bar detached from the camera, turn it upside down. Using the hex and the J000 bit remove the two 1mm screws.
- Take the needle nose tweezers to remove the power button.

### Step 4

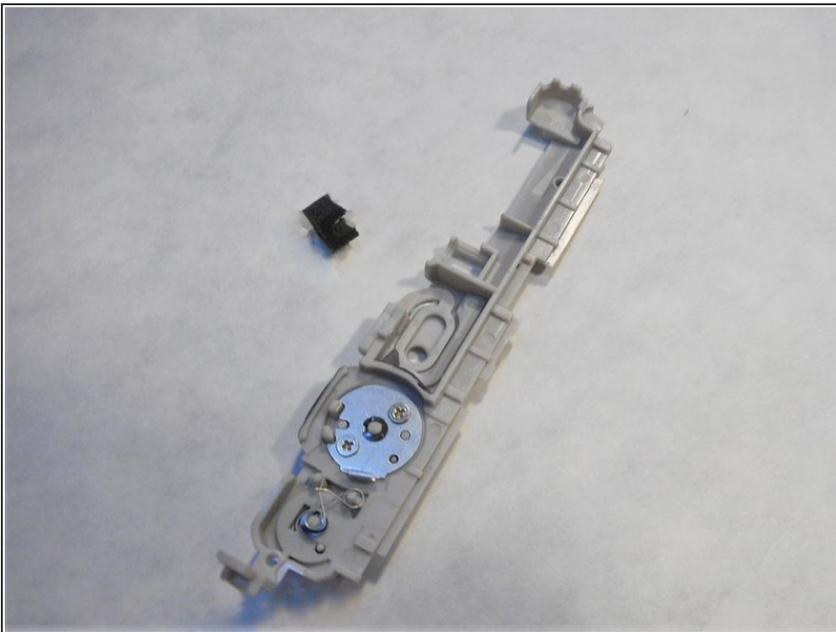

- You have successfully removed the power button and can replace it if needed.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-19 10:12:29 AM (MST).

