



# Cuisinart DFP-14BCN Back Casing Replacement

Written By: Sonya Dick



 **TOOLS:**

- Phillips #2 Screwdriver (1)
-

## Step 1 — Bowl



- ⓘ Unplug your food processor before starting any disassembly.
- Remove the small pusher by rotating it clockwise and lifting up.

## Step 2



- Remove the large pusher by grabbing its sides and pulling up.
- ⓘ There may be a clicking sound from the safety feature being disengaged in this step.

### Step 3



- Remove the lid from the bowl by turning it clockwise and lifting.

### Step 4




- Take out the blades by grabbing the plastic center piece and lifting up.
- ⚠** Avoid contact with blades as they are extremely sharp.

## Step 5



- Position the handle of the bowl so that it is on your left.
- Grab the handle and push clockwise. Lift up the bowl to remove it.

## Step 6 — Back Casing

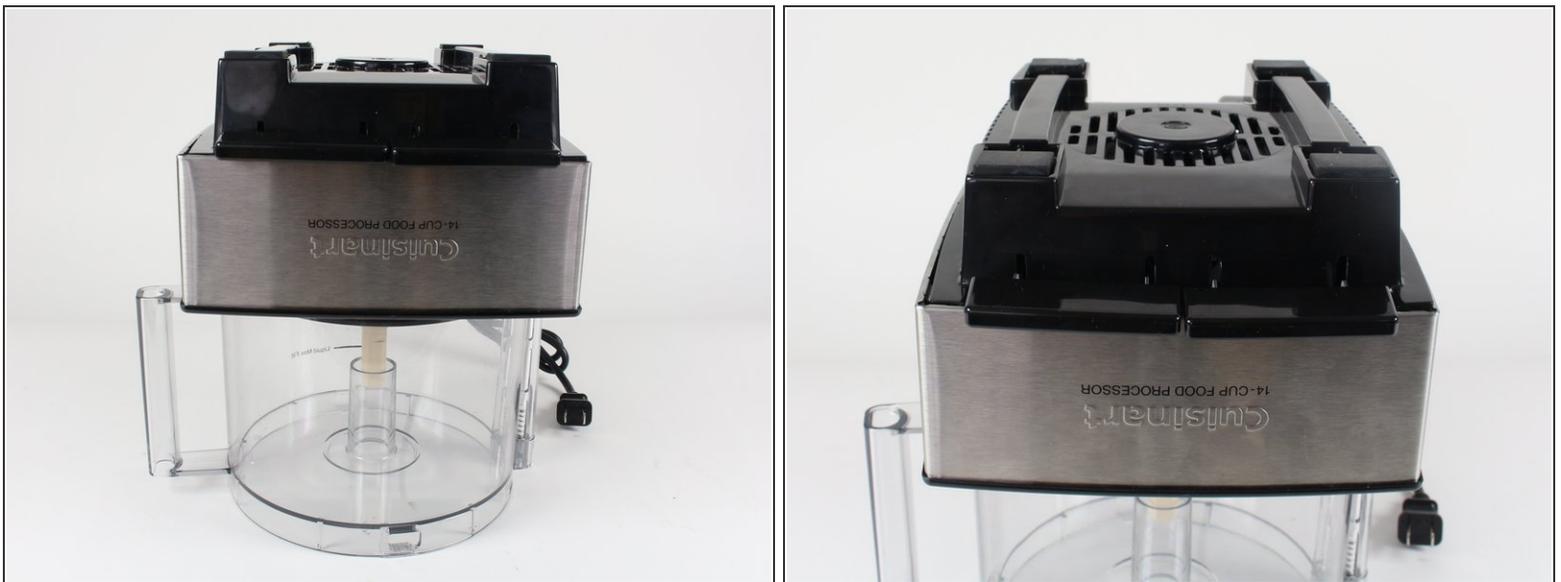



- Turn the food processor's base upside down by lifting it up and turning it over.
- Position the base so that the on and pulse buttons are facing you.
- Place the base on top of the food processor's bowl to keep the base from wobbling while you work on it.

## Step 7





- Remove the two 13.0mm screws that hold down the casing with a Phillips #2 screwdriver.

## Step 8

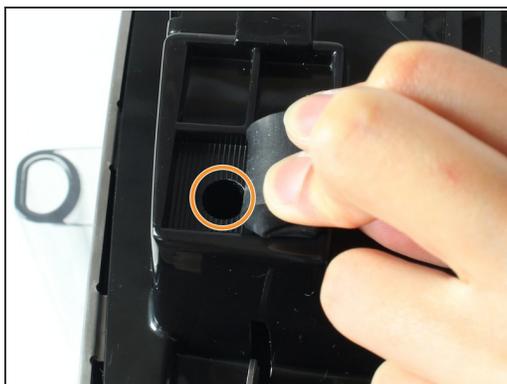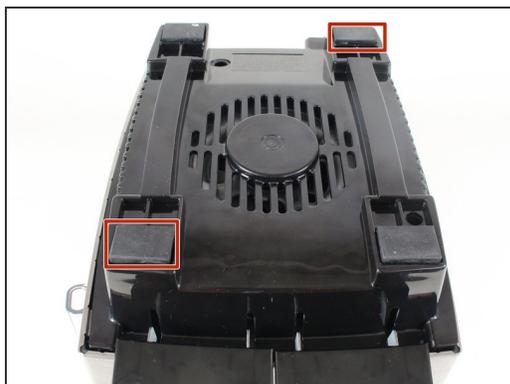

- Lift up the front left and the back right rubber feet by pulling back the rubber with your fingers.
- Remove the 13.0mm screw under each rubber foot with a Phillips #2 screwdriver.

## Step 9

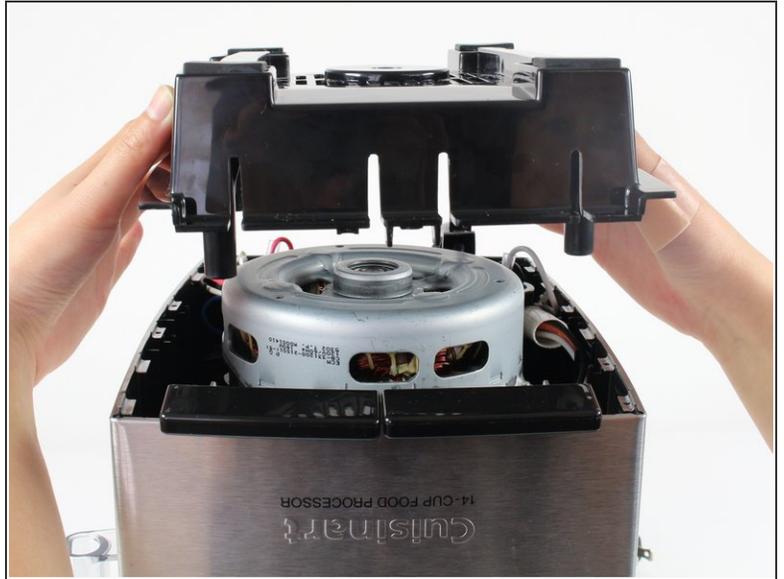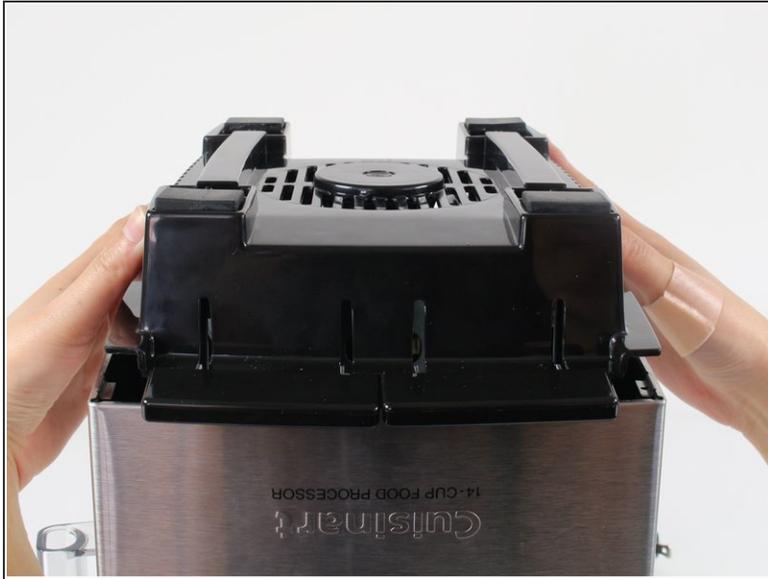

- Lift off the back casing by raising it upward.

To reassemble your device, follow these instructions in reverse order.