


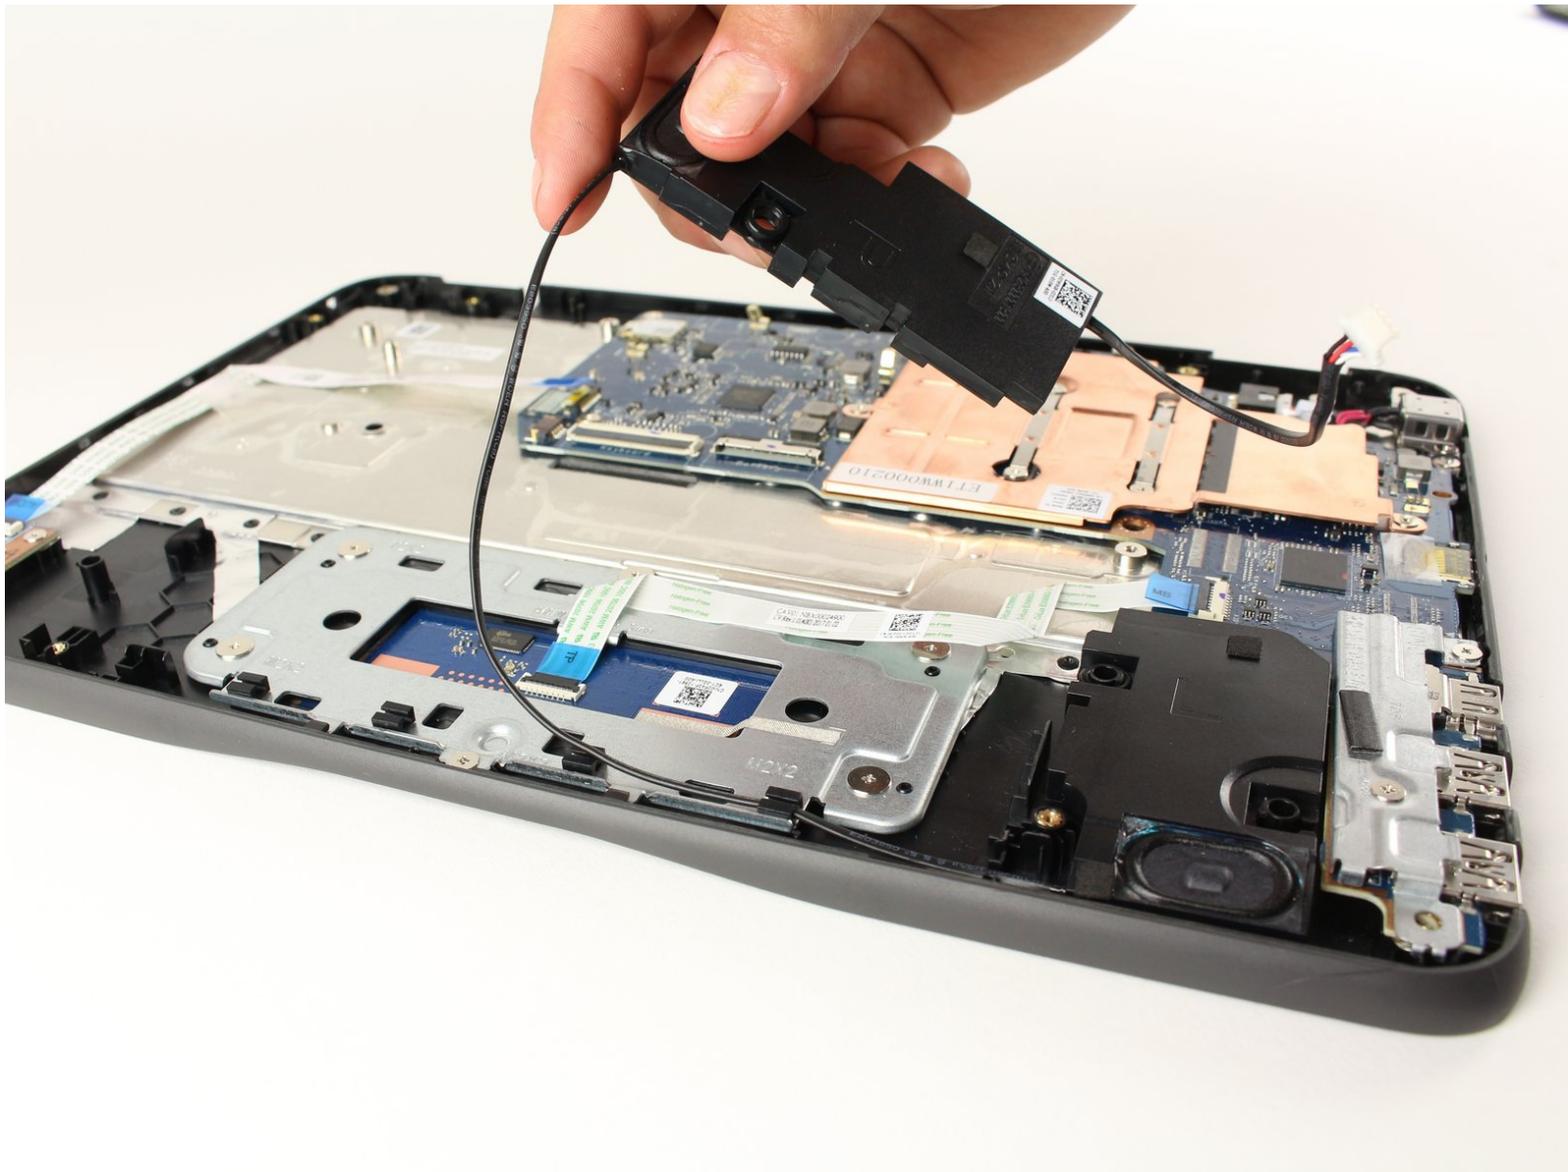

Dell Chromebook 11 3180 Speakers Replacement

This guide will show you how to remove and replace the speakers of your Dell Chromebook 11 3180.

Written By: George Erie



INTRODUCTION

This guide will show you how to replace the speakers of your Chromebook. This is a very straightforward and easy repair.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [Dell Chromebook 11 3180 Speaker Set](#) (1)

Step 1 — Back Cover



- Set your laptop upside down on your work space.

Step 2



- Using tweezers, remove the circular stickers that are covering the two screws near the middle of the back cover. Stick them to the laptop next to the screws.

Step 3



- Using a Phillips #0 screwdriver, loosen all seven 2.5mm screws on the back cover of the device.
- ⓘ These screws will stay attached to the back cover, so just loosen them until they rattle around.

Step 4




- Using a plastic opening tool, begin to separate the back cover from the body of the computer.
- ⓘ If you have trouble prying a particular part of the back cover off, make sure that the nearest screws are fully loosened.

Step 5




- Using your hands, pull the back cover fully off of the body of the computer.

Step 6 — Speakers

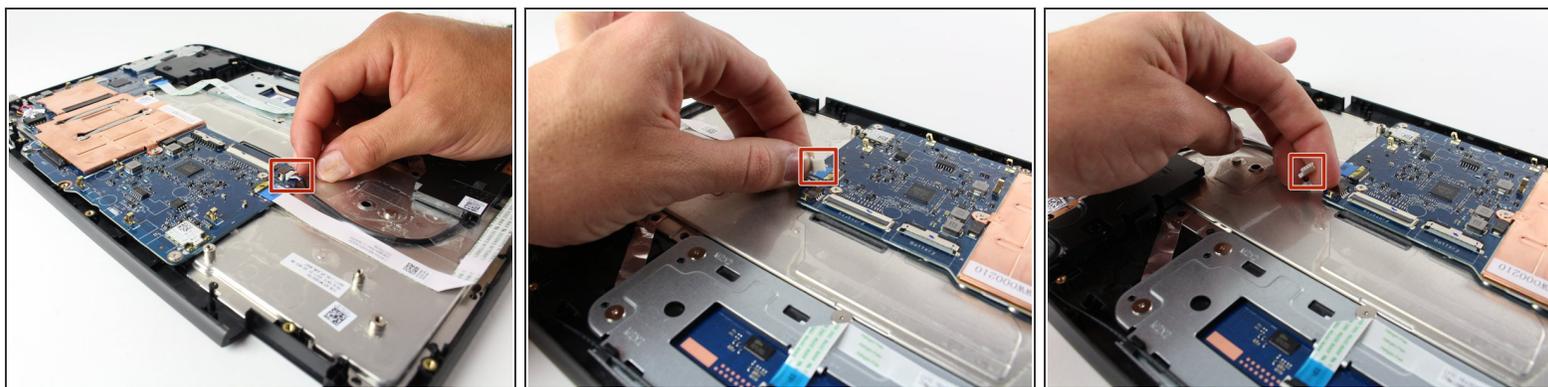

- Locate and gently pull the wire harness (small plastic box with wires leading to black audio speakers) directly out of the connector on the motherboard.
- ⓘ Some components are not shown in pictures for simplicity. There is no need to remove any of the missing components to successfully remove the speakers.

Step 7

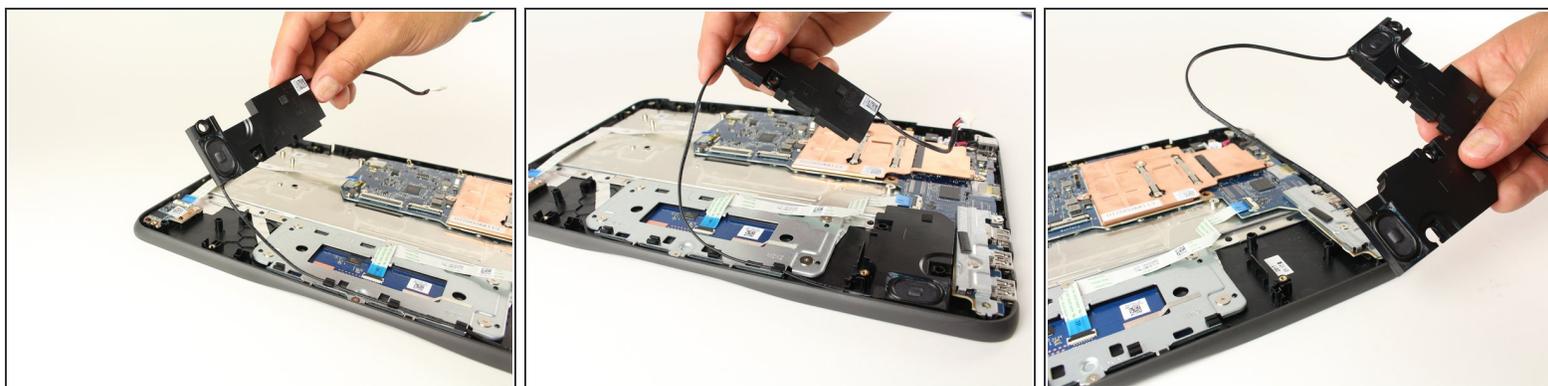

- Remove any existing tape attached to the audio wire you unplugged in the previous step.
- Gently lift and remove speakers.
- ⓘ No screws should be removed

To reassemble your device, follow these instructions in reverse order.