



Dell Chromebook 3180 Bottom Cover / Shell Replacement

This guide will show how to remove the bottom cover/shell of a Dell Chromebook 3180.

Written By: Jon



INTRODUCTION

This guide will show how to remove the bottom cover / shell of a Dell Chromebook 3180.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Plastic blade](#) (1)



PARTS:

- [Dell Chromebook 11 3180 Bottom Cover](#) (1)

Step 1 — Remove Bottom Cover / Shell



- Remove the 7 screws from the back cover with a Phillips #0 screwdriver
- Once all 7 screws have been removed, you can start to pry apart the back cover with your Plastic Blade or your fingers. (See pic)

To reassemble your device, follow these instructions in reverse order.