


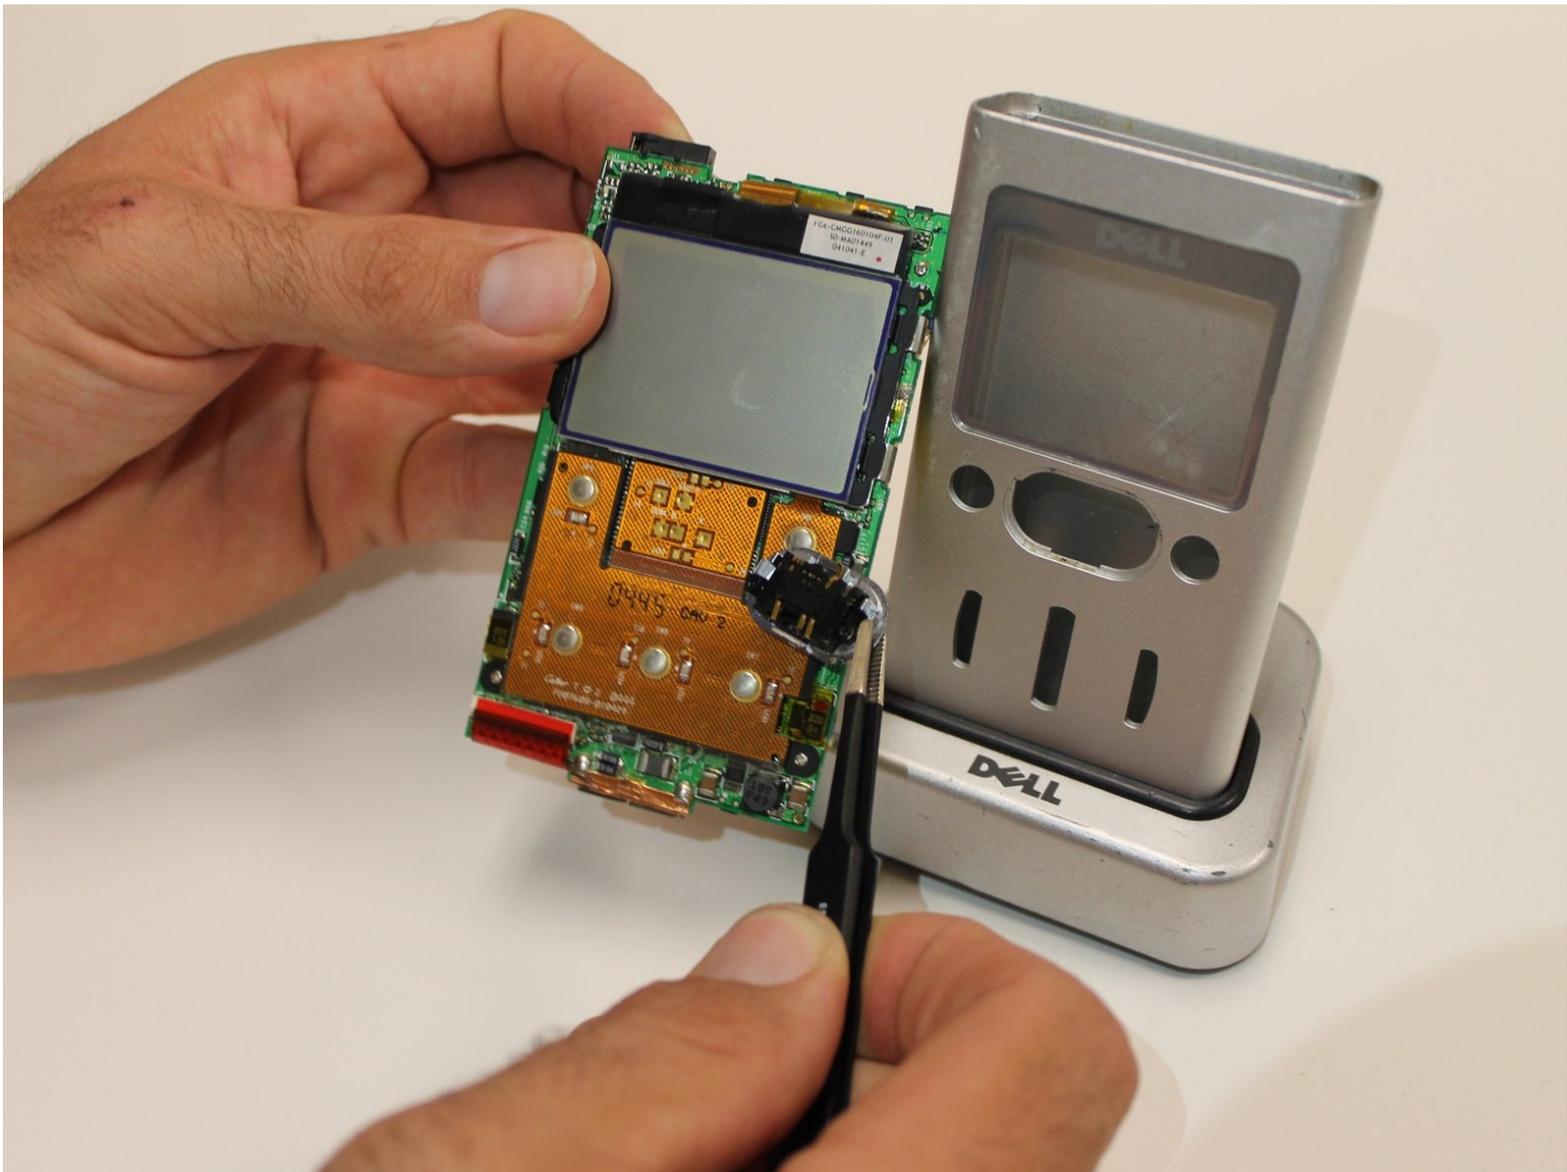

Dell DJ Screen Replacement

This guide will help you determine and fix your screen problems.

Written By: Brittany Abate



INTRODUCTION

If your screen is cracked or not functioning correctly, follow this guide.

TOOLS:

- [iFixit Pro Tech Toolkit](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Screen





- First, disassemble the device, taking off the [top](#) and bottom panels. See the [disassembly](#) guide for further directions.

Step 2



- Slide the internal components out of the case.
- ⓘ Clean all areas of the device, making sure to clear all crevices of dirt and grime. Appropriate materials include: a water dampened cotton cloth, microfiber cloth, cotton swabs, and disposable wipes made for electronic devices.
- If the device has a lot of dirt on the internal components, this may be the cause of the screen malfunction. Reassemble device at this point to see if it has fixed the problem.

Step 3

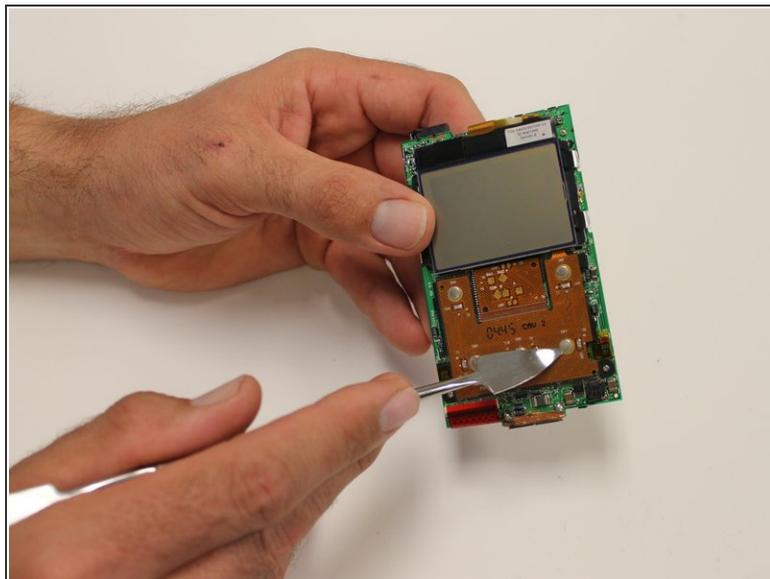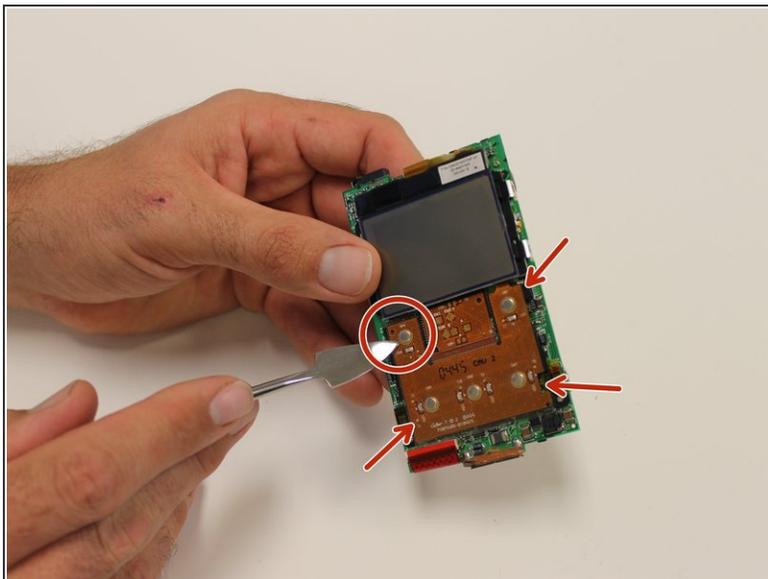

- Disconnect side clips of screen to detach the base of it from the main circuit board, using the metal spudger.


Step 4



- Carefully pull the screen up so that it is only attached at the top side.

⚠ Pull gently to fully detach screen from device.

Step 5

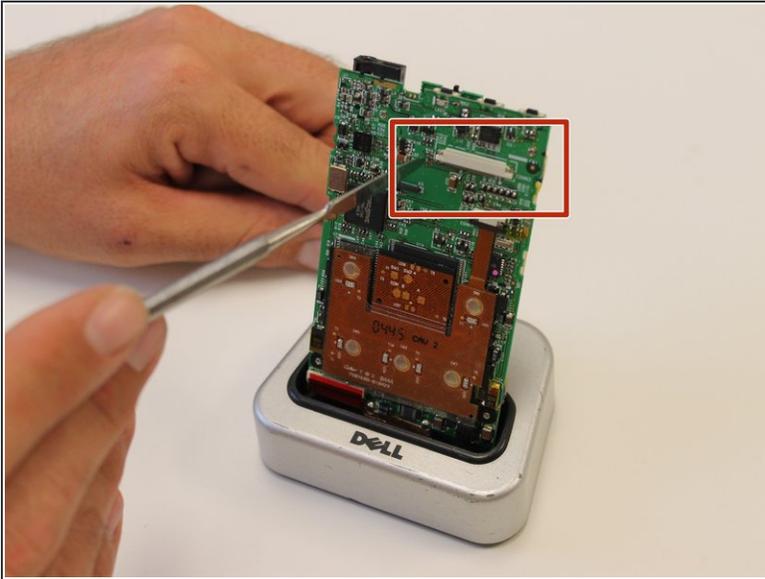

- To replace, purchase a new screen and locate the small silver bar located on the motherboard.
- Insert the end of the new screen into the opening of the silver bar, securing it in there to hold your new screen.
- After the device is assembled, power the device on. The issue should be repaired.
- If the device screen is still defective, an issue with the motherboard or a greater malfunction could be the cause.

To reassemble your device, follow these instructions in reverse order.