



Dell Inspiron 11 i3147 Power Buttons and Volume-Buttons Board Replacement

How to replace the Dell Inspiron 11 i3147 power and volume buttons board.

Written By: Muhammad Erchid



 **TOOLS:**


- Phillips #0 Screwdriver (1)
 - Spudger (1)
-

Step 1 — Power Buttons and Volume-Buttons Board



- Close the computer and turn it over, with the bottom of the computer facing up.

Step 2

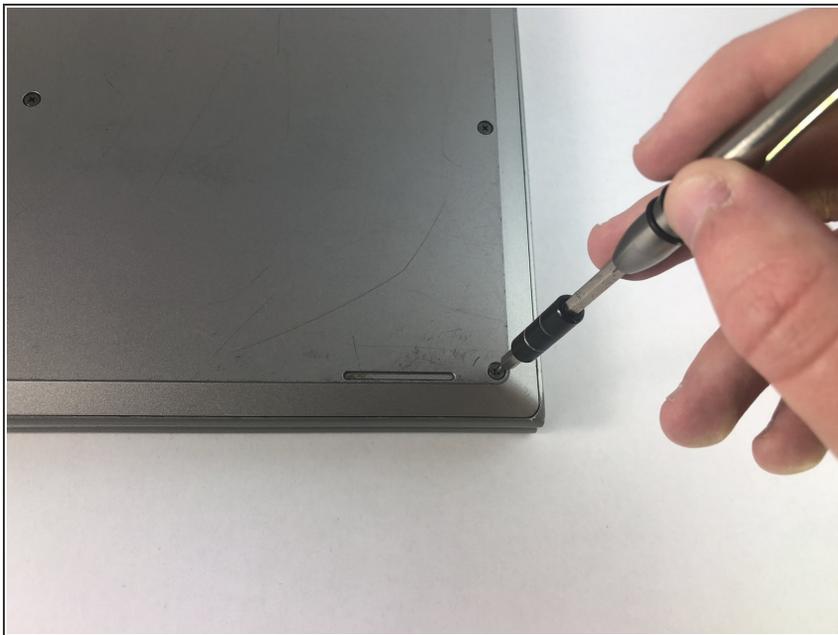

- Remove the nine 7.6mm PH0 screws on the cover.

Step 3



- Use a plastic opening tool to remove the cover from the computer.

Step 4



- Remove the three 4.7mm PH0 screws that secure the battery to the computer.

Step 5




- Remove the hard drive cable from the battery.

Step 6




- Lift the battery from the keyboard.

Step 7

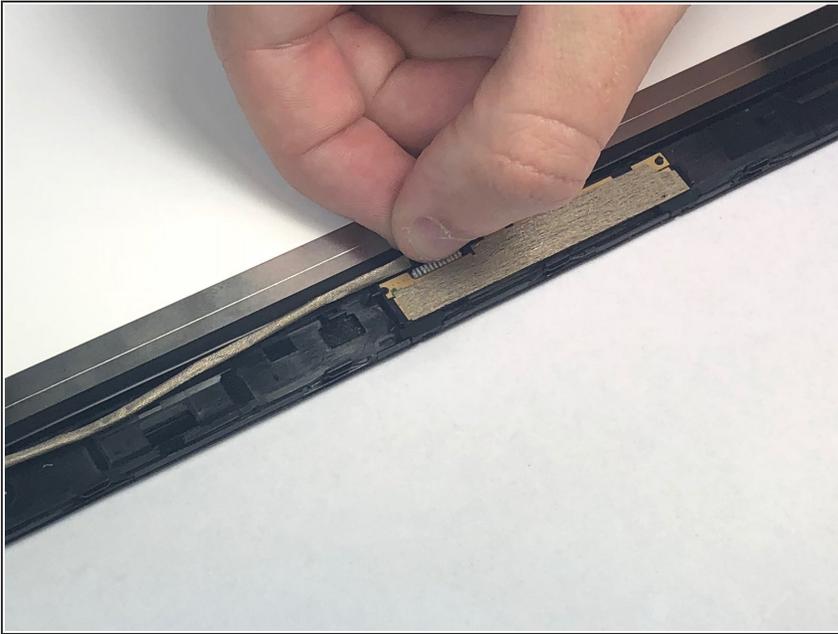

- Disconnect power and volume buttons board cable from the system board.

Step 8

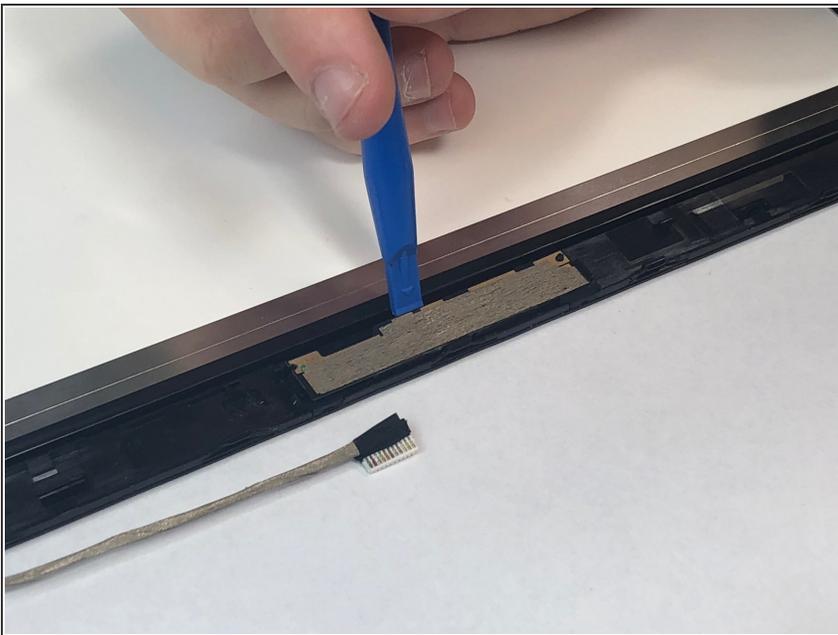

- Remove the power and volume buttons board cable from the routing guides on the speaker.

To reassemble your device, follow these instructions in reverse order.