


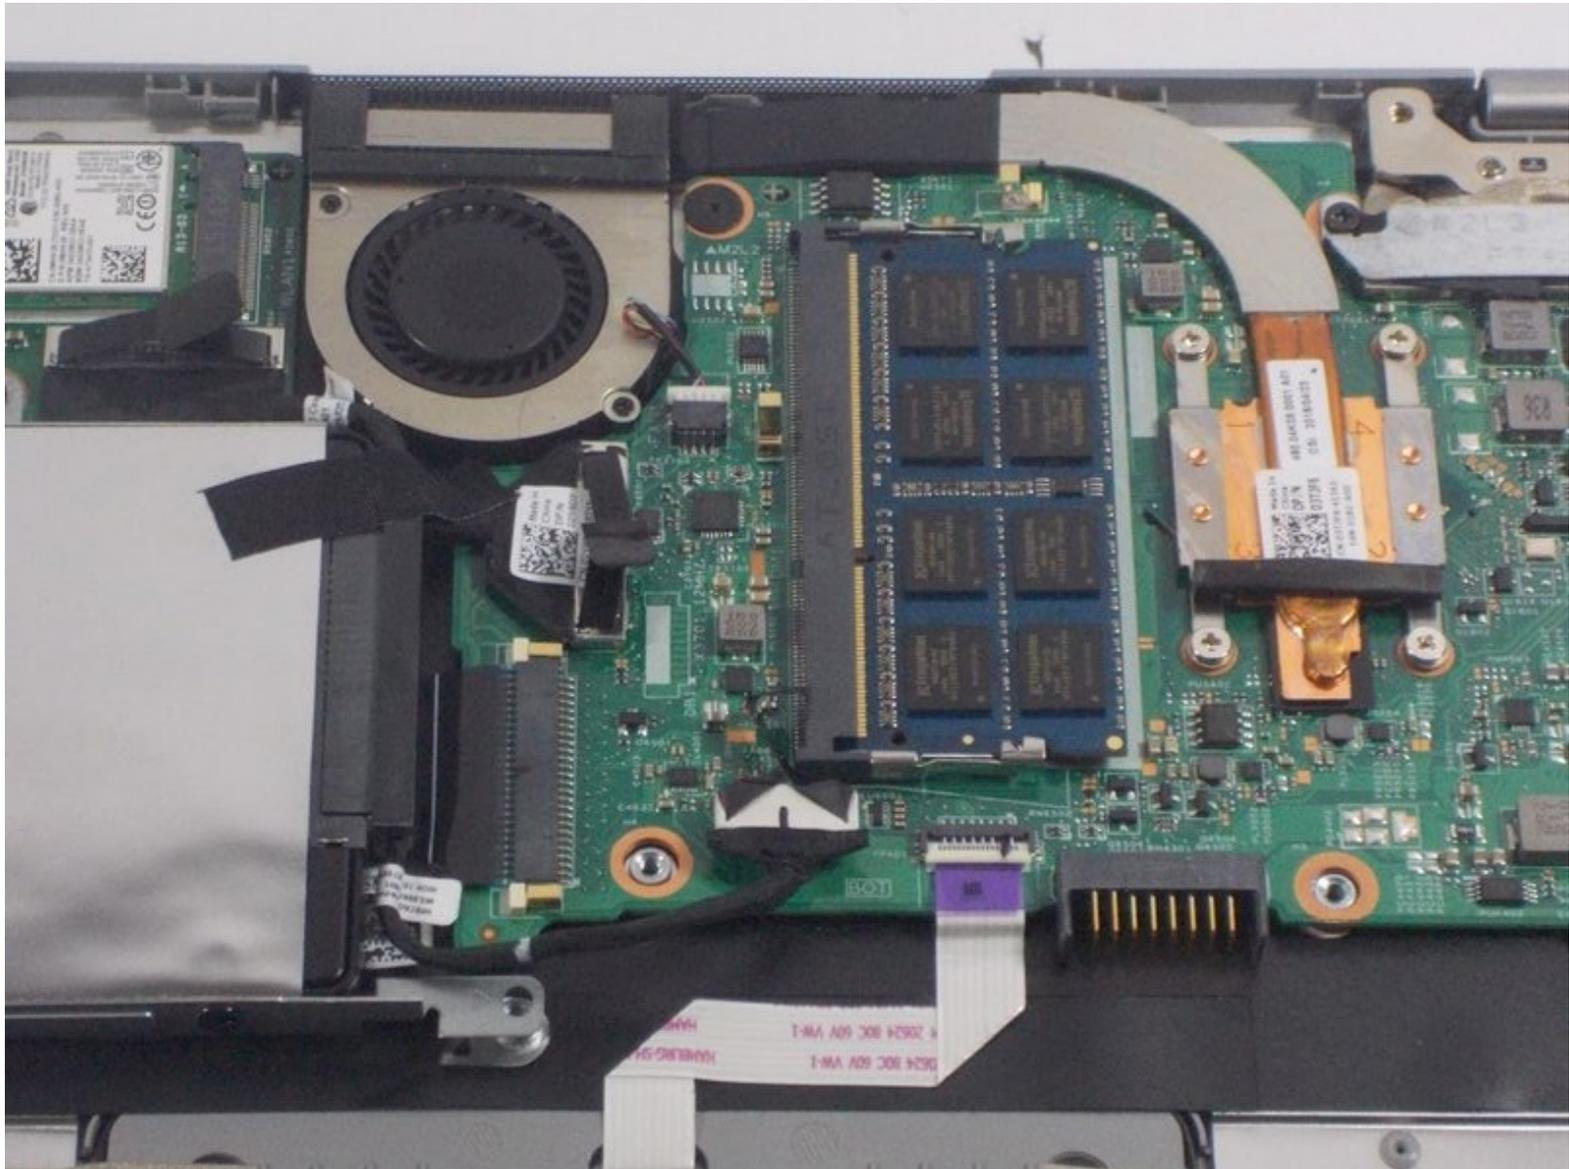

# Dell Inspiron 11-3152 Cooling Fan Replacement

This guide will show you how to remove and replace the cooling fan in the Dell Inspiron 11-3152.

Written By: Hannah Benedict



---

## INTRODUCTION

To access the fan you will have already removed the back panel of the laptop.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Back Panel




- Flip the computer over.

## Step 2




- Remove all nine 5mm Phillips head screws from the back cover using #0 Phillips head.

### Step 3

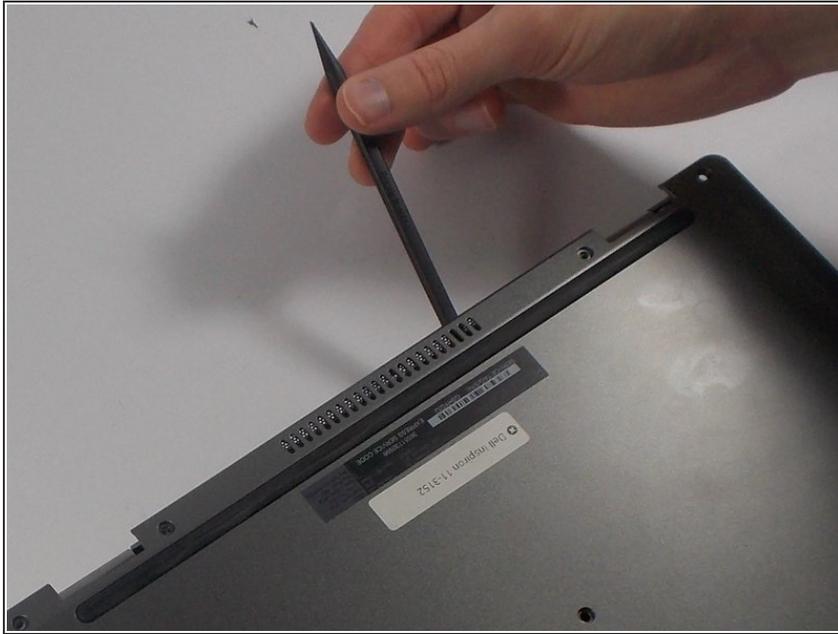


- Gently use a spudger to pull the cover away from the rest of the laptop. The cover will come off after you use the tool on two or three sides.

### Step 4 — Battery

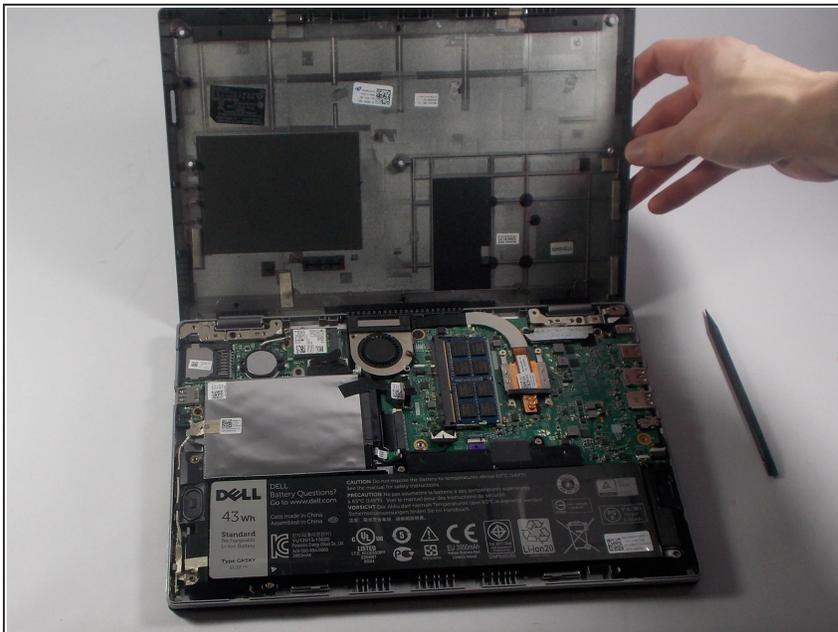

- ⚠ Make sure that the power is off.
- After taking off the back panel, you will see the battery located at the bottom of the computer system. It's black and is clearly labeled "dell battery".

## Step 5

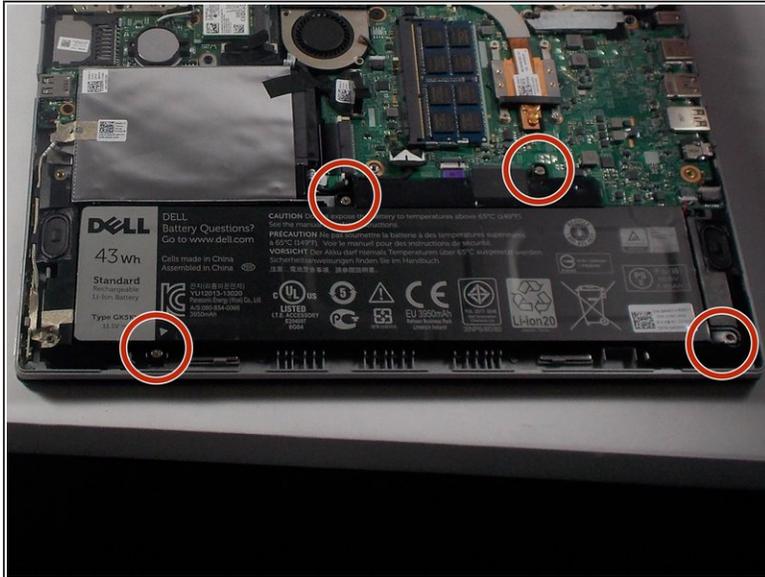

- Locate the battery at the bottom of the computer and remove the four 3mm screws with a Phillips #0 head that hold the battery down.

## Step 6




- Remove the Solid State Drive wire from the battery clip by detaching the wire.
- This can be done by gently pulling the connector away from the battery clip.

## Step 7




- Remove the battery from the computer system by gently lifting it from the side.

## Step 8 — Cooling Fan

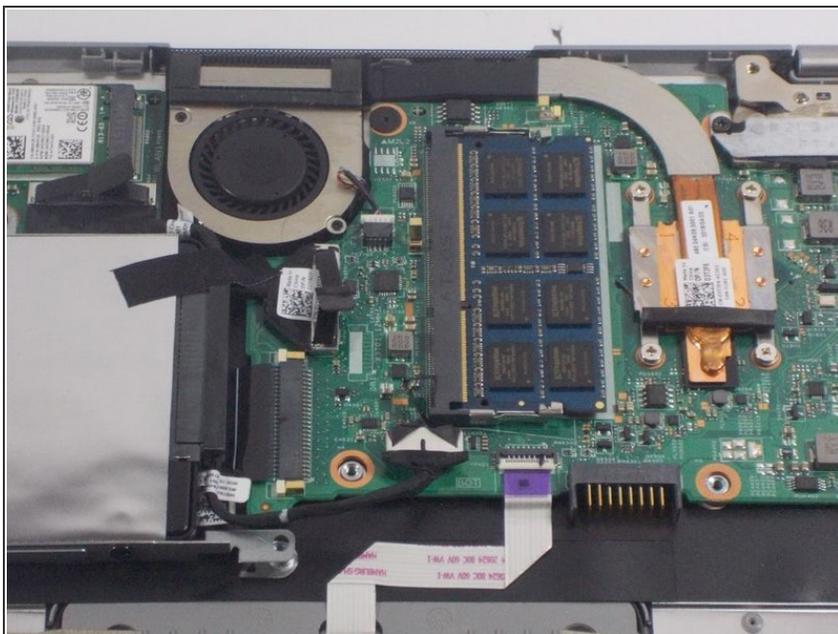


- Locate the cooling fan.
- The cooling fan is the curved metal piece in the top center of the laptop, opposite the battery.

## Step 9

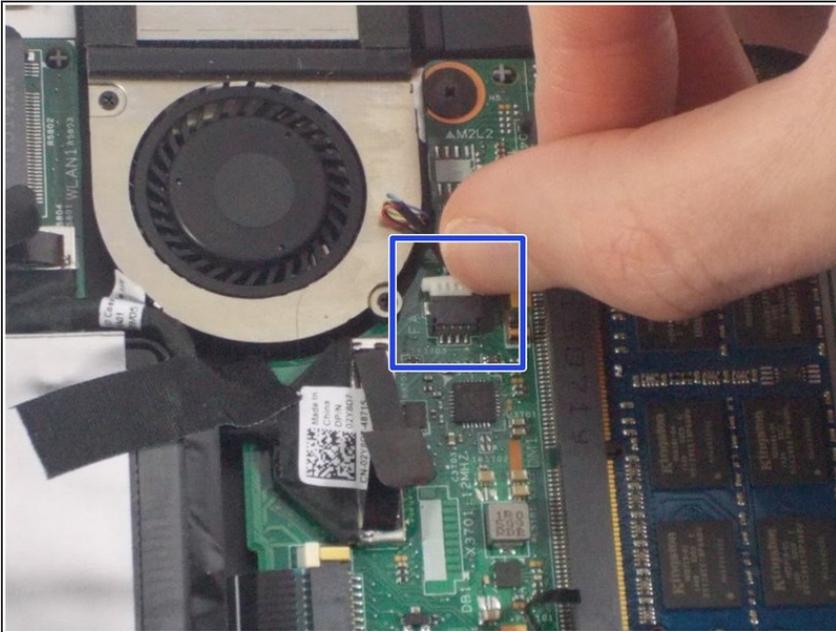


- Using your fingernail, unplug the white power cable connector to the right of the cooling fan by pushing it away from the port.

## Step 10

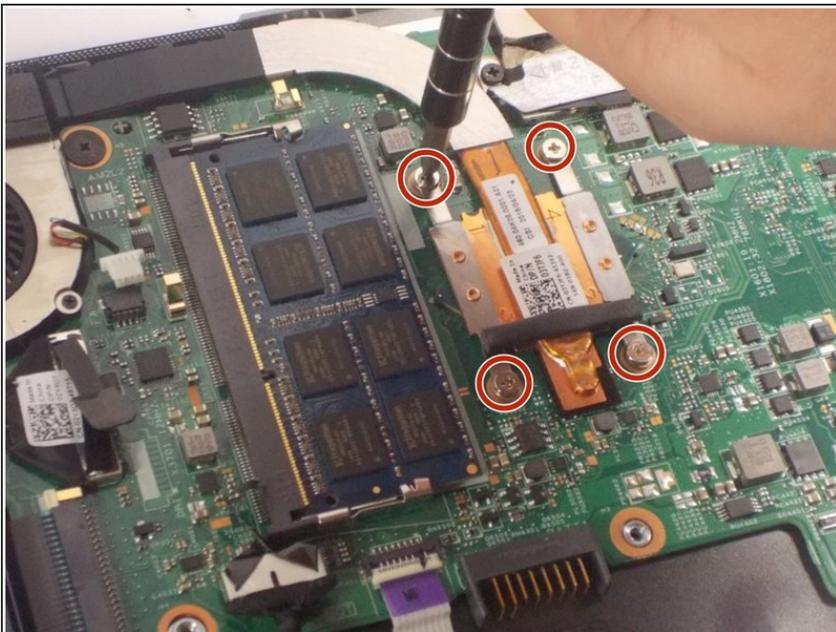

- Remove the four 3mm screws using a Phillips #0 head.

## Step 11

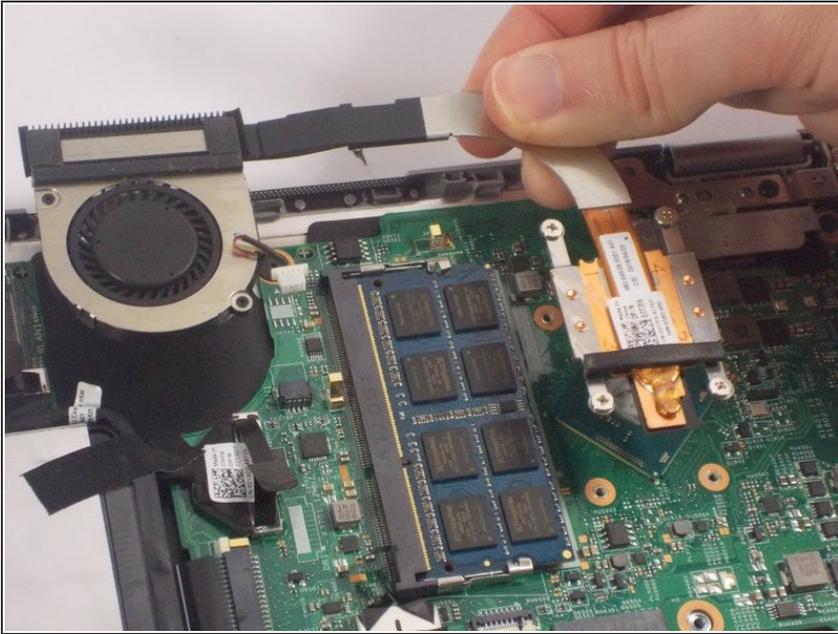

- Gently remove the fan.

To reassemble your device, follow these instructions in reverse order.