




Dell Inspiron 13-5368 Screen Display Replacement

A simple guide on how to remove and replace your Dell Inspiron 13-5368 Screen Display.

Written By: Matt Sugrim

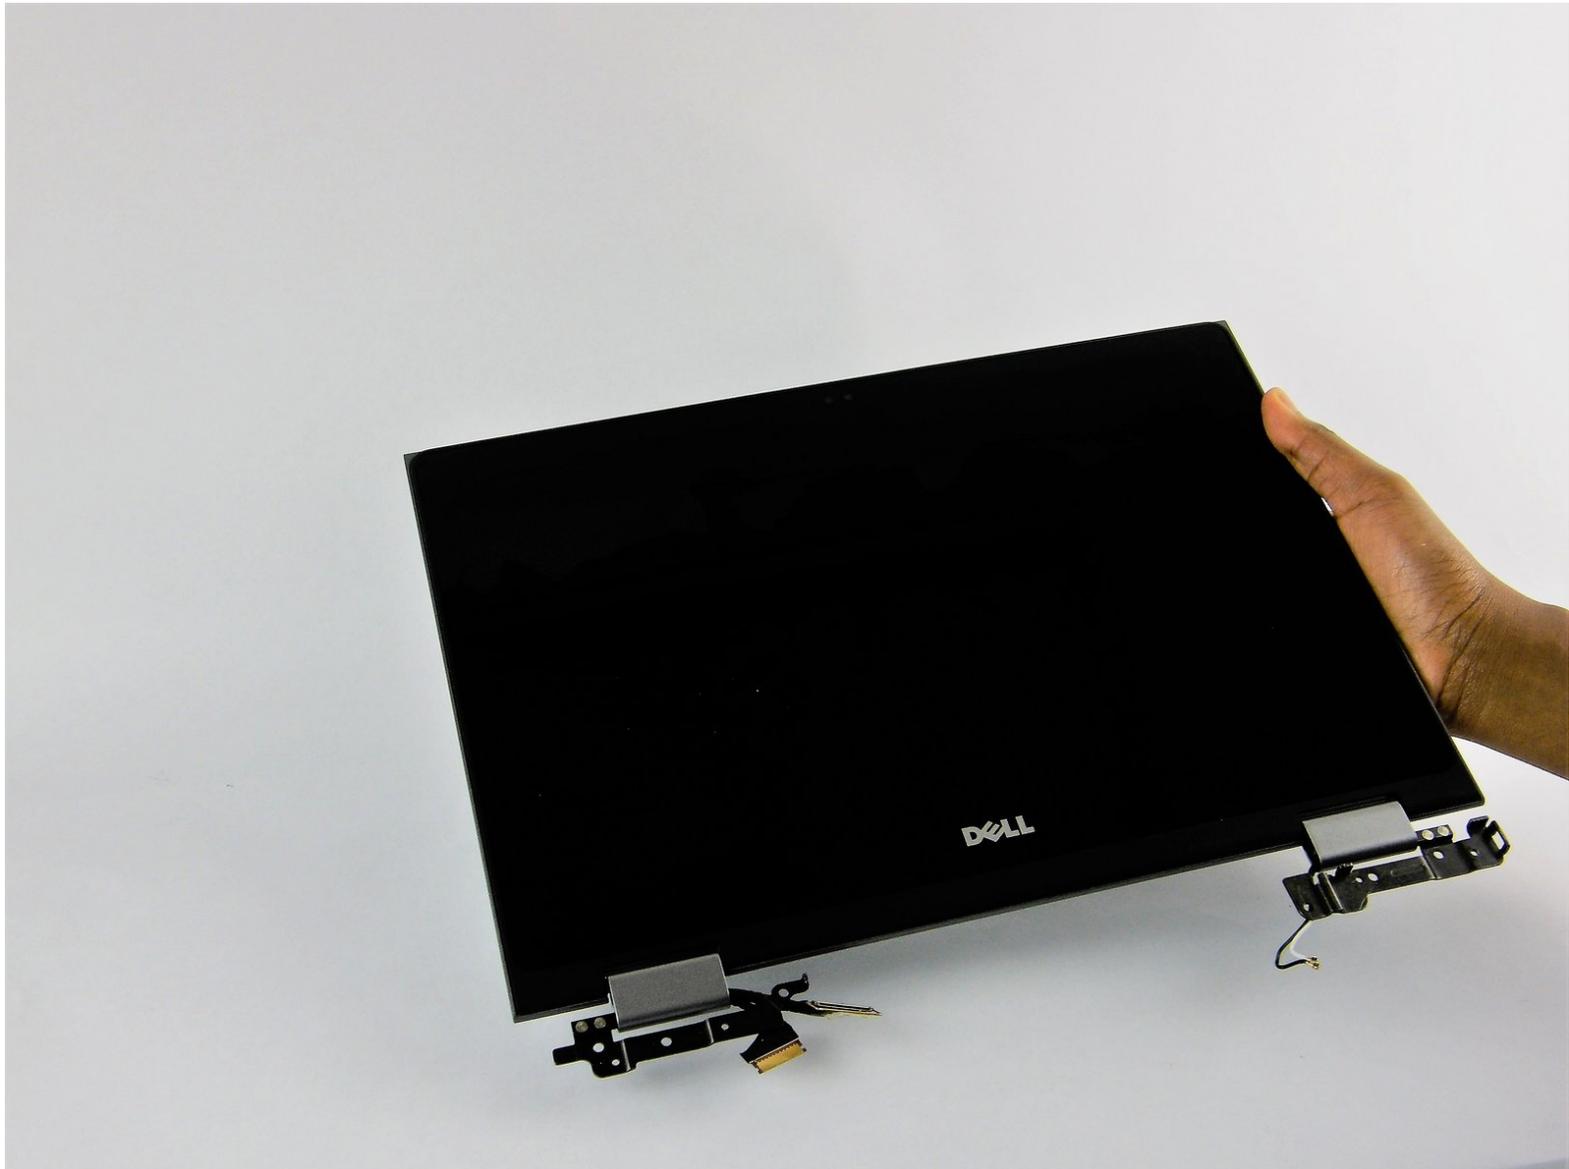



INTRODUCTION

This is a simple step-by-step guide on how to remove and replace a screen display for a Dell Inspiron 13-5368. You will need a Phillips Head J-0 screwdriver and a pry tool in order to perform this task. This task requires a great amount of care because you are working with glass. The time needed to complete this task is approximately 10 minutes.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

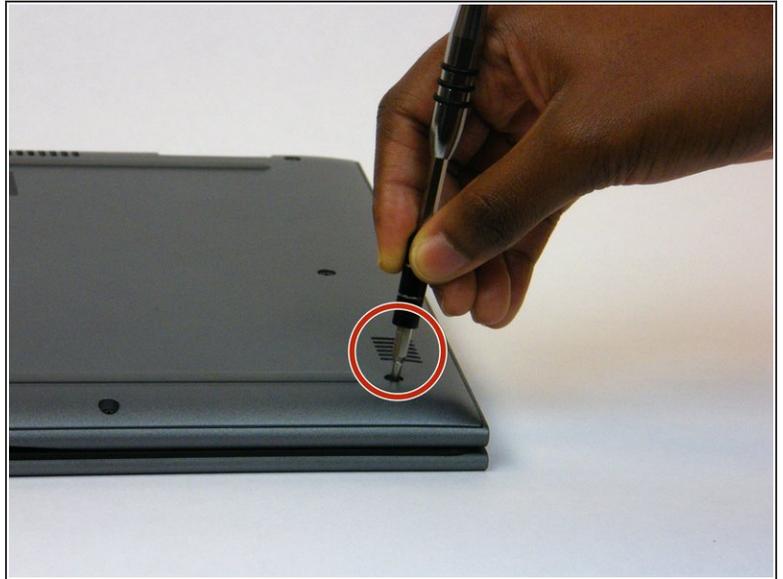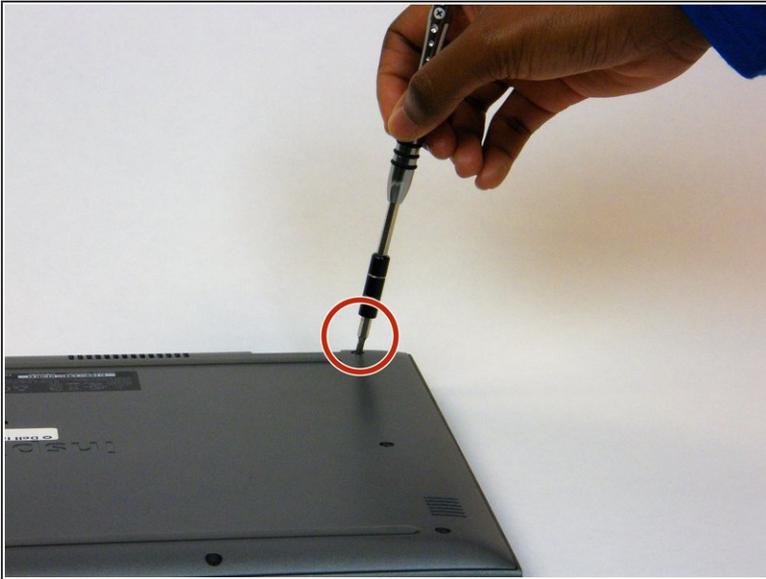


- Remove the nine 6mm Phillips #0 screws that secure the back cover of the laptop.

Step 2

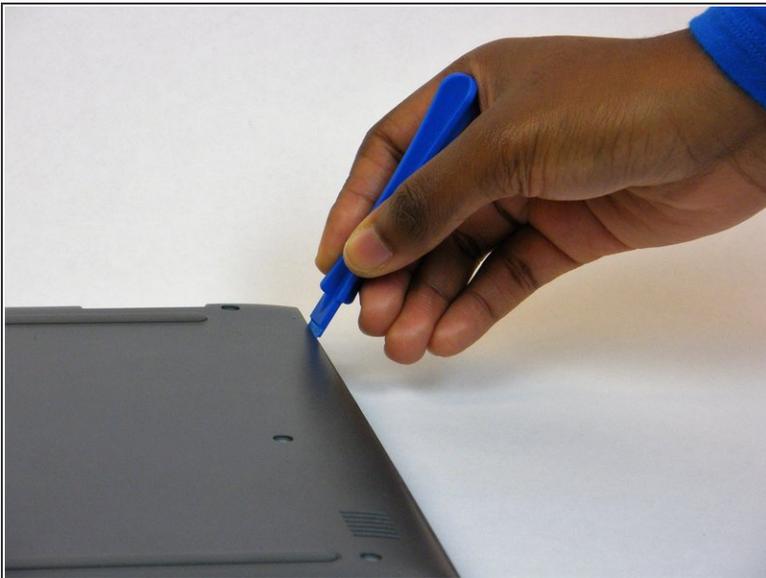



- Use spudger to remove the back cover.

Step 3

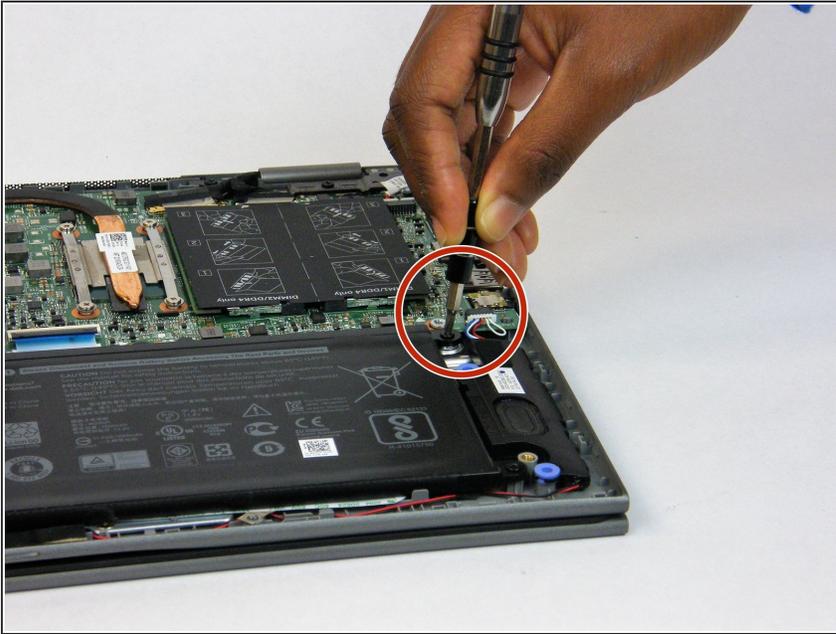


- Remove the four 3mm Phillips #0 screws that hold the battery to the case of the laptop.

Step 4

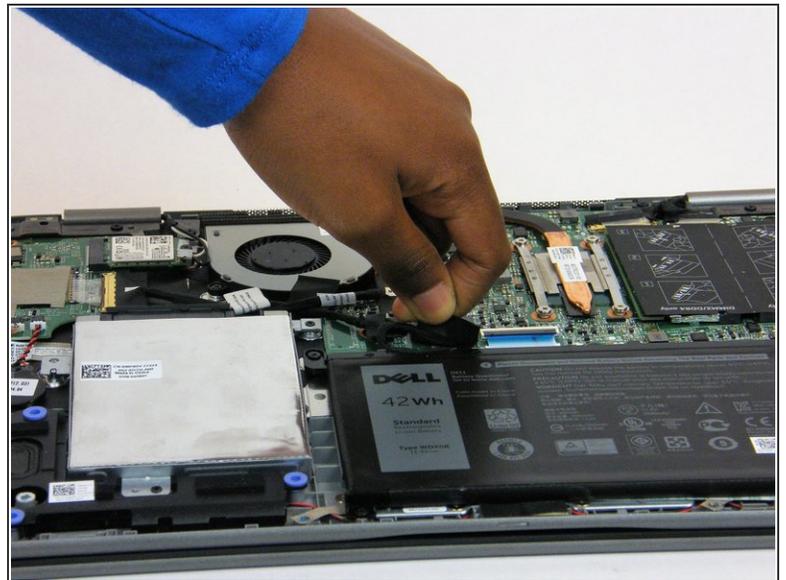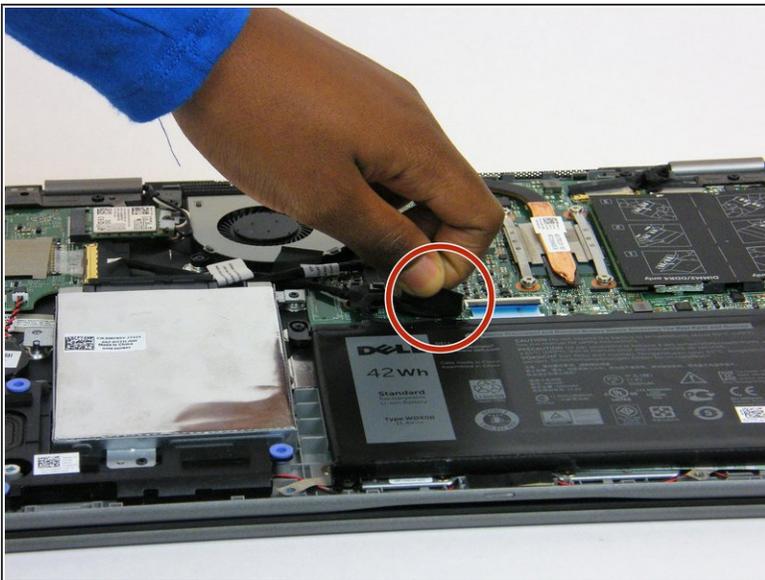



- Remove the power cord that connects the motherboard to the battery.

Step 5

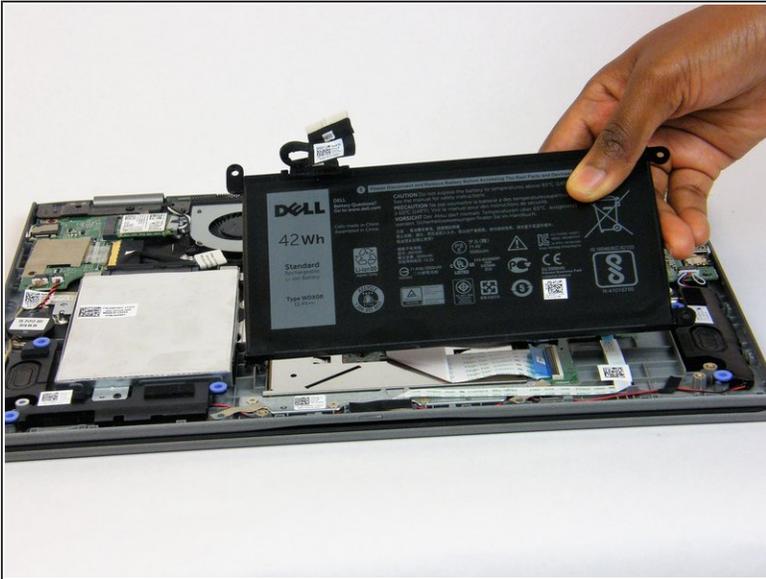

- Remove the battery.

Step 6 — Screen Display

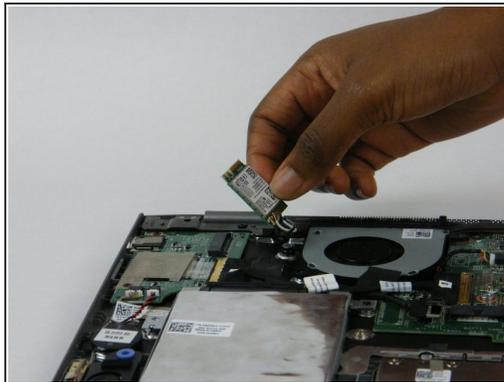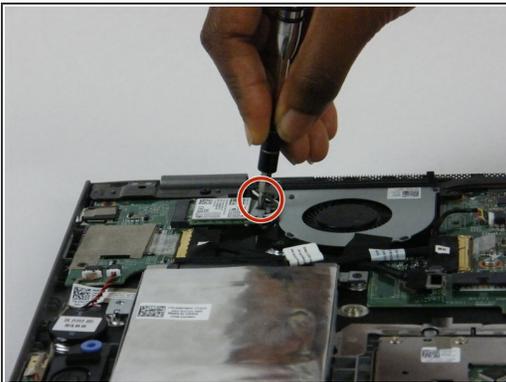


- Unscrew the 2mm screw that holds the WLAN card. Then carefully remove the WLAN card from the motherboard.

Step 7




- Detach the black and white antenna cables from the WLAN card.

Step 8

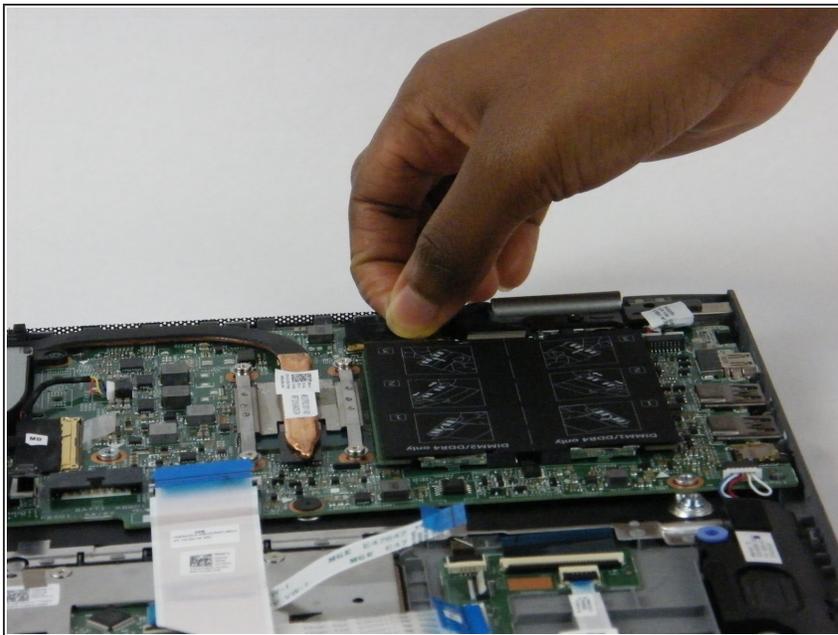


- Unplug the two display cables.

Step 9

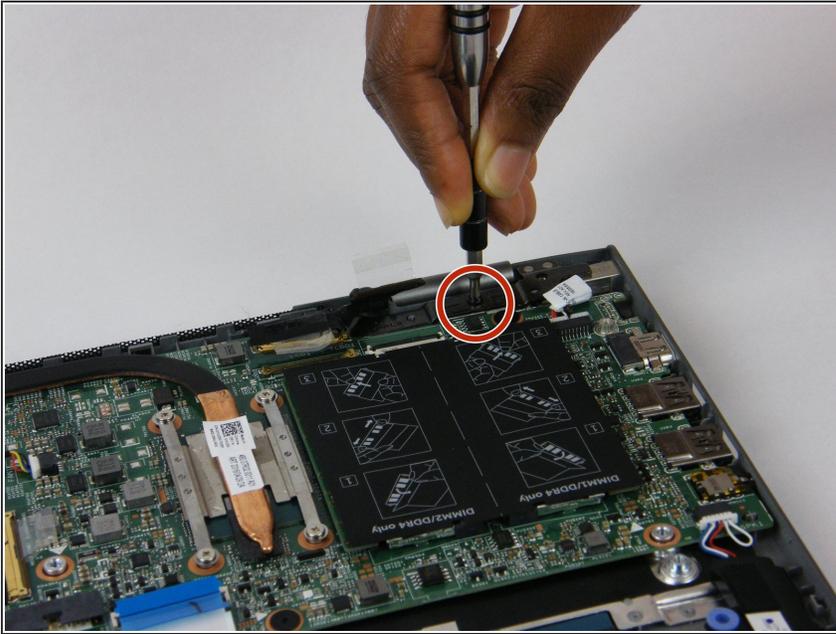

- Unscrew the screws that are securing the laptop's hinges.

Step 10

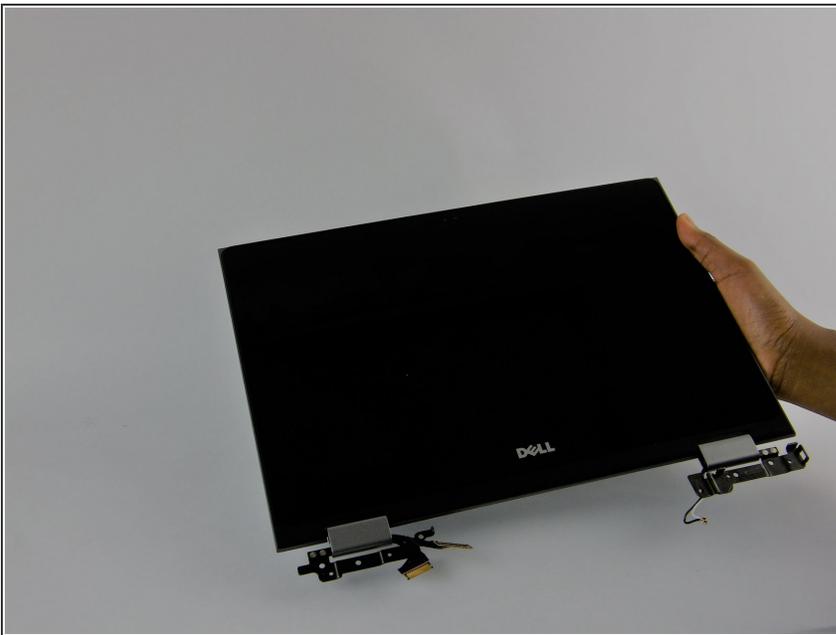

- Detach the display from the base.

To reassemble your device, follow these instructions in reverse order.