



Dell Inspiron 14R 5420 Battery Replacement

Written By: Terrence15



INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.

Step 1 — Sliding the Battery



⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).

- Close the display and turn the computer over.
- Slide the battery release latches to the unlock position.

Step 2 — Lifting the Battery



- Lift the battery out of the battery bay.

Step 3 — Align the Tabs



- Align the tabs on the battery with the slots on the battery bay and snap the battery until it clicks into place.