



Dell Inspiron 1526 Battery Replacement

How to replace a Dell Inspiron 1526 battery.

Written By: Kristen Gismondi



Step 1 — Battery



- Slide the unlock button to the left to release the battery.
- Slide the battery away from the laptop to remove.
- ⓘ The unlock button is located on the bottom of the laptop.

To reassemble your device, follow these instructions in reverse order.