



Dell Inspiron 15R 5537 Battery Replacement

This guide will show you how to remove and replace the battery in your Dell Inspiron 15R 5537.

Written By: Cody Charnisky



INTRODUCTION

If your Dell Inspiron 15R 5537's battery is not holding a charge or unable to be charged then your battery is most likely bad and needs to be replaced.

A properly functioning battery will supply your computer with ample charge to meet the range that was specified within the specs on the laptop. But after the battery has gone through a repeated amount of cycles it may begin to lose its ability to hold a charge. The first course of action would be to calibrate your battery and if the discharge rate is still really fast then a battery replacement might be the best option.

A damaged battery can be very dangerous and cause a fire. If you notice the casing of your battery is cracked or damaged in any way, take the necessary precautions.

Step 1 — Battery



-  Before working inside your computer, read the safety information that shipped with your computer.
- Close the display and turn over the computer to see the battery locking tabs.

Step 2



- Pull both of the locking tabs outwards until they both click to release the battery.
- Pull the battery out by lifting it from the top and sliding it forward.

To reassemble your device, follow these instructions in reverse order.