




Dell Inspiron 17 5765 Removal of Base Cover

This guide will help you remove the base cover to allow access to internals for the Dell Inspiron 17 5765

Written By: Christopher Melo-Pelaez

- 1 Remove the screws that secure the base cover to the palm rest and keyboard assembly.

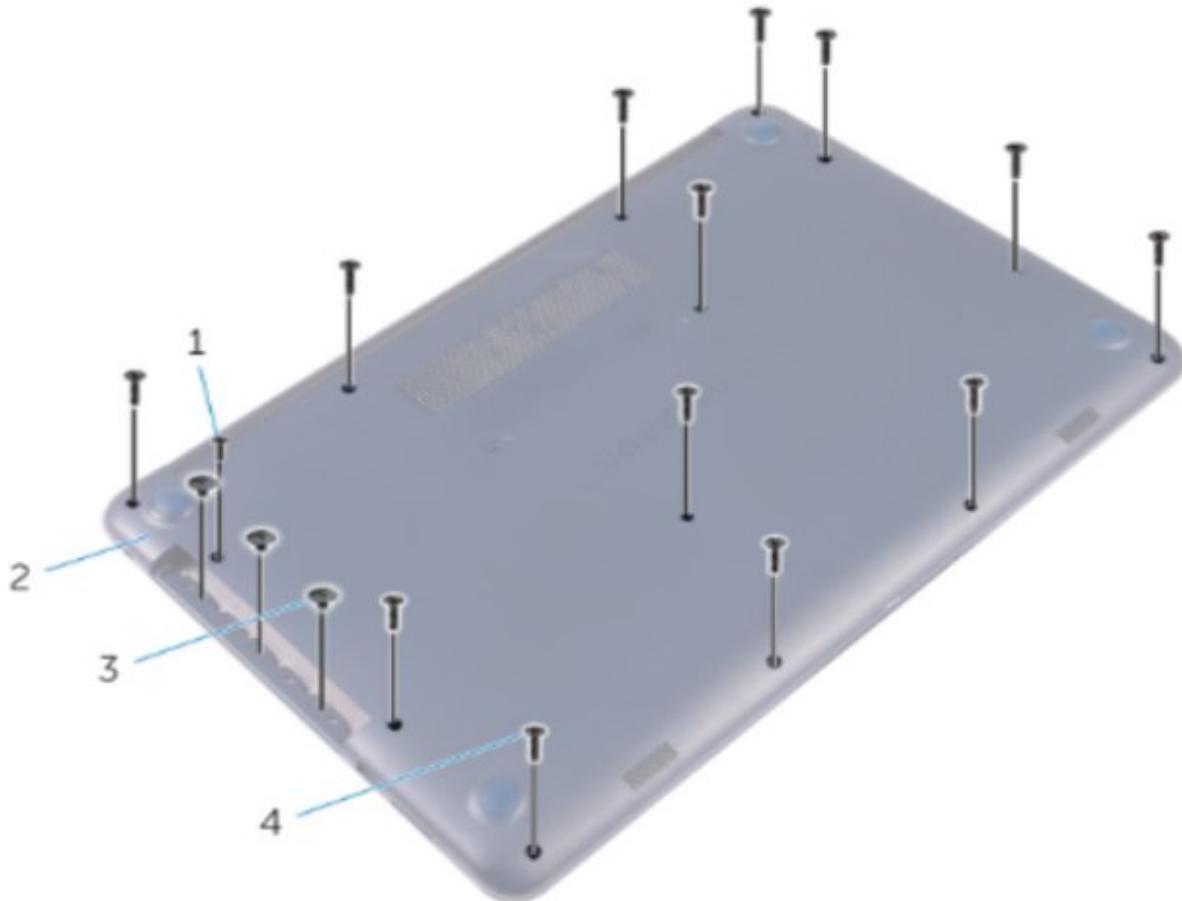

1 M2x4 screw

2 base cover

3 M2x2 screws (3)

4 M2.5x8 screws (13)


 **TOOLS:**

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Magnetic Project Mat](#) (1)

Isn't required but recommended

Step 1 — Remval of the screws


- 1 Remove the screws that secure the base cover to the palm rest and keyboard assembly.

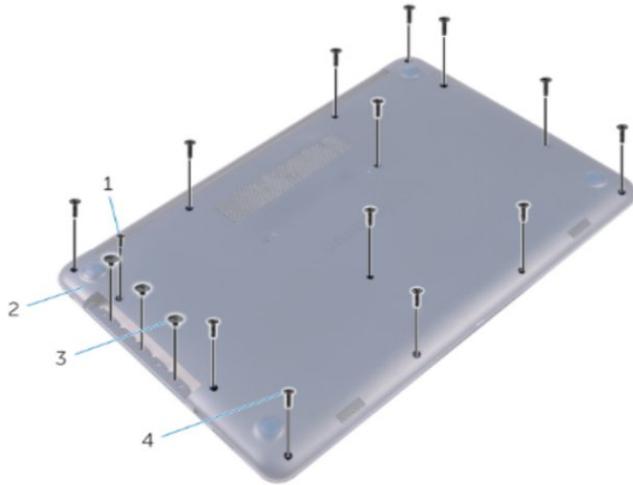

- | | |
|-------------------|----------------------|
| 1 M2x4 screw | 2 base cover |
| 3 M2x2 screws (3) | 4 M2.5x8 screws (13) |

- Remove the screws that secure the base cover to the palm rest and keyboard assembly.


Step 2 — Taking off the base cover

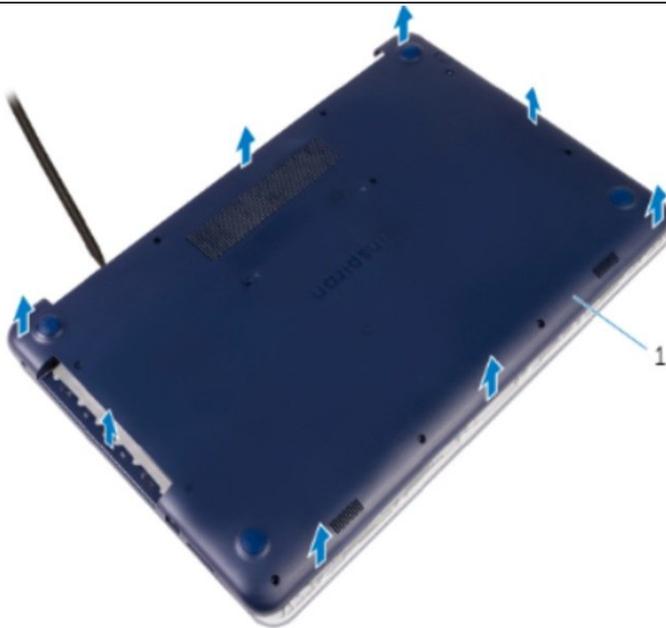

- Using a plastic scribe, pry the base cover off starting from the top-left corner of the computer base.
- Lift the base cover off the palm rest and keyboard assembly at an angle.

Step 3 — Putting it back together

- 1 Remove the screws that secure the base cover to the palm rest and keyboard assembly.

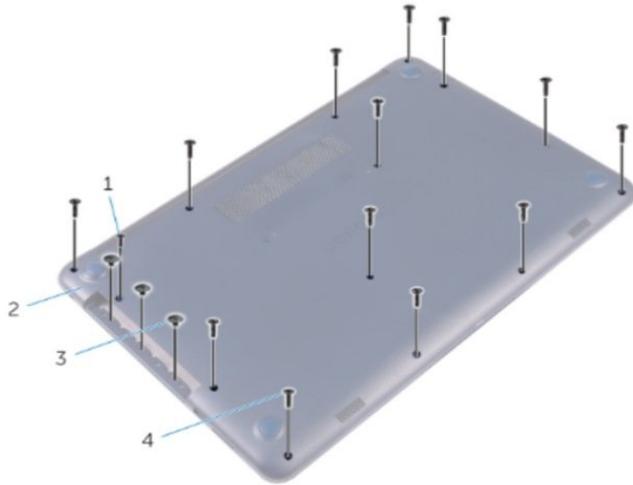

- | | |
|-------------------|----------------------|
| 1 M2x4 screw | 2 base cover |
| 3 M2x2 screws (3) | 4 M2.5x8 screws (13) |

- Put the base cover back on the laptop and do the reverse of step 1.

To reassemble your device, follow these instructions in reverse order.