




Dell Inspiron N4010 Motherboard Replacement

The mainboard or motherboard is where most components directly connect to. It acts as the backbone of the computer system and one of the key components

Written By: Jonathan Sellier

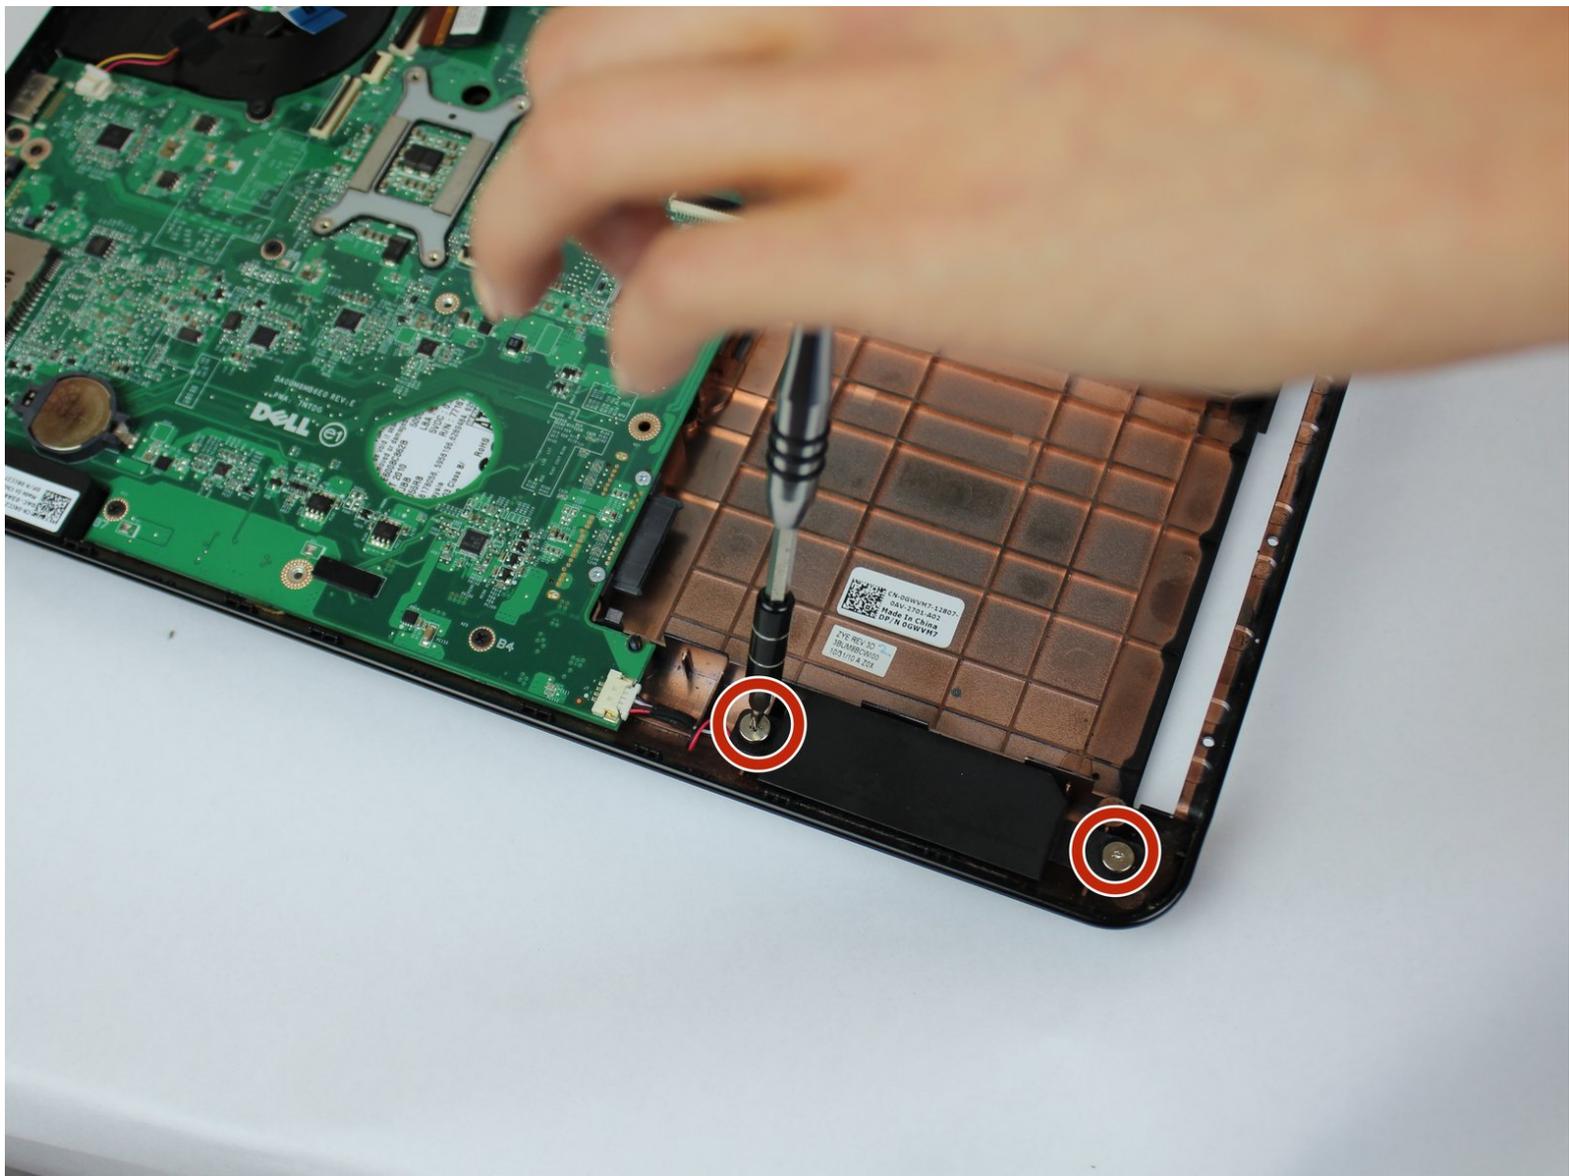

INTRODUCTION

The mainboard or motherboard is where most components directly connect to. It acts as the backbone of the computer system and one of the key components. Removal of the motherboard lets you get at the RAM, HDD, speakers and almost every other component all at once.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- ⚠ Make sure the laptop is not plugged into any wall outlets or the charger
- Unlock the battery by sliding the right-hand switch to the right.

Step 2

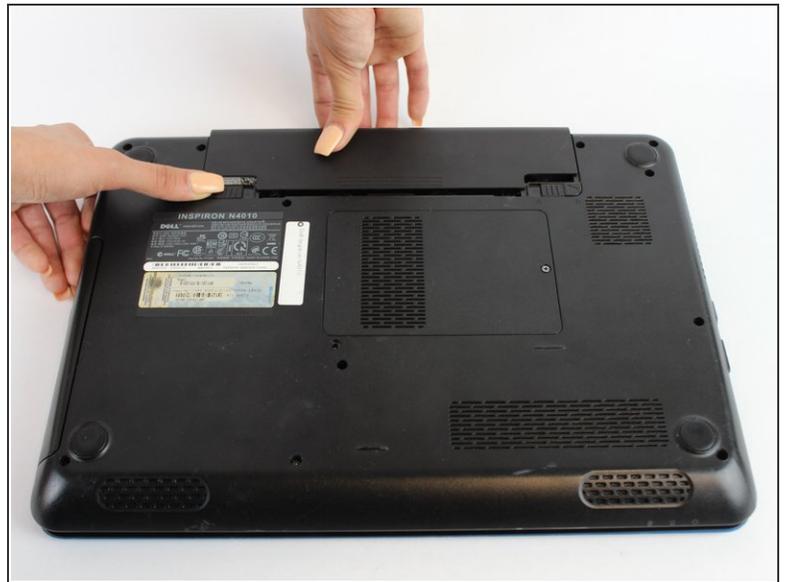


- While holding the left-hand switch to the left position, pull the battery away from the laptop.

Step 3




- The battery is now fully removed and the laptop will not power on without it.

Step 4 — Keyboard

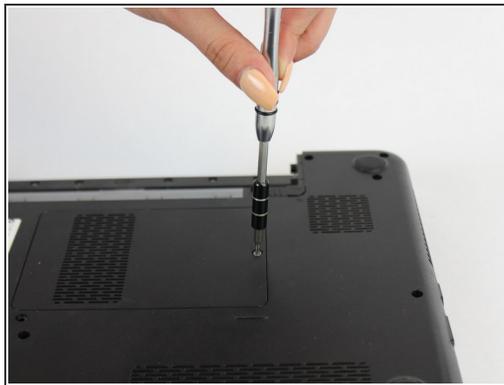


- Using the #0 Philips head, unscrew the indicated screw.
- Carefully pull the RAM cover up and away.

Step 5

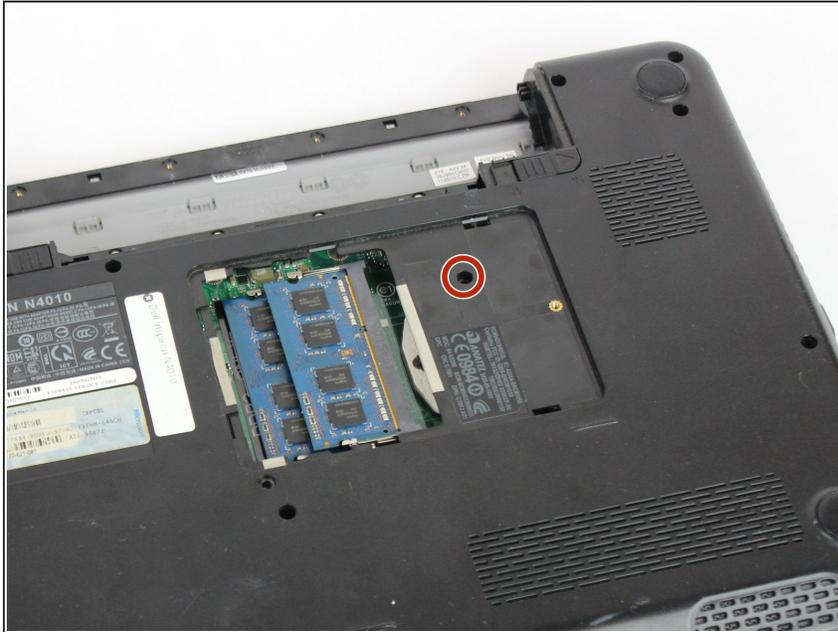

- Unscrew the indicated 5.7mm screw beneath the RAM Cover.

Step 6

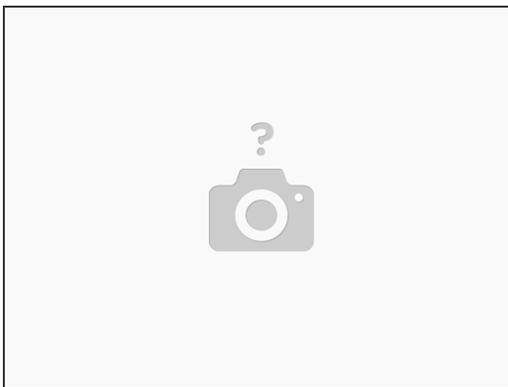

- Remove another screw above the battery release tab

Step 7



- Using a thin plastic tool (such as a guitar pick or spudger) at the top of the keyboard just above the F7 key, gently pry the keyboard away.
- Move the spudger to either end at the top of the keyboard to fully undo all plastic clips.


Step 8



- Carefully tip the keyboard upwards and pull it slightly away from the body of the laptop.

⚠ Be careful not to put stress on the ribbon cable below.

Step 9

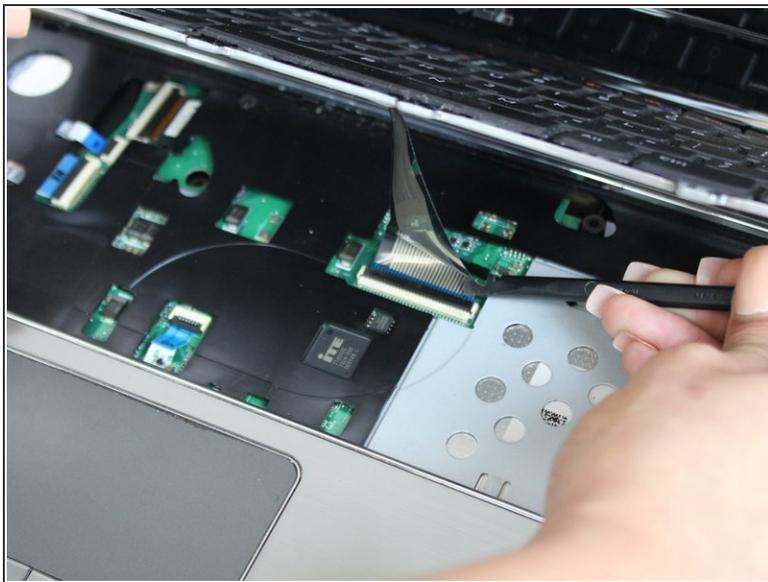

- Carefully unclip the ribbon cable by tipping the keyboard towards the screen.

i The keyboard is now completely disconnected.

Step 10 — Top Cover



- Remove the indicated 5.7mm screws.
- Remove the smaller 3mm screws from underneath the battery compartment.

Step 11



- With a plastic spudger, pry away the silver top cover from the black casing.
- Move the tool to the right and left along the seams to fully disconnect the cover.

Step 12




- Disconnect the indicated ribbon cables underneath where the keyboard sits.

Step 13




- Lift the cover upwards and away from the body of the laptop, after removing the optical drive and unscrewing the three screws on the right

Step 14 — Fan

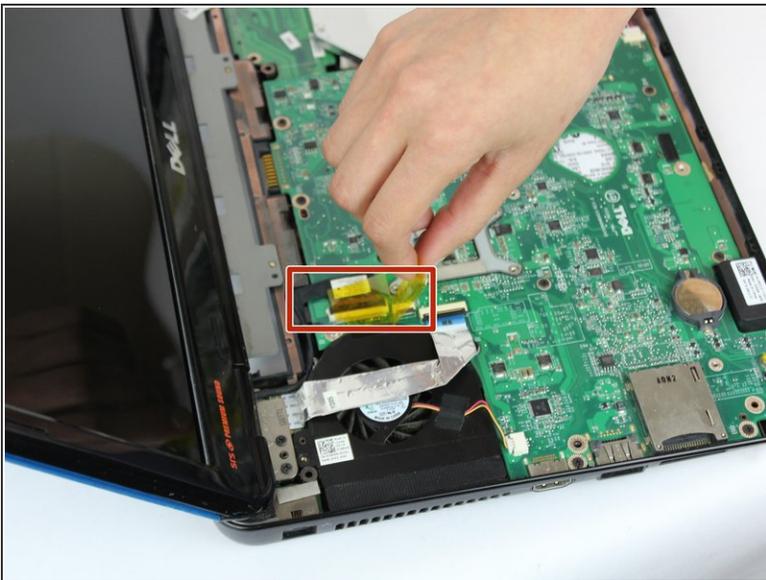


- Peel back the yellow tape to expose the ribbon connector.
- Unplug the ribbon cable from the motherboard.

Step 15

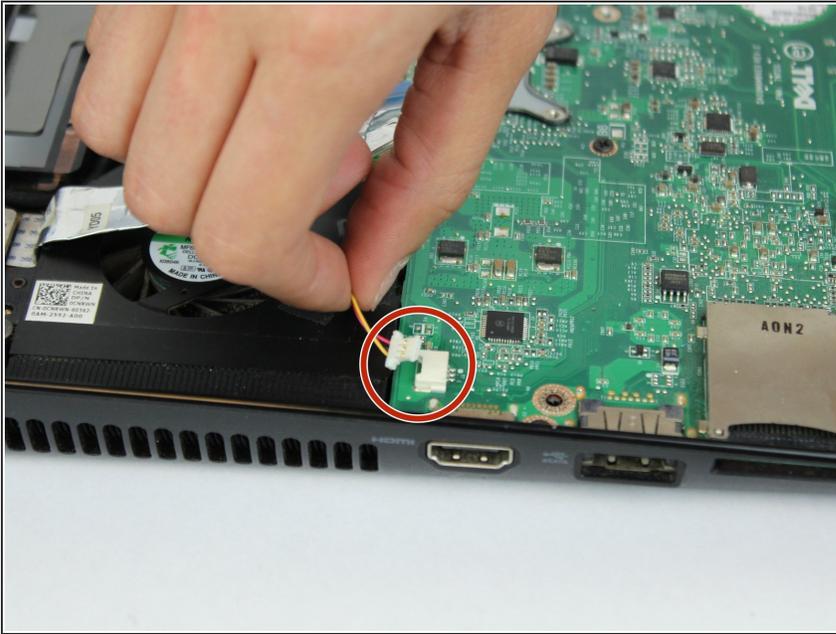

- Unplug the 3-wire connector from the motherboard.

Step 16

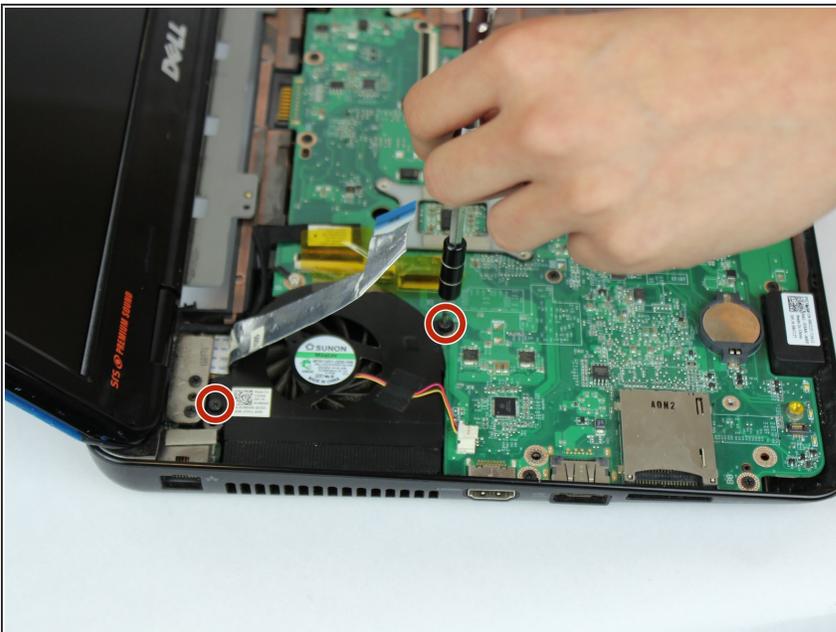



- Unscrew the indicated 5.6mm screws with the #0 Phillips Head Screwdriver.

Step 17




- Remove the fan from the device.

Step 18 — Motherboard

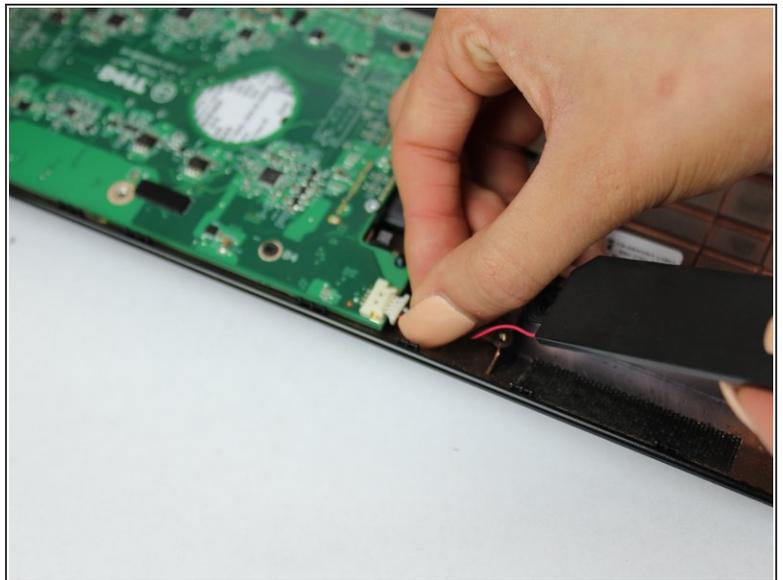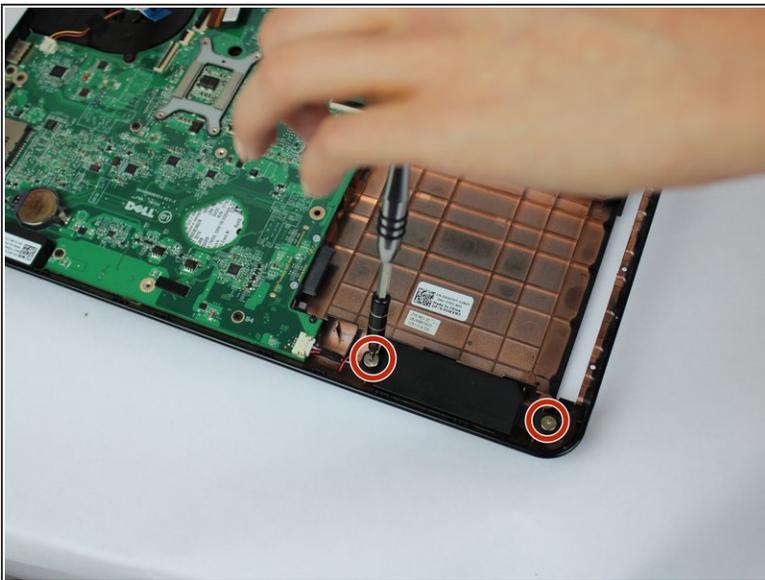


- Unscrew the two screws on the right hand speaker with the #0 Phillips Head.
- Unplug the speaker connector from the motherboard.

Step 19

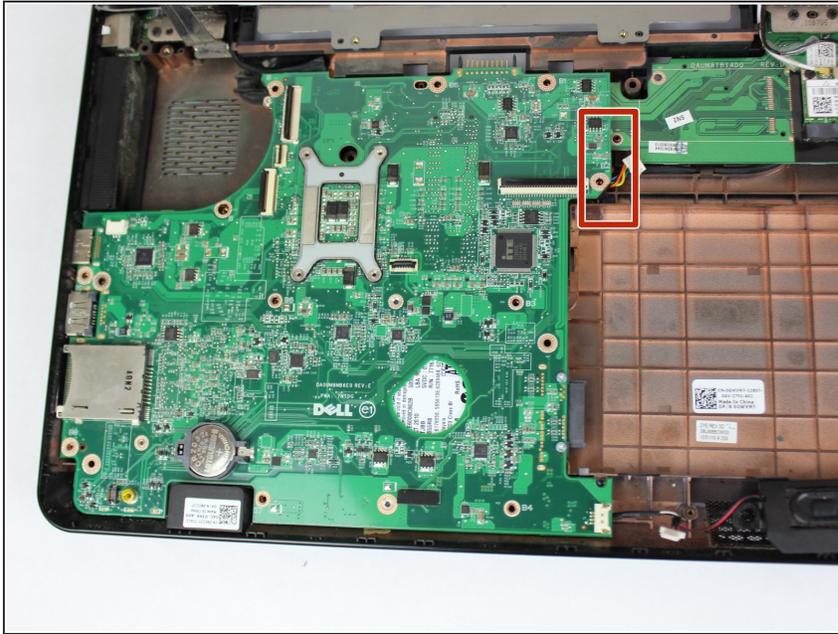


- Reaching under the daughter board, disconnect the connector.
- ⓘ It will be under the board in the area indicated.

Step 20

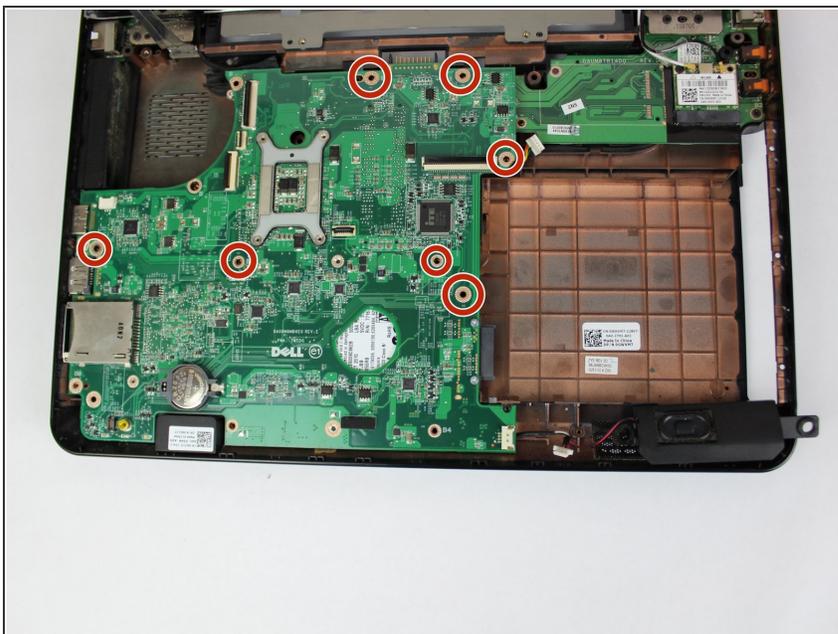

- Unscrew the indicated 5.6mm screws with a Phillips #0 screwdriver.

Step 21

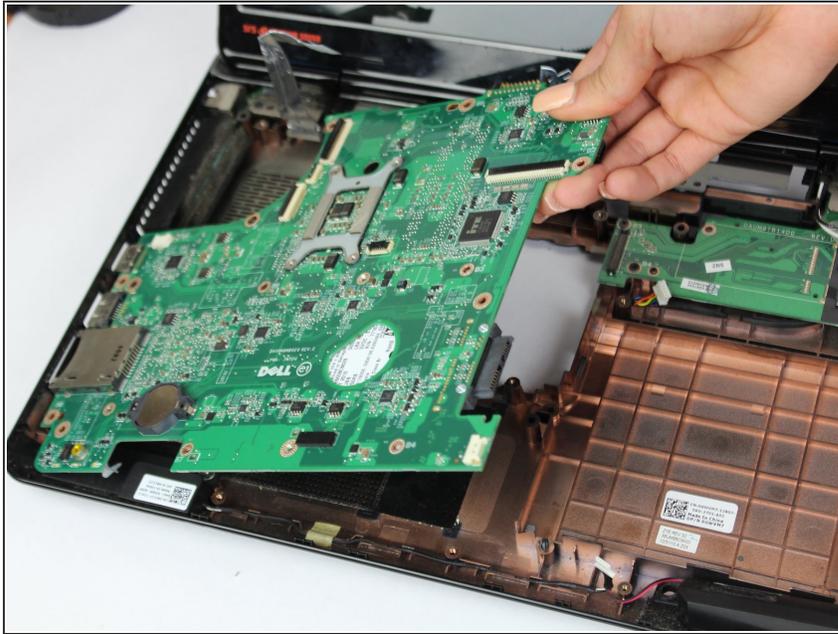

- The motherboard can now be removed by pulling upwards, tilting it to the left of the laptop until the connectors clear the body of the laptop.

To reassemble your device, follow these instructions in reverse order.