

INTRODUCTION

Keycaps can become sticky or damaged over time. Here is how to remove and replace medium sized keycaps.



TOOLS:

- [Qisan Keycap Removal Tool](#) (1)



PARTS:


- [Medium Keycap](#) (1)

Step 1 — Medium Keycap



- Place the prongs on either side of the keycap
- Twist to grip the top and bottom corners
- Pull the keycap from the board

Step 2

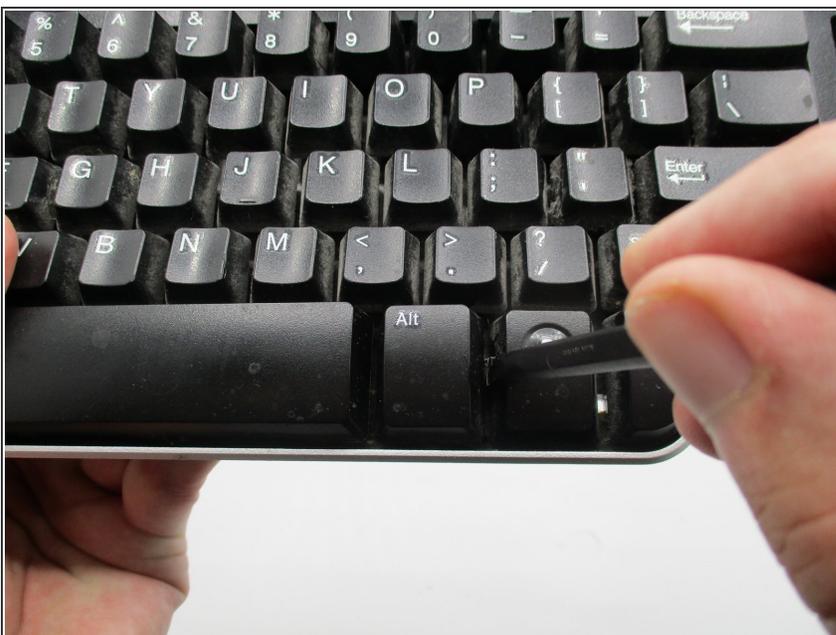

- Insert the flat end of the spudger under the medium keycap and gently press up until it pops off

To reassemble your device, follow these instructions in reverse order.