



# Dell Photo Printer 540 Case Replacement

In the event of a damaged or cracked case, this repair guide will teach you how to replace it.

Written By: Jonathan Mintz



 **TOOLS:**

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Case



- Rotate the photo printer so that the bottom of the case faces upward.

## Step 2



- Use a Phillips #2 screwdriver to remove the three 5.65 mm screws on the bottom panel of the case in a counter-clockwise fashion.

### Step 3



- Rotate the device so that it is upright again. Under the LCD Panel there is a 9.62 mm screw, unscrew using a Phillips #2 screwdriver.

### Step 4




- Remove the back panel of the case by pulling directly back.
- ⓘ Some carefully applied force may be required to remove this part.

## Step 5



- Rotate the photo printer so that the bottom panel faces up once again. Now lift off the bottom panel of the case to access all internal components.

## Step 6

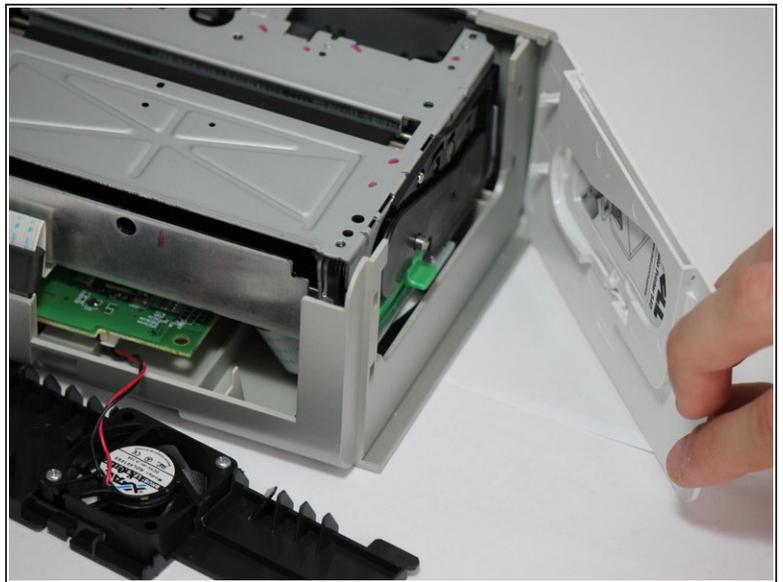

- Finally remove the side panel with the ink-cartridge door by holding the right side and pulling backwards with the left side.

**⚠ Caution!** The side panel is held in by tabs; don't break these.

To reassemble your device, follow these instructions in reverse order.