




Disassembling Griffin iFM 4027 - Right Side Panel (Screen Side Up)

This guide will teach the user how to detach the right side panel and its associated buttons.

Written By: Alexander

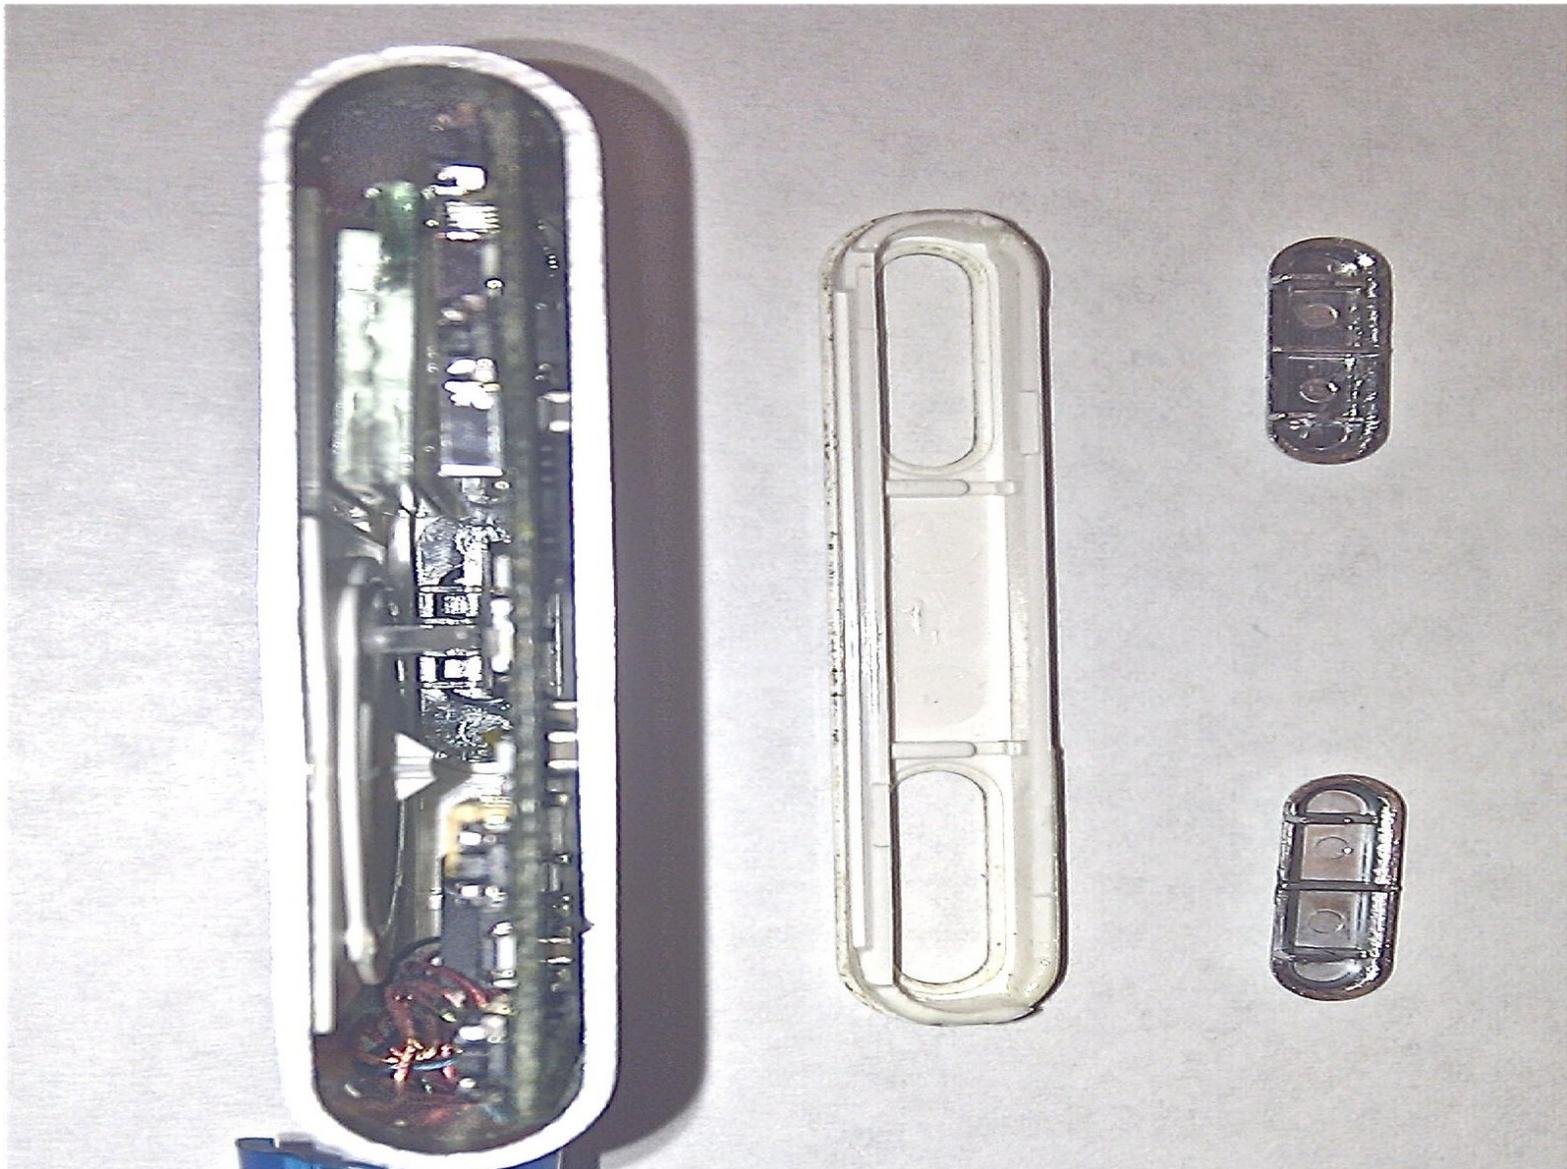

INTRODUCTION

A side panel is located on each side of the device. The right side panel, containing the button(s), controls the track being selected as well as the volume of the device. There are no prerequisites required for this guide.

- A pry bar is necessary to remove the panel.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Disassembling Griffin iFM 4027 - Right Side Panel (Screen Side Up)



- Use the plastic opening tool.
- Lodge the tip into the corner of the device; Applying pressure upward, allowing the panel to be released.

Step 2



- The side panel can now be detached using your fingers.
- The buttons can be dislodged by turning the panel over and shaking it, if necessary.

After disassembling, the device and its components should look similar to that depicted in the cover image (top right of page).