


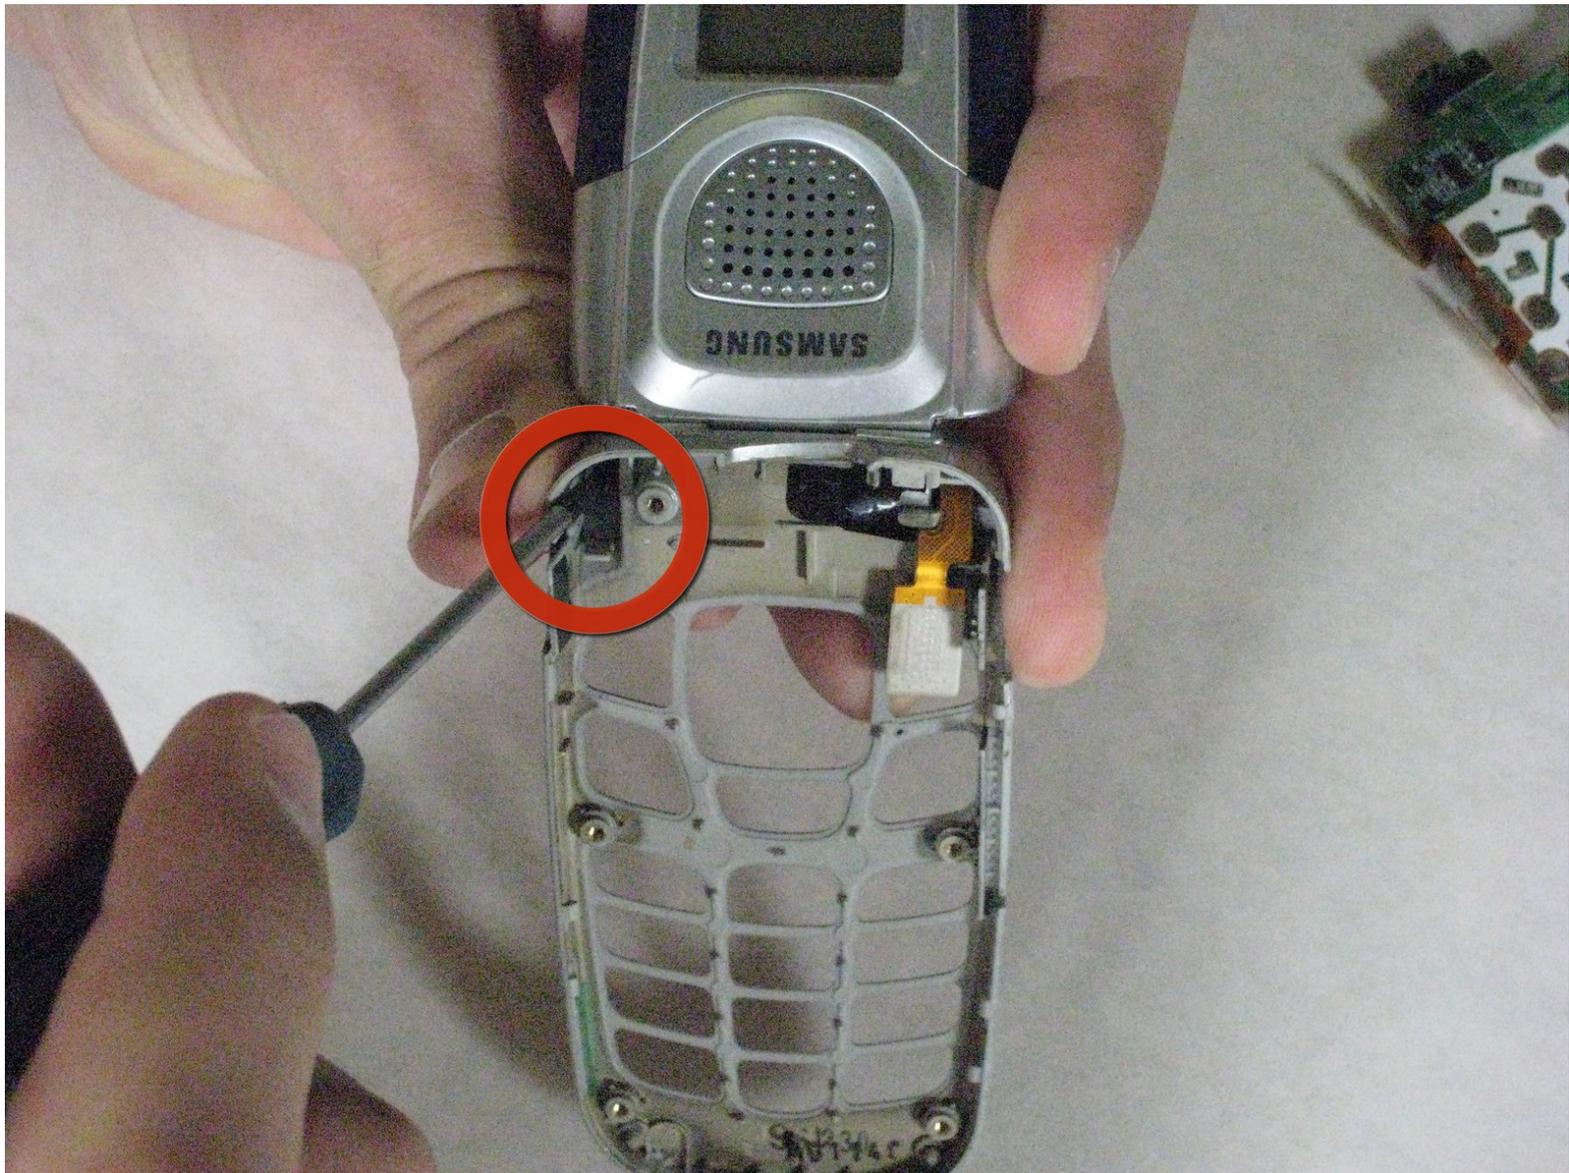

Disassembling Samsung SPH-A760 Big Speakers

Written By: doconnor



INTRODUCTION

How to remove all speakers on the phone.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Disassembling Samsung SPH-A760 Battery



- Push open the latch and remove the battery.

Step 2 — Disassembling Samsung SPH-A760 Antenna



- Twist off the antenna.
- Pop off the transparent cylinder.

Step 3 — Logic Board




- Remove the five screws as shown.

Step 4




- Carefully pry the back plate off.

Step 5

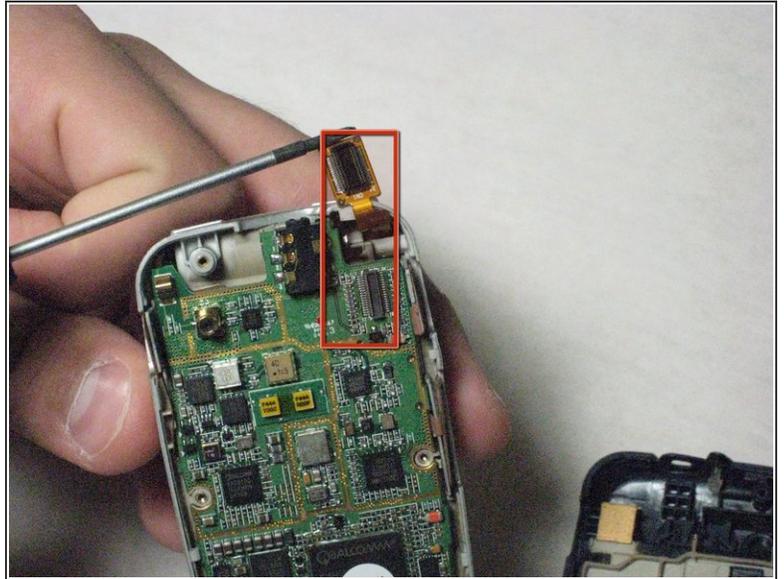

- Carefully detach golden screen connector.



Step 6

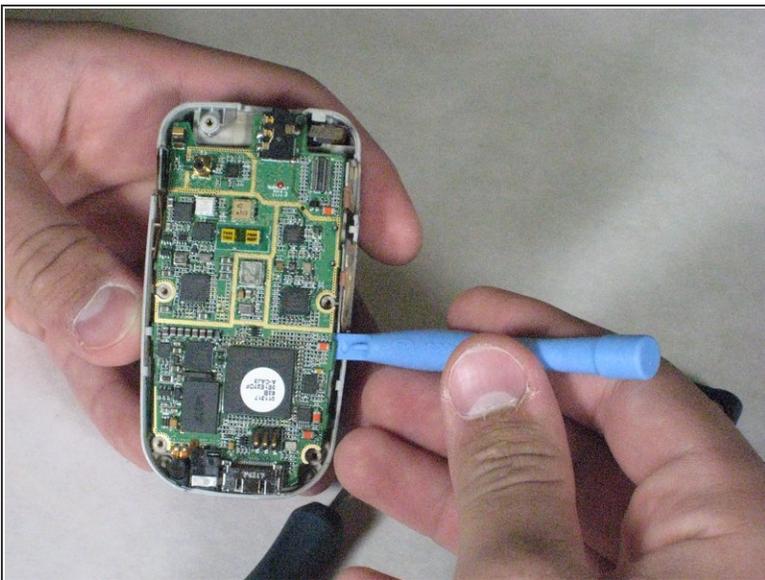

- Pop out the logic board with spudger.

⚠ Caution: Do not touch with bare hands, use tweezers or wash hands before contact.

Step 7

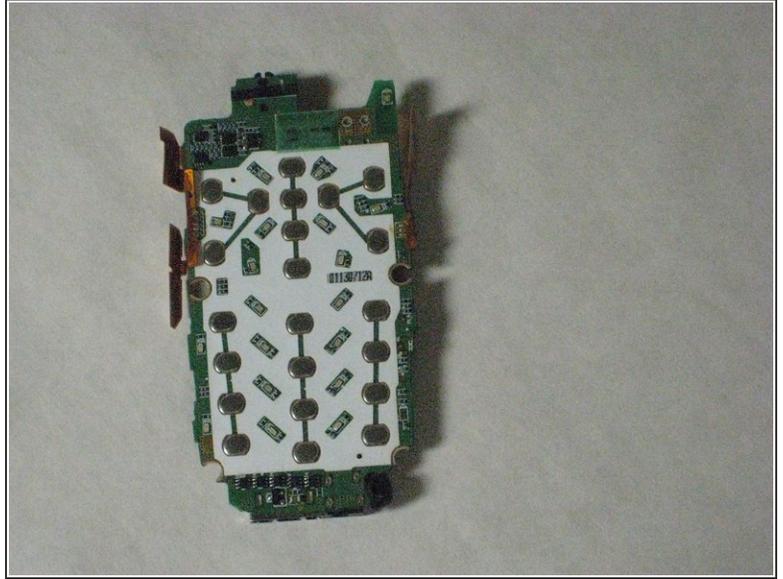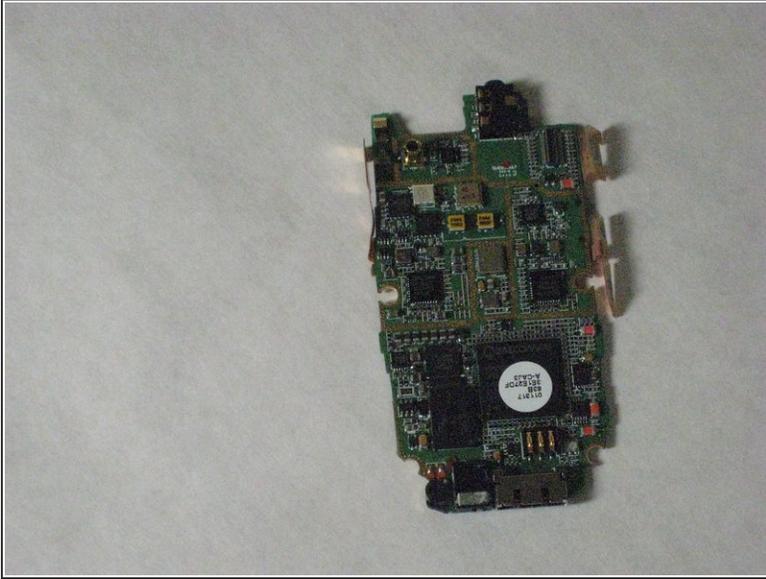

- Place the logic board on a clean tray.

Step 8 — Big Speakers



- Remove the hinge on the phone.
 - Put pressure on the spring with the screwdriver to unhinge phone.
- Make sure to pull the gold wire through, don't let it rip.

Step 9



- Remove the four screws as shown
- Use the spudger to pry it open, excessive force may be necessary.

Step 10



- Remove the three screws that hold the big speaker
- ⚠ Caution: The wires are attached to the screen and should be removed with care.

To reassemble your device, follow these instructions in reverse order.