



Disassembling Trek 820 Tire Removal from Wheel

We will show you to how to remove the tire from the wheel of your bicycle.

Written By: Kaveh Karimiyanha



 **TOOLS:**

- Flathead Screwdriver (1)
-

Step 1 — Disassembling Trek 820 Tire Removal from Wheel



- Locate the tire pressure valve.

Step 2



- First, you must release the air.
- To release the air from the tire, press the center spoke in the middle of the air pressure valve.
- Release air until no more air is being released.

Step 3



- Use a sturdy, long object, such as a screwdriver or the back of a spoon, to wedge in between the tire and the wheel

Step 4



- Now you may separate the tire from the wheel.
- ⚠ Be careful pulling the tire from the wheel around the air pressure valve.

Step 5



- To remove the tube, all you need to do is pull the tube from the inner lining of the tire.

To reassemble your device, follow these instructions in reverse order.