



Disassembly housing, battery, circuit Loglink PA0085

pure disassembly of the assemblies based on images

Written By: Meinolf



INTRODUCTION

How do I get the housing of the Loglink PA0085 Mobile Extra Battery 2200 mAH apart to remove battery and circuitry

TOOLS:

- [screwdriver according to the screws used / passender Schraubenzieher](#) (1)
-

Step 1 — Open housing



- Insert small screwdriver into gap between the two shell halves on one of the three tabs and pry off. Photos should only give clues for the position and shape of the tabs! Carefully fold away housing halves, note rear tabs

Step 2 — Remove the battery



- Remove the battery

Step 3 — Remove the circuit



- Gently pry wire with spring at negative pole down out of plastic tab and lift. Circuit hangs on the wire and tilts up, pull out

Repeat the steps in order to reassemble your device.