


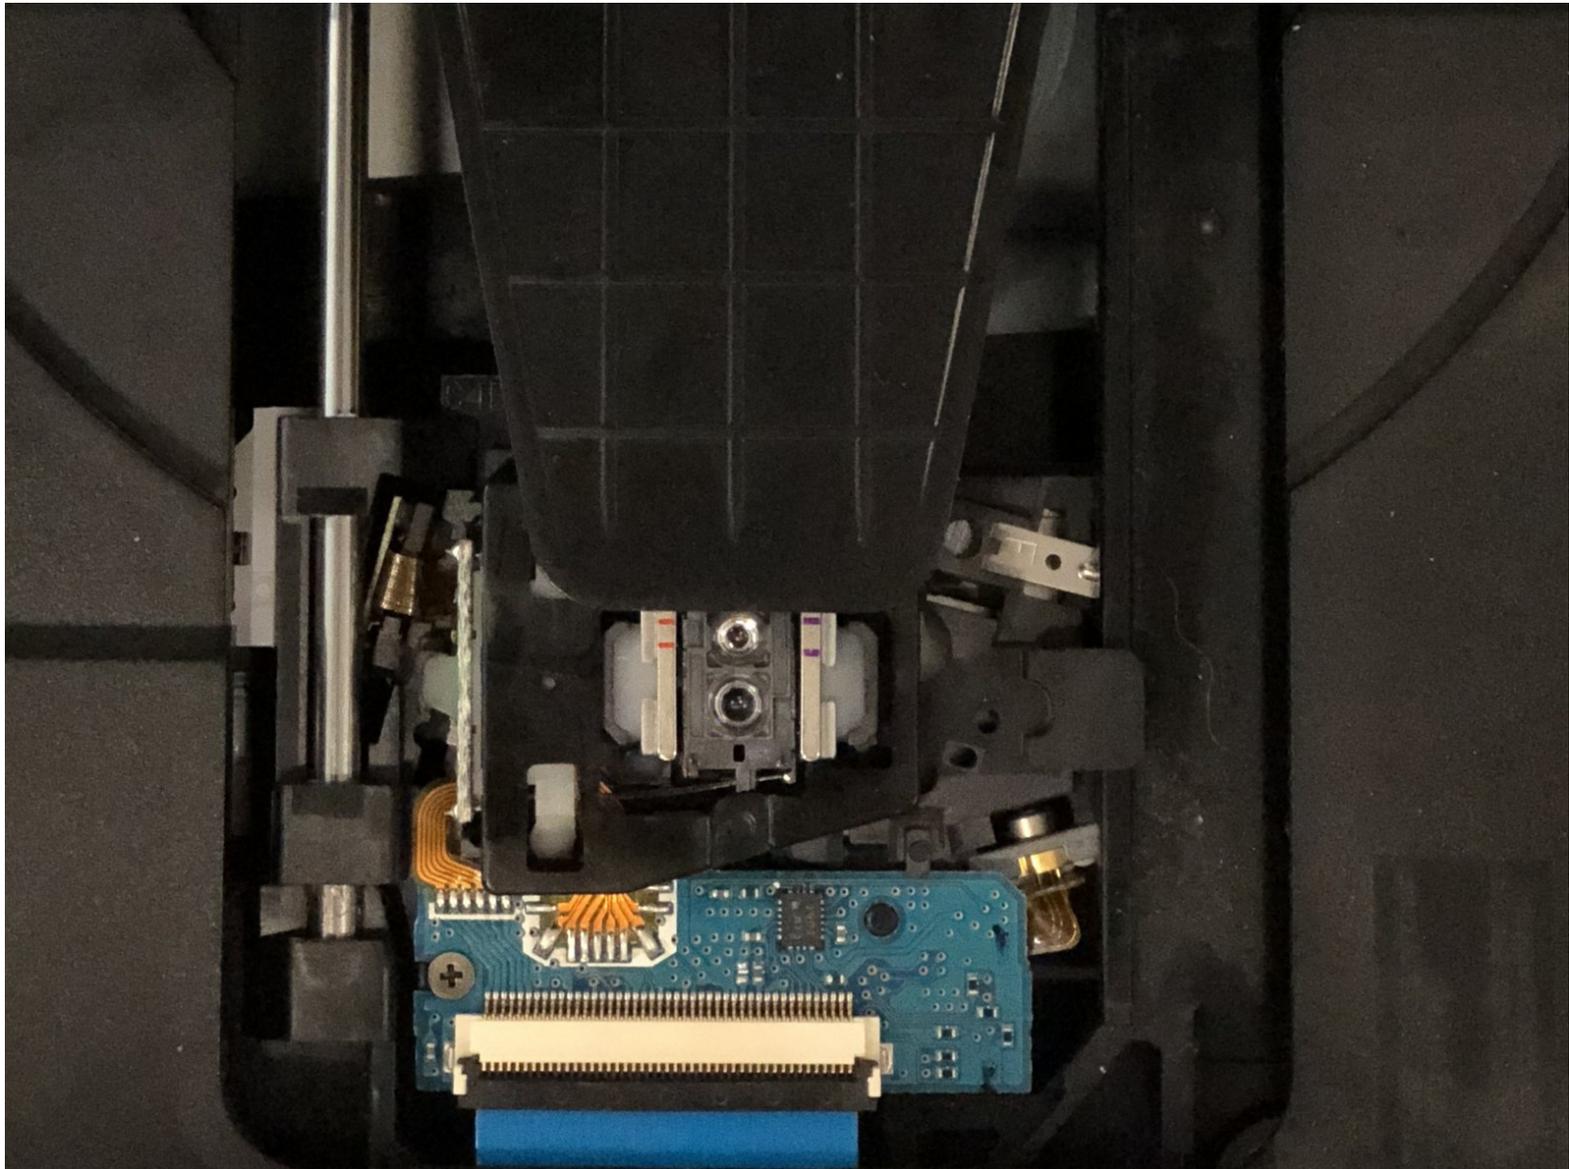

Dynex DX-WBRDVD1 Cleaning The Optical Lens

Dynex DX-WBRDVD1 Cleaning The Optical Lens. Dirty optical drive. Disk wont play.

Written By: Caleigh Firth




INTRODUCTION

Cleaning your optical drive is standard maintenance especially if your movies wont play. Here is how you get to it and clean it properly.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Microfiber Cleaning Cloths](#) (1)
-

Step 1 — Top Cover

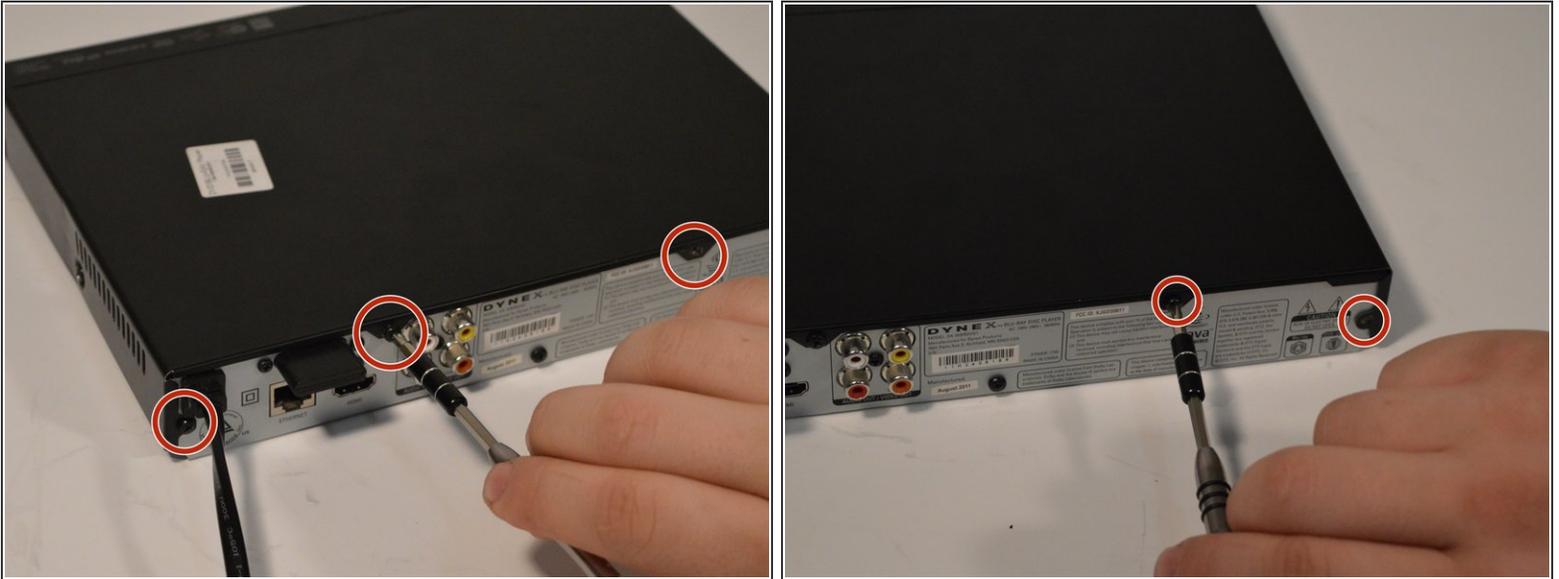


- Use a Phillips #1 screwdriver to remove the four 5mm screws that connect the black outer shell to the silver back of the device.

Step 2



- Use a Phillips #1 screwdriver to remove the two 5mm screws on the left and right side panels.
- ⓘ There is one screw on each side that secures the cover to the body of the device.


Step 3

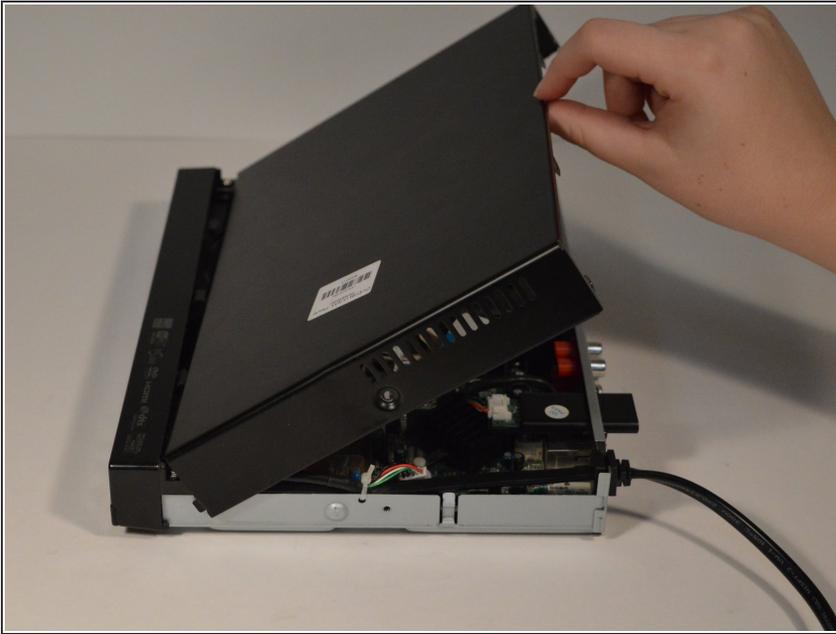

- Lift the black cover to a 45 degree angle from the rear of the device and pull away from the device.


⚠ Check that the power cord is not preventing the device from opening or closing.

Step 4 — Dynex DX-WBRDVD1 Cleaning The Optical Lens

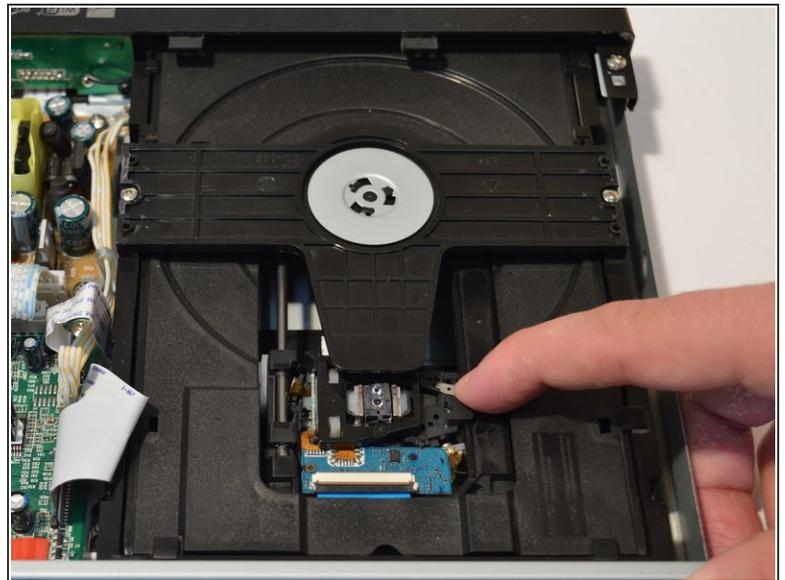

- To access the optical lens, pull back the optical drive as shown in the pictures located on the two metal rails.

Step 5

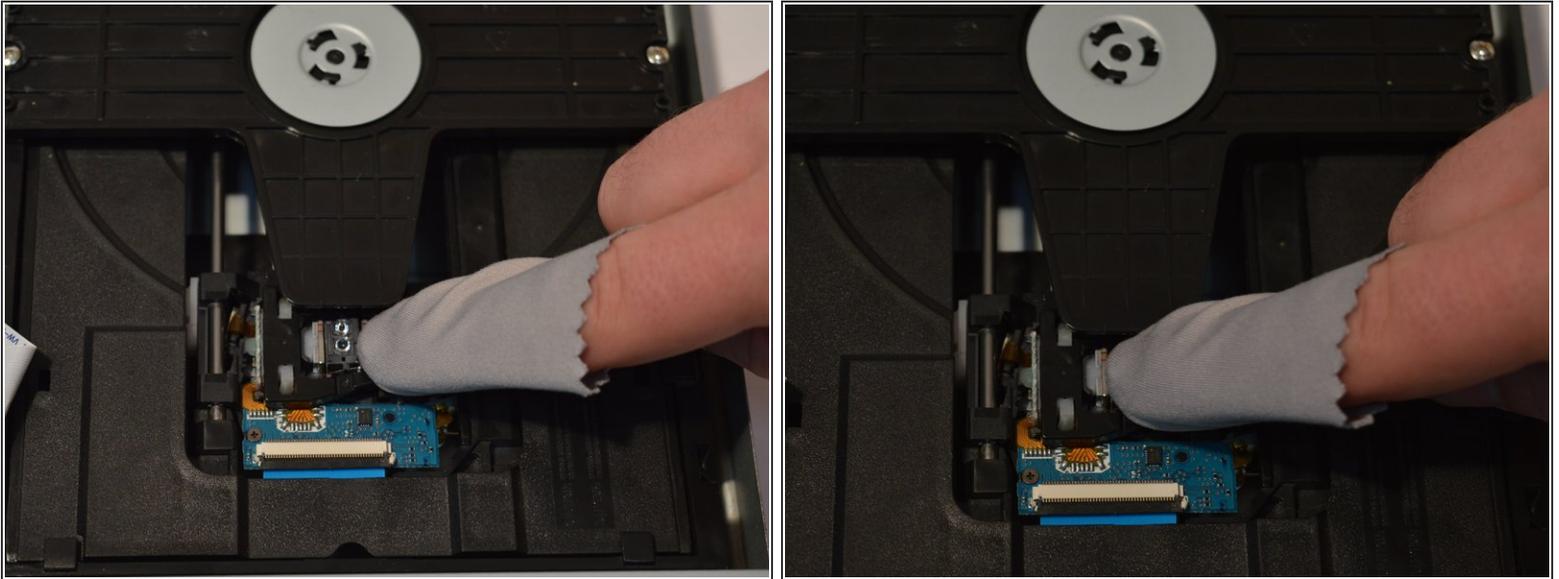

 Clean the optical lens by rubbing gently with a microfiber cloth.

To reassemble your device, follow these instructions in reverse order.