



Dynex DX-WBRDVD1 Power Supply Board Replacement

Dynex DX-WBRDVD1 Power Supply Board Replacement

Written By: Caleigh Firth




INTRODUCTION

The power board is found adjacent to the motherboard inside the device. This guide will take you through the steps of removing the powerboard for replacement.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Top Cover

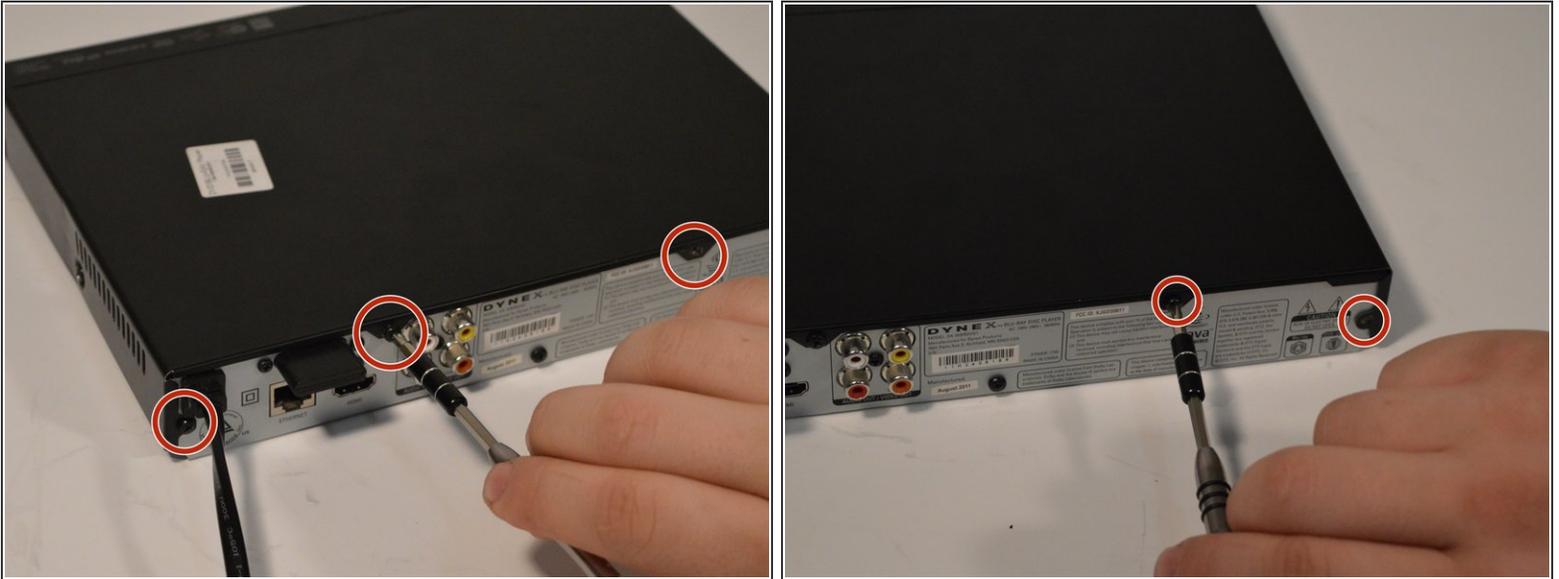


- Use a Phillips #1 screwdriver to remove the four 5mm screws that connect the black outer shell to the silver back of the device.

Step 2



- Use a Phillips #1 screwdriver to remove the two 5mm screws on the left and right side panels.
- ⓘ There is one screw on each side that secures the cover to the body of the device.



Step 3

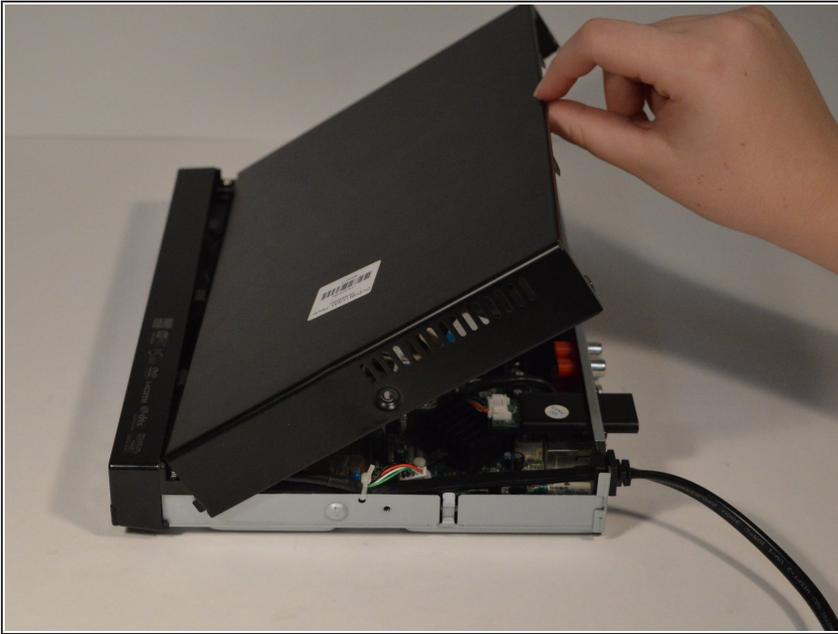

- Lift the black cover to a 45 degree angle from the rear of the device and pull away from the device.



⚠ Check that the power cord is not preventing the device from opening or closing.

Step 4 — Power Supply Board

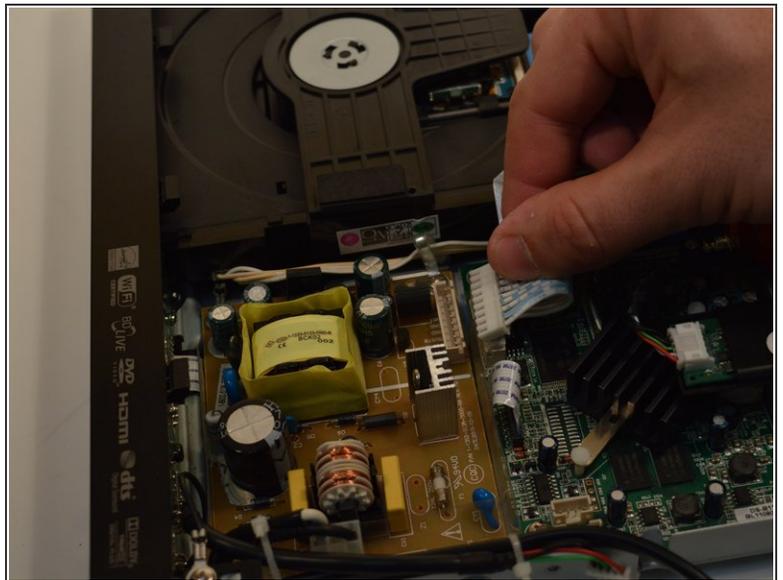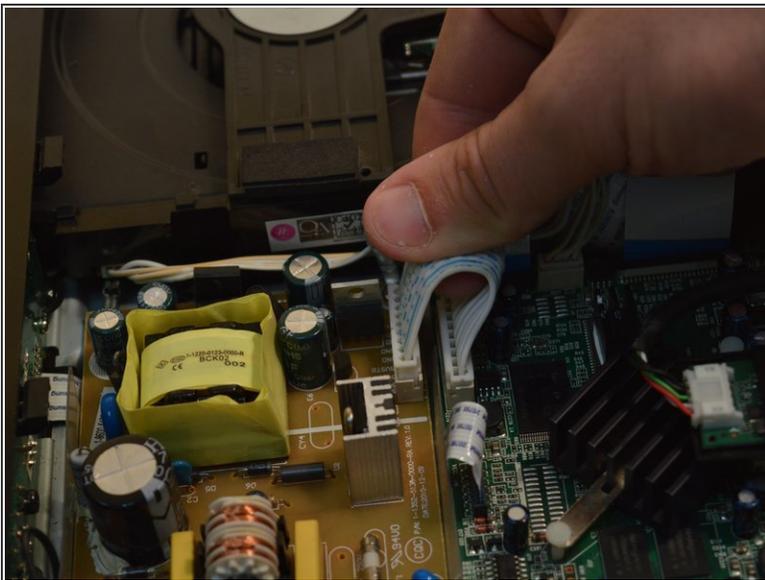

- Remove the 9-pin white wire connecting the power board to the mother board.



Step 5

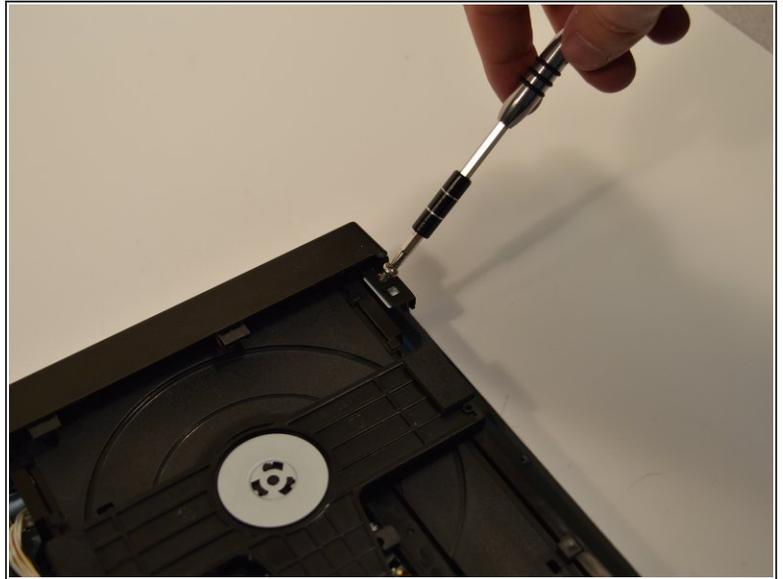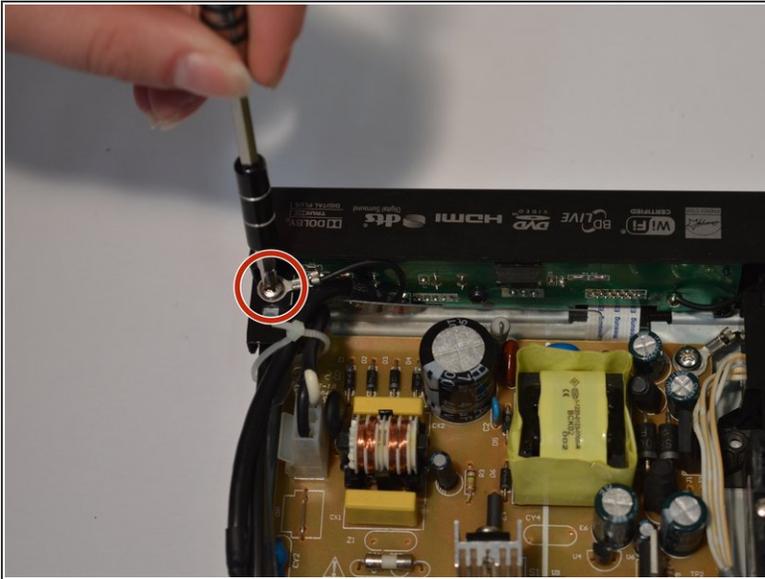

- Remove the front of the device by removing the two screws, holding it the the body of the device.

⚠ Make sure to place the grounding wire between the screw and the device when reassembling.



Step 6

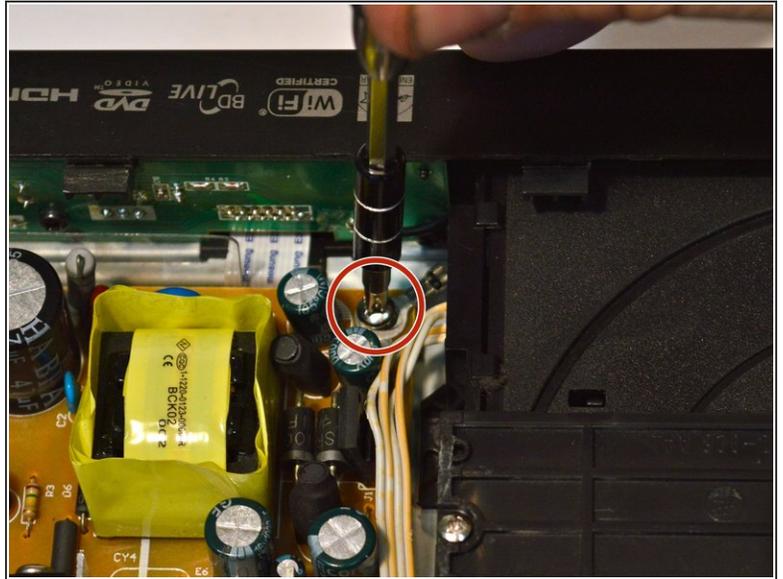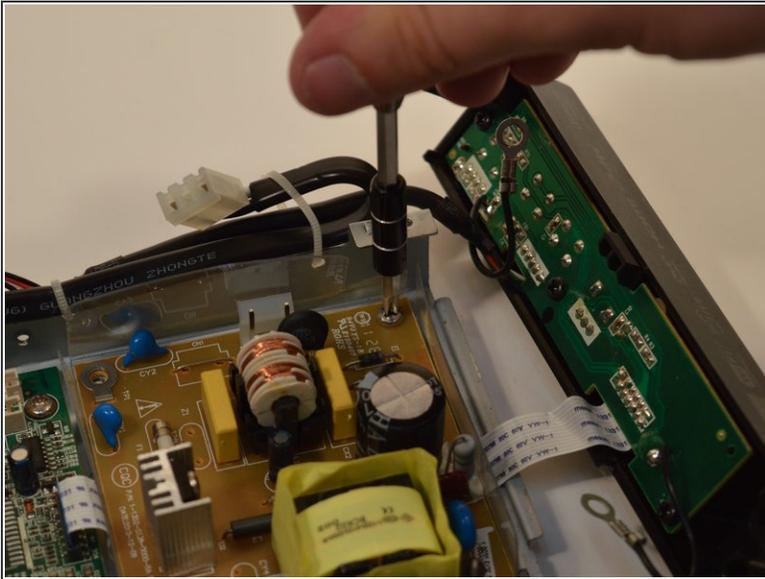

- Remove the 4 screws holding the power board to the body of the device.


⚠ Remember to connect the grounding wire to the screw next to the front panel and optical drive when reassembling.

Step 7

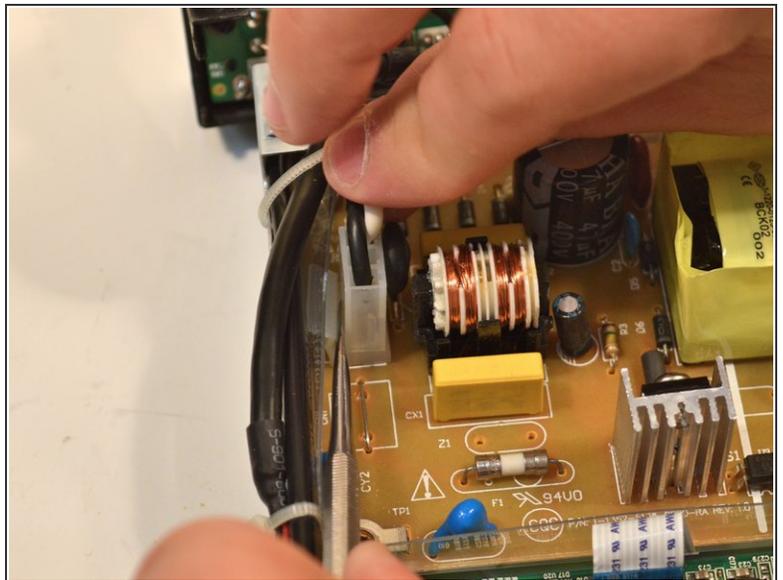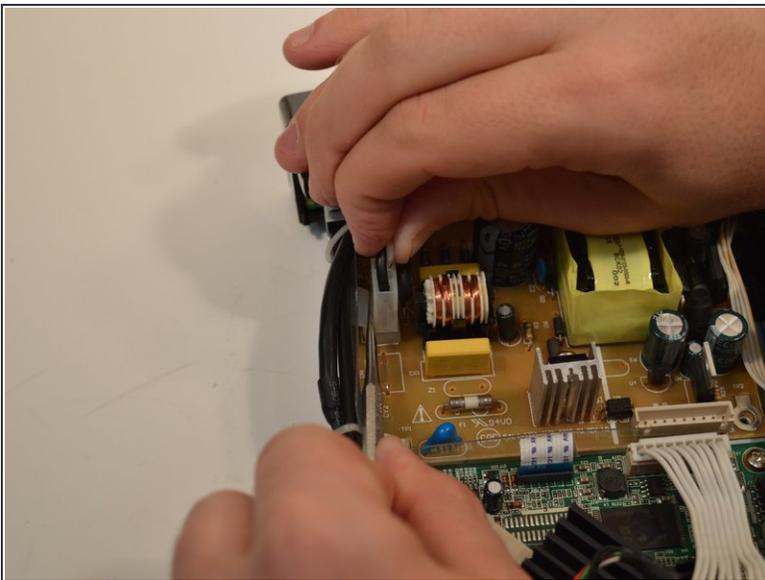

- Remove the white clip.

Step 8

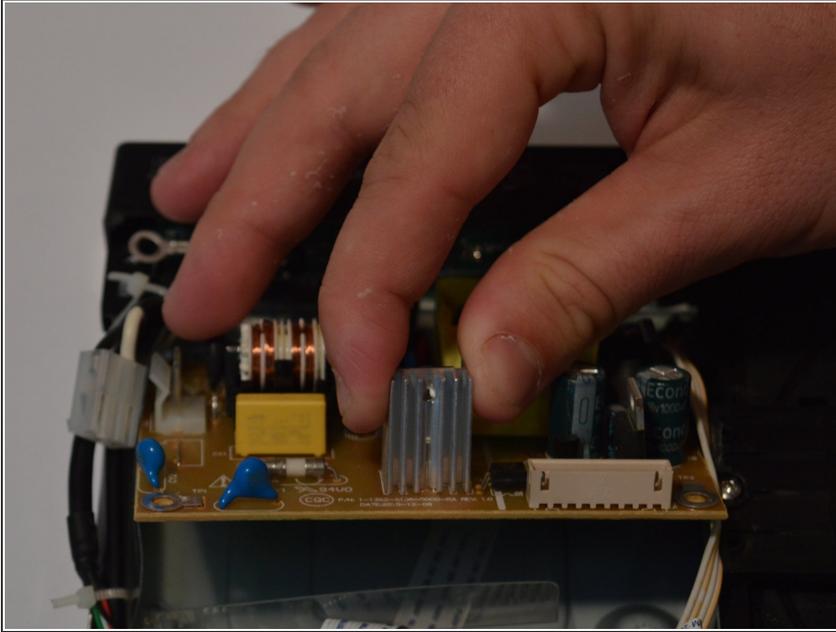

- Remove the power supply board.

To reassemble your device, follow these instructions in reverse order.