



Dyson Cinetic Big Ball Animal Upright Brushbar Power Button Replacement

This guide demonstrates how to replace the brushbar power button on the Dyson.

Written By: Karla Sunjara



INTRODUCTION

The Dyson brushbar power button is located in between the handle and the dust bin on the front of the vacuum.

TOOLS:

- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

Step 1 — Brushbar Power Button



- Gently pull up on red handle to separate the hose from the external hose of the Dyson.

Step 2




- Locate the 18mm four screws on the Dyson above the sticker.

Step 3



- Unscrew the four 18mm screws.

Step 4

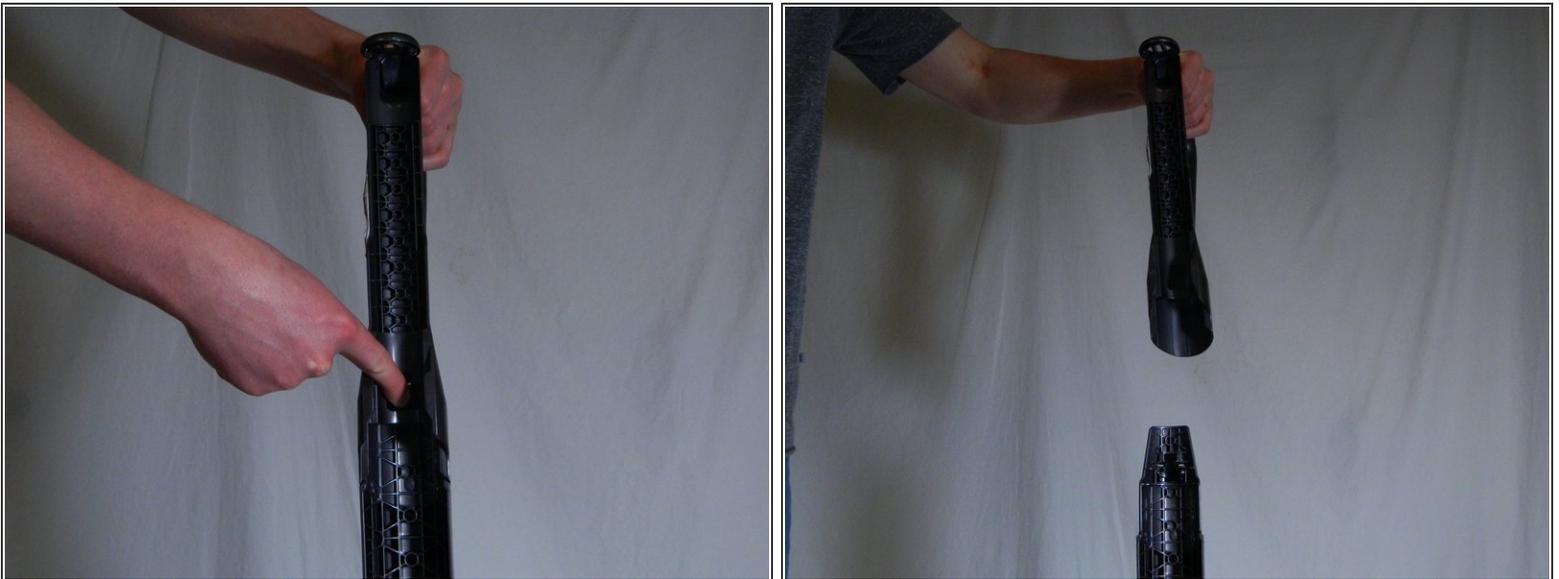


- Locate and push the grey button (where the index finger is pointing) while simultaneously pulling up on the handle.

Step 5



- Pull on the plastic case below the power and brush bar buttons to separate it from the Dyson.

Step 6

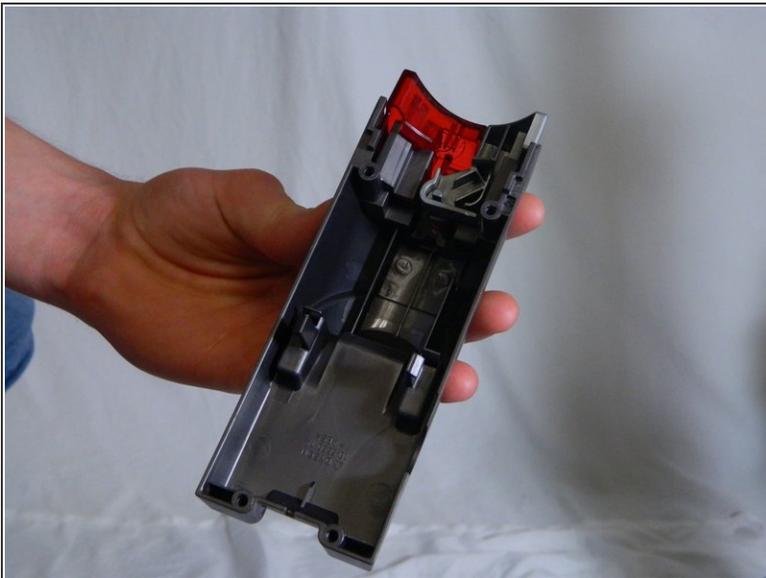

- Slide the buttons out from the case and replace.

To reassemble your device, follow these instructions in reverse order.