




# Dyson DC14 Power Cord Replacement

This guide will instruct you on how to replace the power switch on your Dyson DC14 vacuum.

Written By: Donald Percivalle

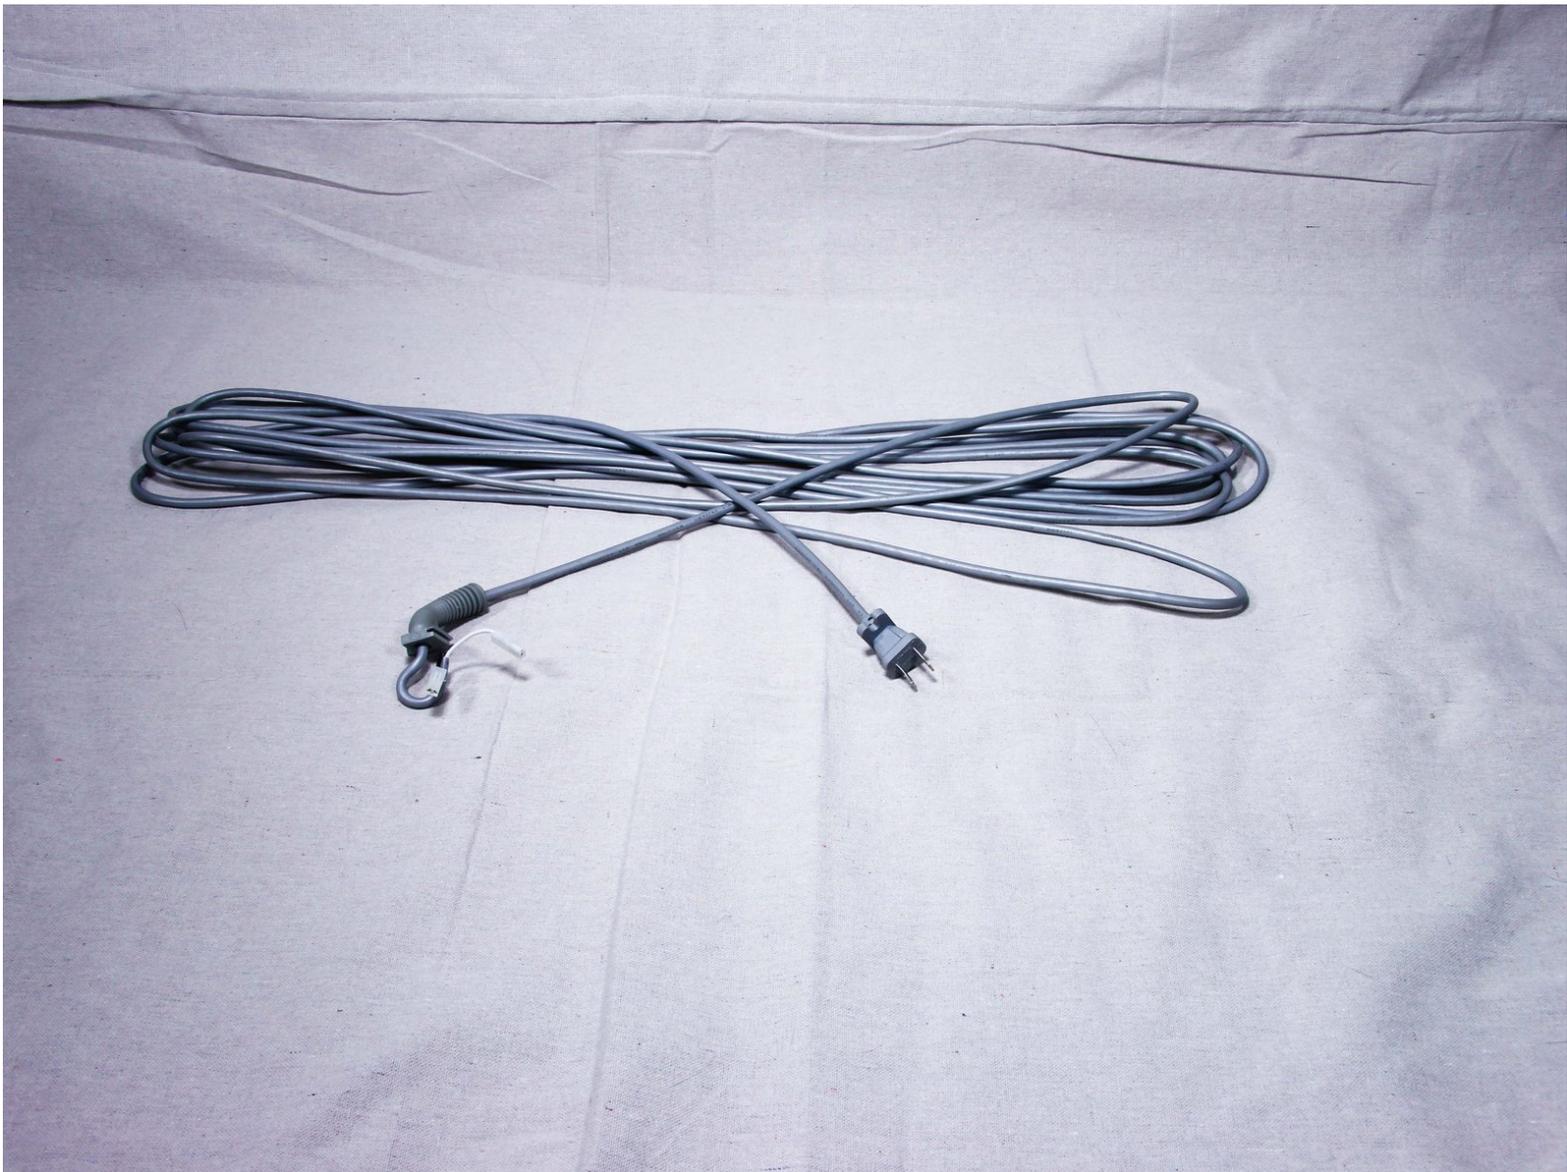

## INTRODUCTION

This guide will show you the steps necessary to replace the power cord on your Dyson DC14 vacuum cleaner.

### TOOLS:

- [T15 Torx Screwdriver](#) (1)

### PARTS:

- [Dyson DC 14 Power Cord](#) (1)

## Step 1 — Power Switch



- i** Start with your Dyson DC14 unplugged, standing upright and facing towards you.
- Remove the canister from the vacuum.
  - Disconnect the telescopic vacuum wand.
  - Remove the two T15 Torx screws securing the switch cover to the vacuum.

## Step 2




- Push outward on the two plastic clips that secure the switch cover to the vacuum.

## Step 3




- Remove the switch cover from the vacuum.
- ⓘ The purple switch button may separate from the rest of the switch cover.

## Step 4

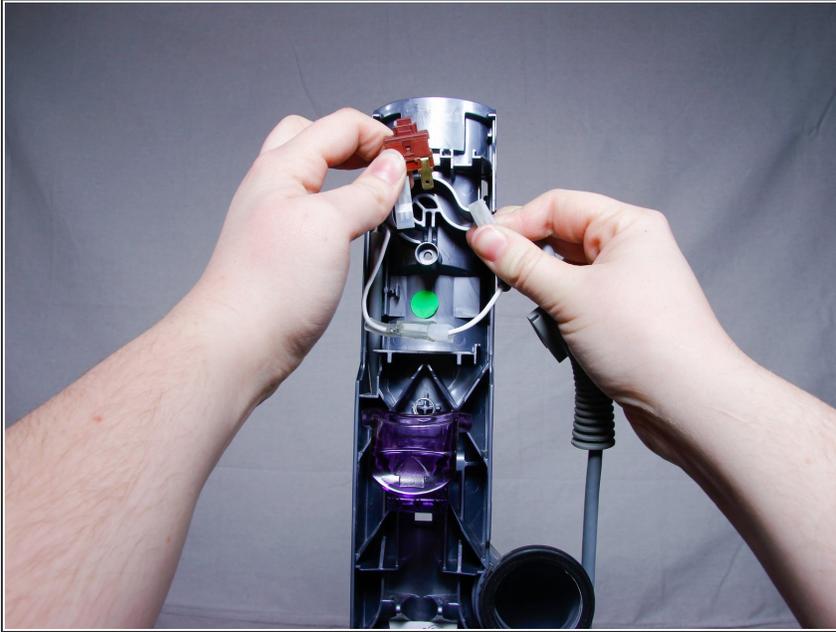

- Holding them by their white plastic coverings, firmly pull the two wires from the power switch.
- ⚠ Be sure to grip the wires from their attached connectors. Pulling directly on the wires could damage your vacuum.
- ☞ The terminals will only fit one way during reassembly. Only one of the wires is long enough to reach the far terminal of the switch.

## Step 5 — Power Cord

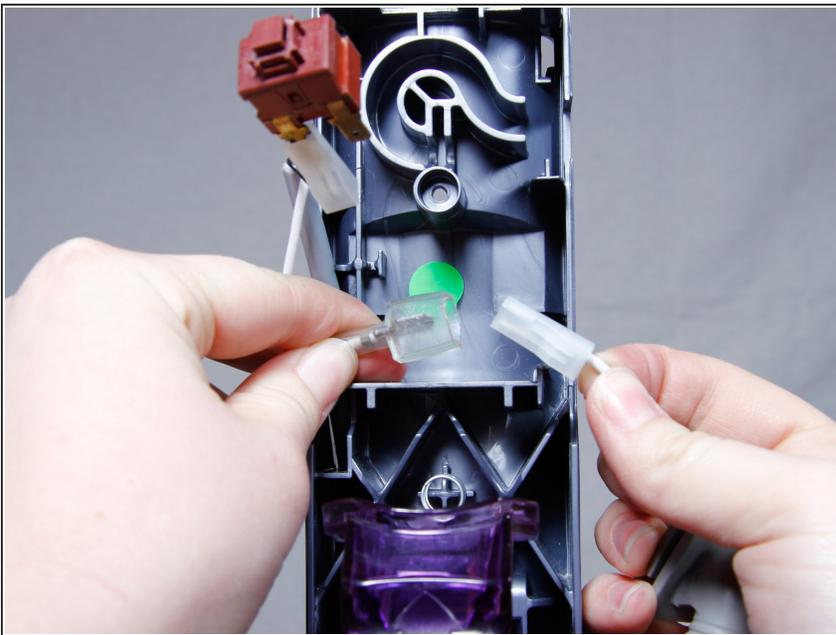

- Remove the other terminal for the power cord that connects to the terminal below the power switch.
- Holding them by their connectors, separate the remaining wire of the power cord from the internal power cable.

To reassemble your device, follow these instructions in reverse order.