



Flip Video Ultra USB Spring Replacement

If the spring button is stuck or otherwise not working, this guide will walk you through it,

Written By: Nathaniel Ruf



INTRODUCTION

This guide will help you replace the USB spring should it need replacement. The only tool needed is the Phillips #1 Screwdriver. It should only take 10 minutes.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — USB spring




- Unlock the battery cover by sliding the switch to the unlock position.

Step 2

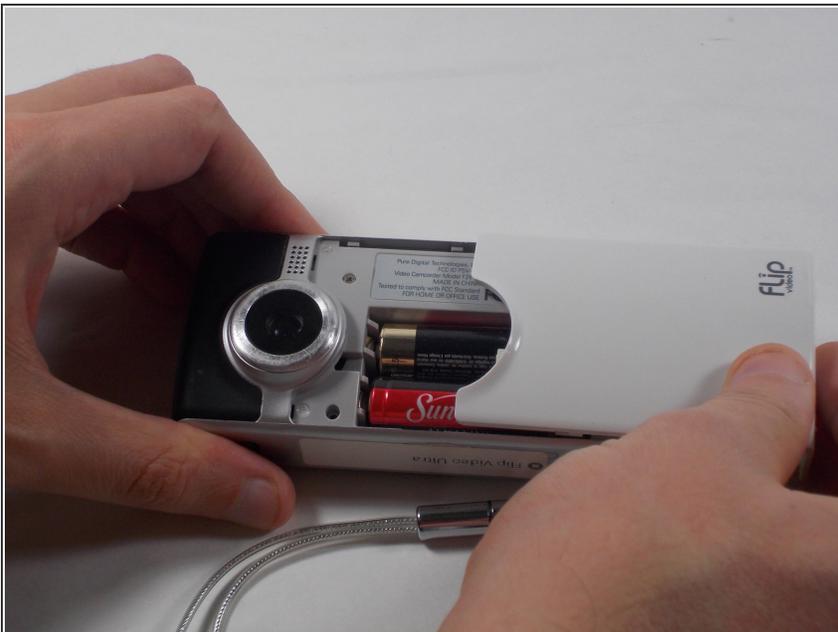

- Remove the battery cover by sliding it down the camera.

Step 3

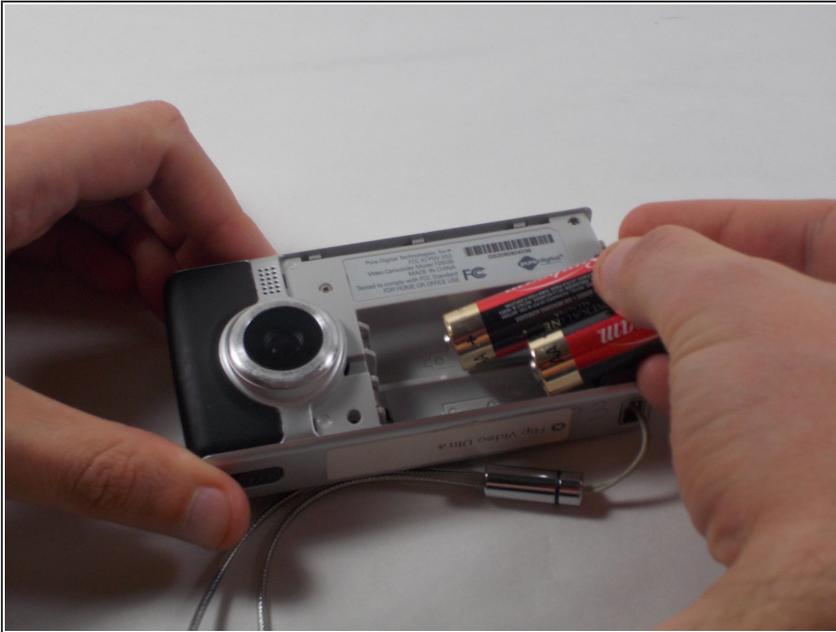



- Remove the batteries

Step 4



- Slide the black upper casing off from the device.

Step 5

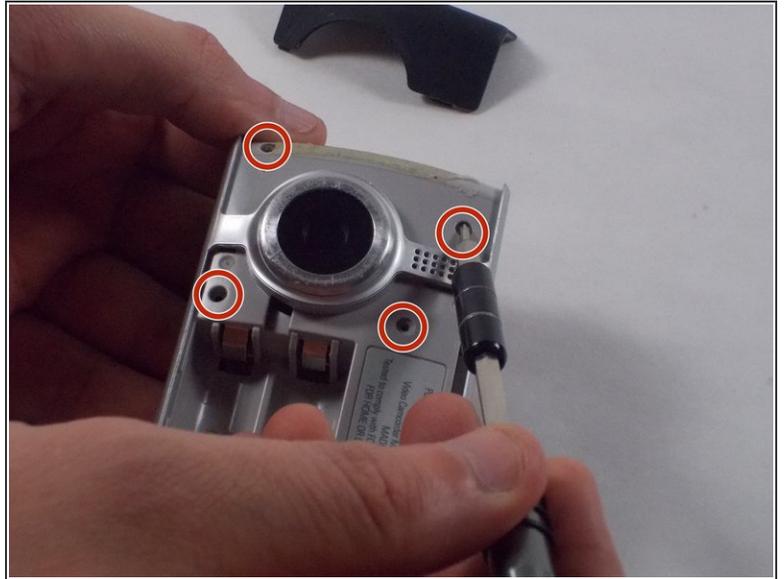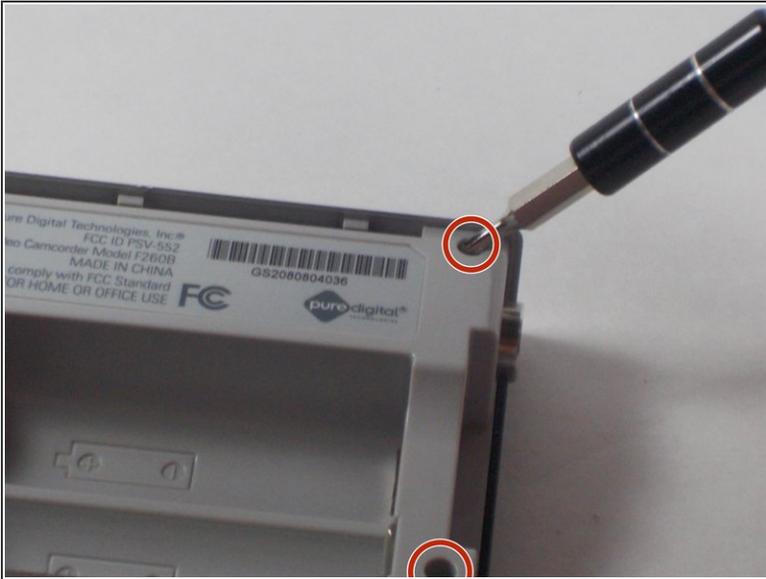


- Remove the six 1mm screws from the back and upper casing with the Phillips Head screwdriver.

Step 6



- Remove the top casing from the bottom to reveal the inner circuit board.


Step 7

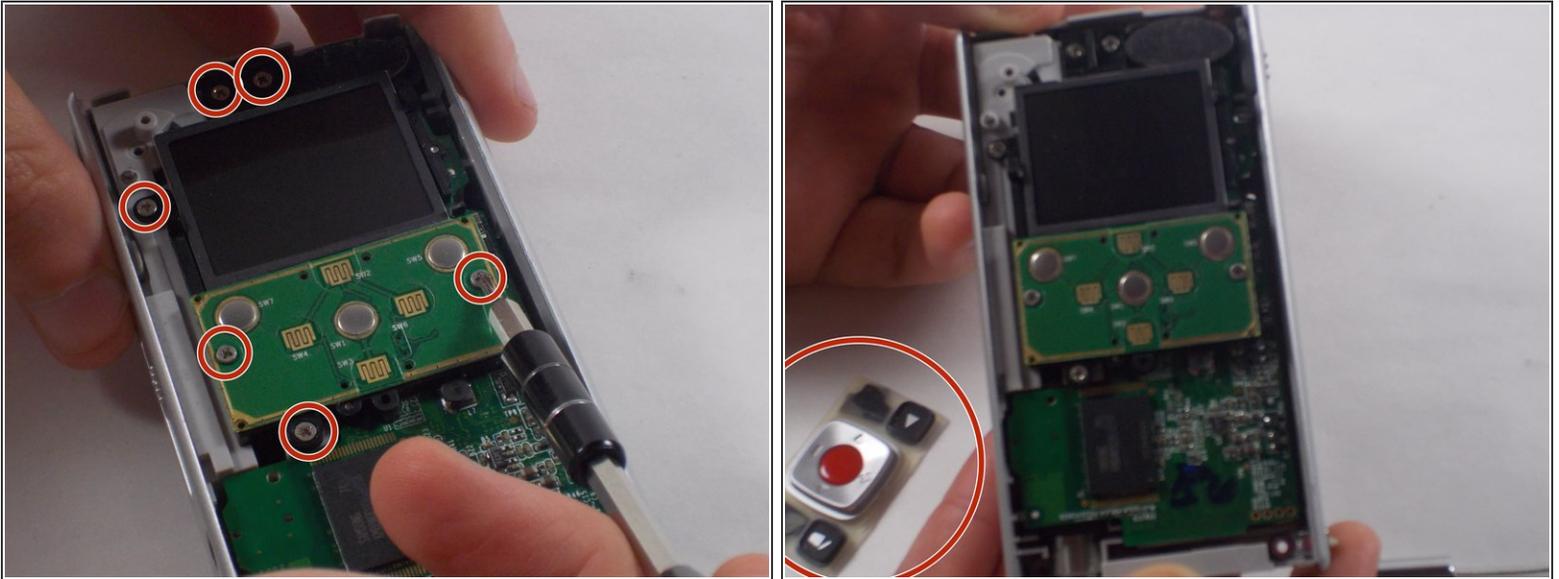

i When removing the back panel, the rubber buttons will become loose and likely fall off the board. This is normal and can easily be placed back on the board once finished.


- Remove the six 1mm screws with the 1 Phillips head screwdriver.

Step 8

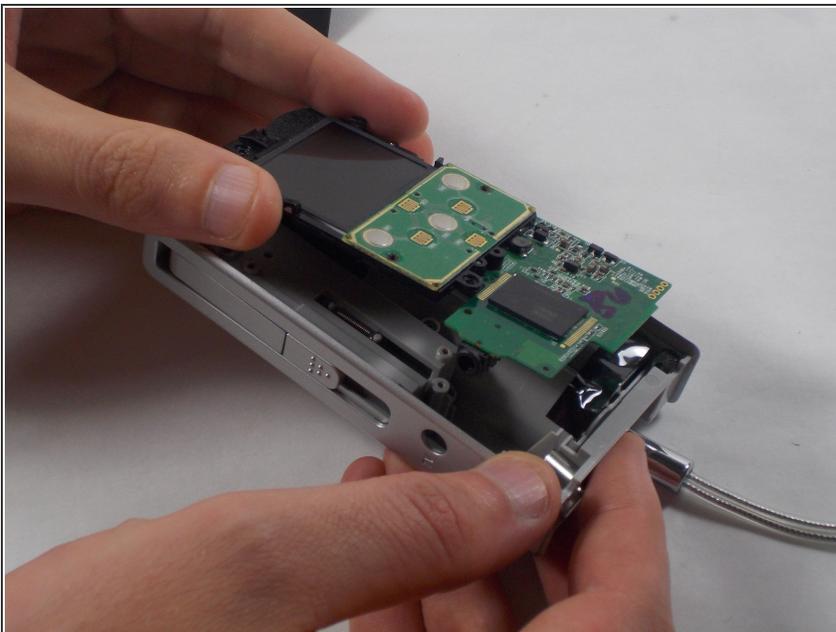

- Gently separate the circuit board from the casing.

Step 9

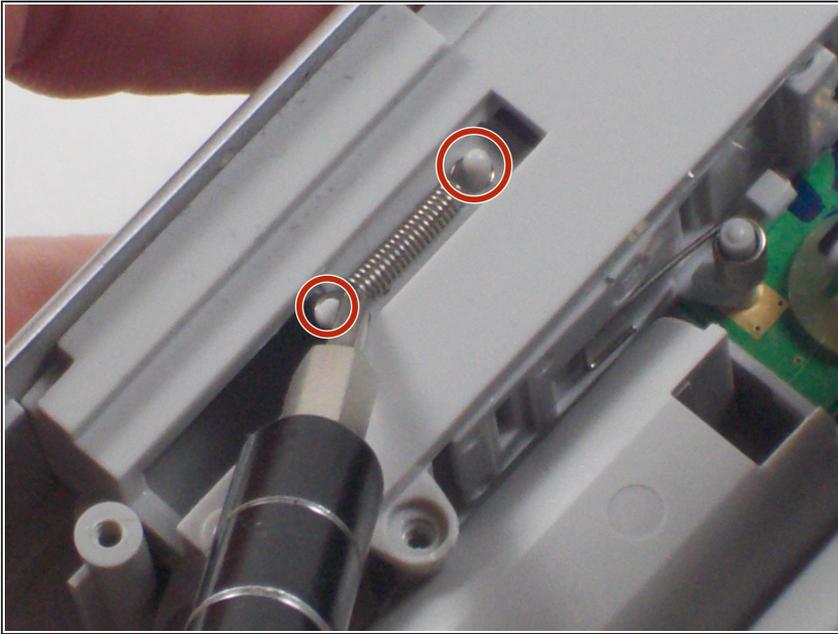

- Using the Phillips head screwdriver, disconnect spring from the plastic nubs.

To reassemble your device, follow these instructions in reverse order.