




FujiFilm FinePix A340 LCD Screen Replacement

Written By: Cody

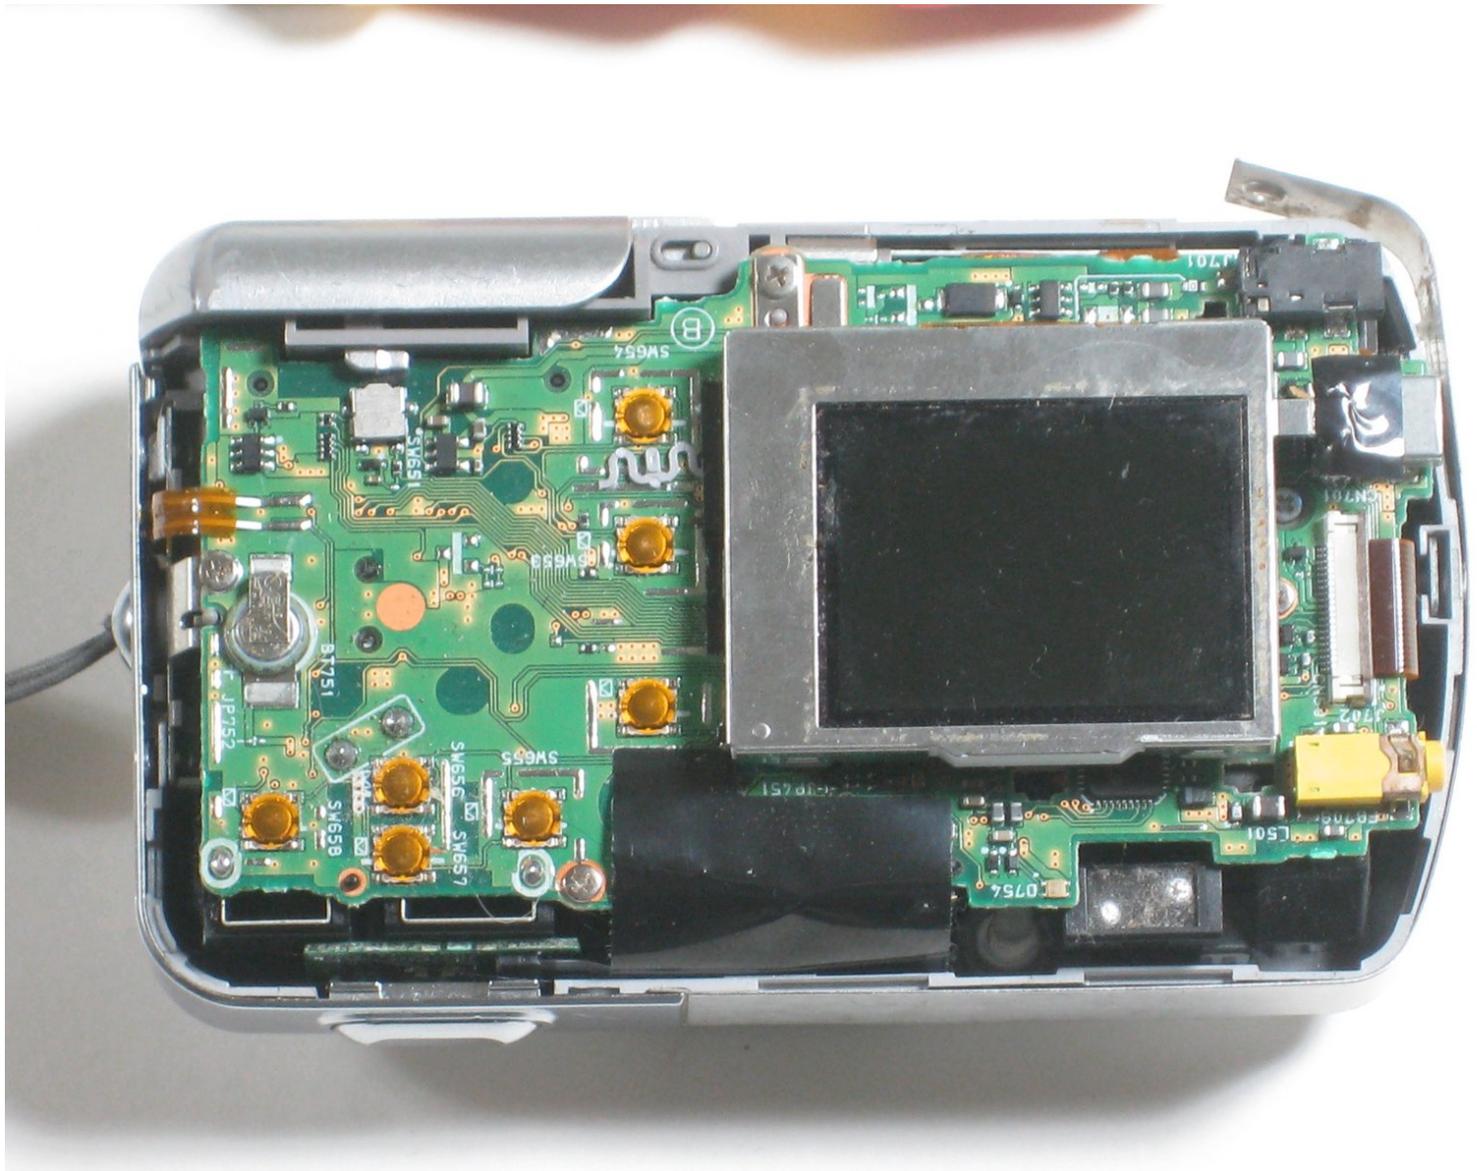

INTRODUCTION

Remove and replace LCD screen.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tri-point Y0 Screwdriver](#) (1)
-

Step 1 — Outer Case



- Remove the batteries from the camera to prevent danger of electric shock.

Step 2



- Locate all five screws on the camera. Then proceed to remove all the screws.



Step 3



⚠ Beware, if your screwdriver does not fit properly, you may damage the screws' heads.

- If your screwdriver does not fit, or you do not have the proper one, you can use a hot glue gun to fix the screwdriver to the head of the screw. Wait for it to harden slightly, and then try to remove the screws.

Step 4

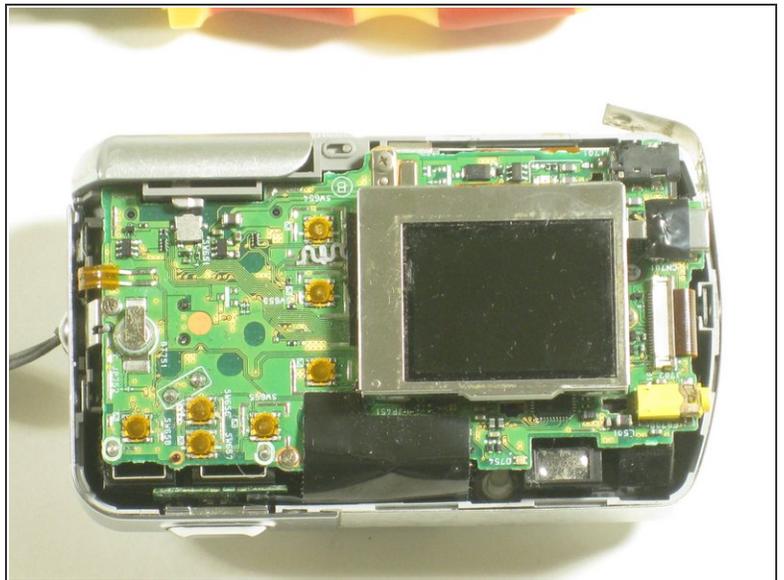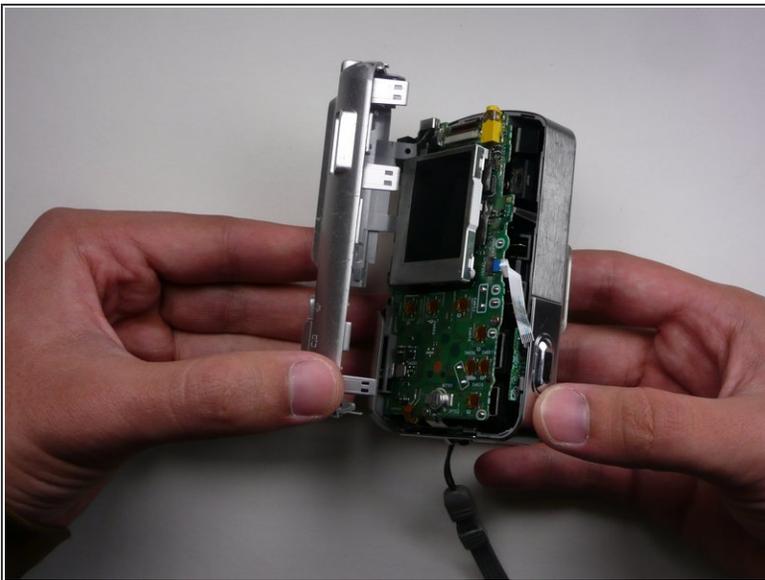

- Remove outer case. Pull the back away from the main body of the camera.

Step 5 — LCD Screen




- Locate the LCD screen and anchoring screw.
- Remove screw.

Step 6




- Carefully pull the LCD screen away from the board it is connected to.

Step 7

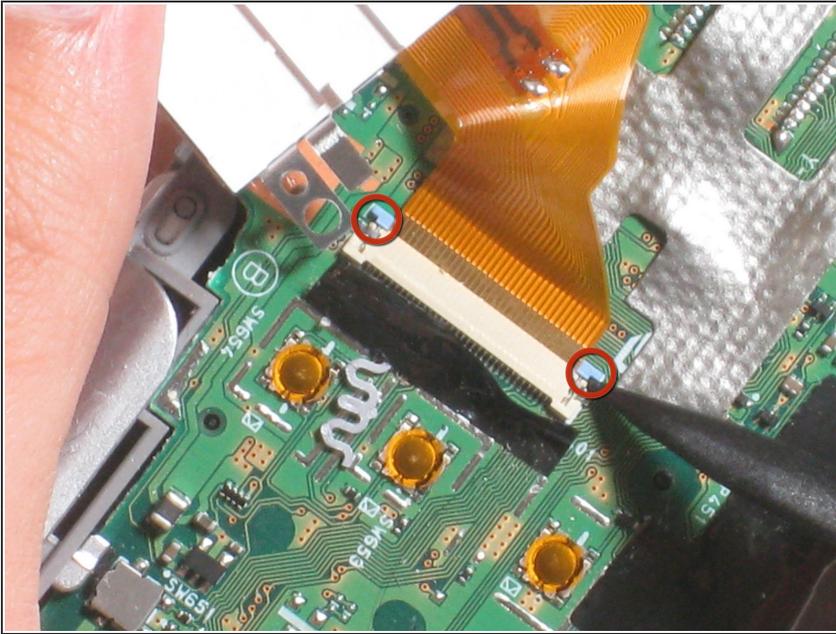


- Push both blue switches away from the holding device to unlash lcd ribbon.
- ⚠ Be careful when removing ribbon. If you damage it, you will need to replace it as well.

Step 8

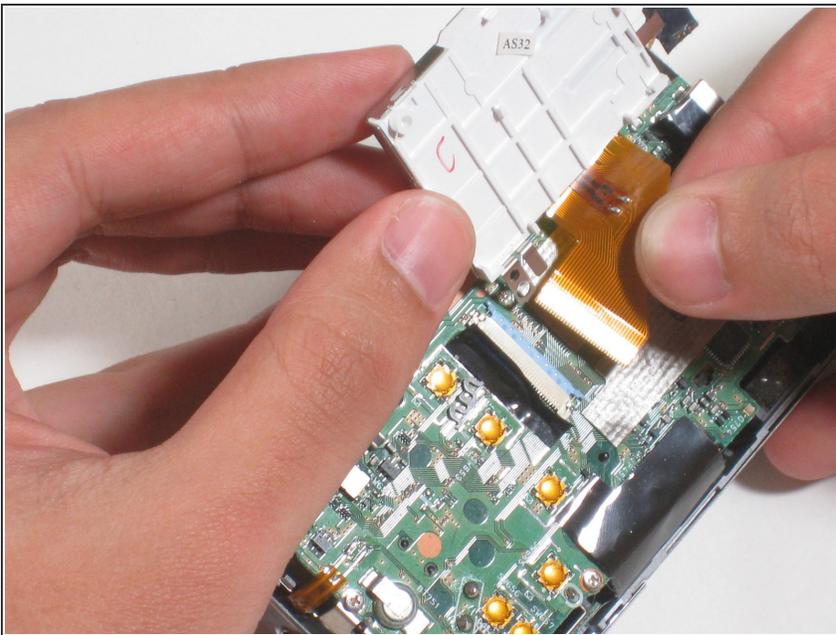

- Carefully detach the ribbon from where it was connected by the blue pins.

Step 9

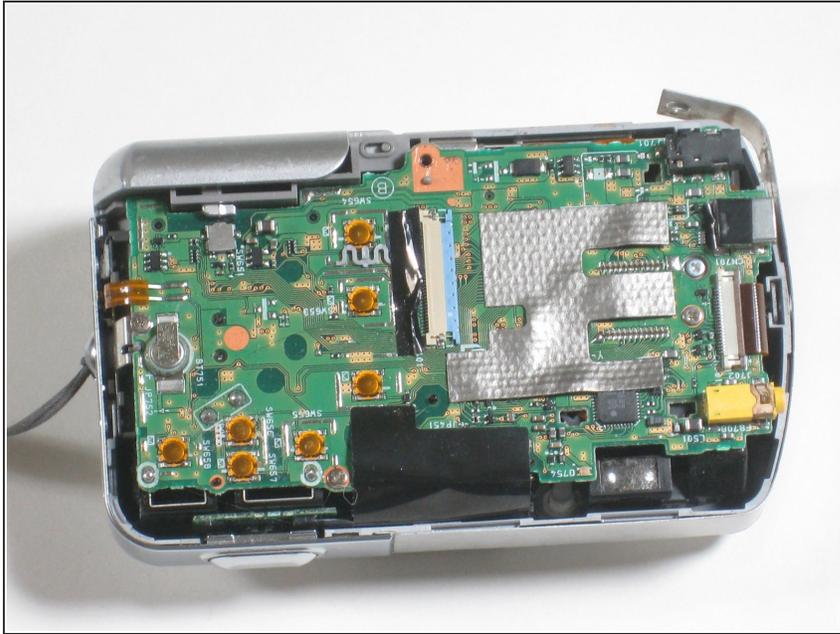

- Now that everything has been disconnected from the board, remove LCD screen.

To reassemble your device, follow these instructions in reverse order.