



Fujifilm FinePix XP80 Shutter Button Replacement

This guide will help you replace a broken shutter button on the Fujifilm FinePix XP80.

Written By: Daniela Pesci



INTRODUCTION

The shutter button is the main communication point between you and your camera's main function: taking photos. When it's malfunctioning, you'll need a way to fix it. This guide will help you do just that.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Open the side panel which houses the battery compartment. Press the center button down and twist the dial.

Step 2



- Release the battery from its secured position by pulling the orange tab back. The battery can then be removed from its compartment.

Step 3 — Exterior Case



- Using a Phillips PH000 bit, remove the five 2mm screws on the bottom of the camera.

Step 4




- Using a H1.3 hex head bit, remove the two 2mm screws from the top of the camera.

Step 5



- Using a H1.3 hex head bit, remove the two 2mm screws on the side of the camera.

Step 6

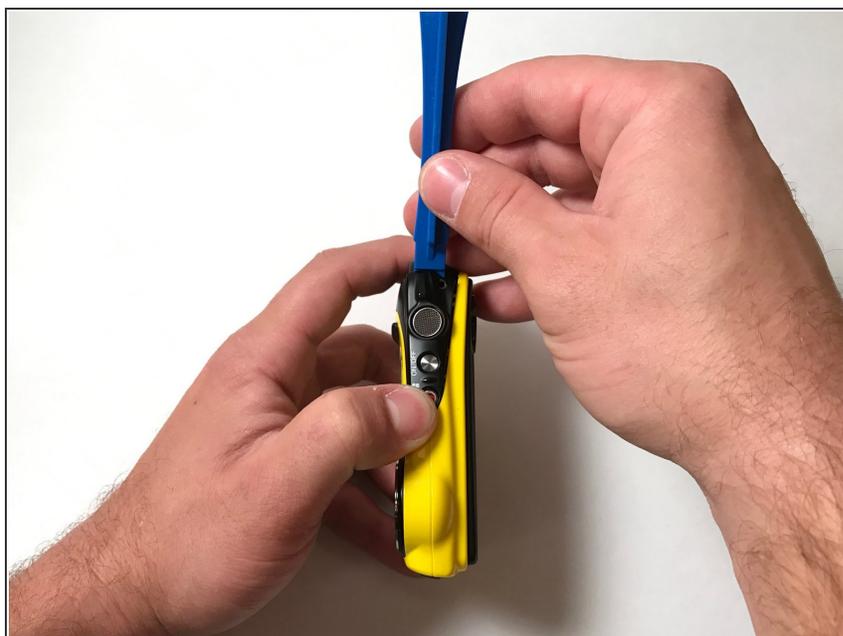

- Using a plastic opening tool, gently pry up the edge of the button case, located at the top of the camera, until it unclips.

Step 7



- Gently pry the side area of the case apart.

Step 8




- Continue using the opening tool on the bottom of the camera to gently pry the case apart.

Step 9



- Use the plastic opening tool to carefully pry the yellow front panel completely away from the camera.
- Use your hands to take off the yellow back panel.

Step 10 — Shutter Button

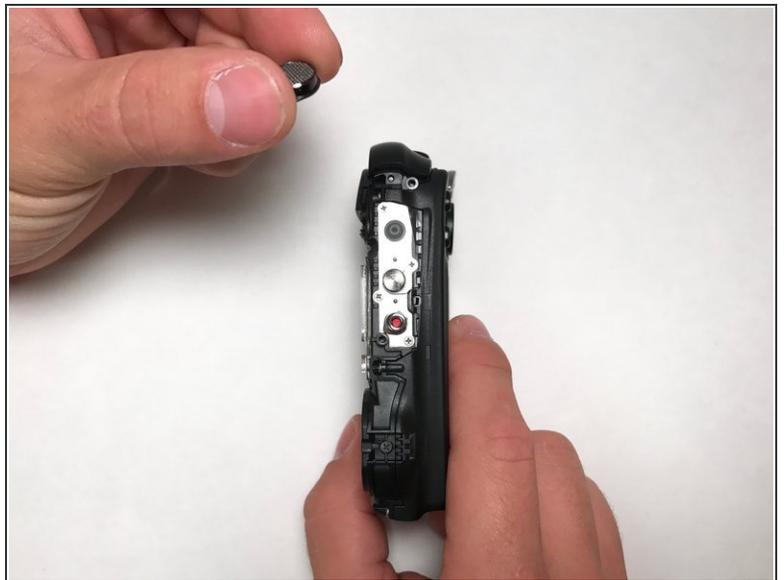

- Once the exterior case is removed, separate the plastic depressor to ensure there is nothing lodged in or around the button, preventing proper functionality.

To reassemble your device, follow these instructions in reverse order.