



Fujifilm Finepix S1800 Shutter Button Replacement

Shutter button replacement for the Fujifilm Finepix S1800.

Written By: Ryan Rockford



INTRODUCTION

Is the button to take a photo on your Fujifilm Finepix S1800 jammed or broken? This guide will show you step by step on how to replace the jammed or broken button.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)

PARTS:

- [Fujifilm Finepix S1800 Camera Button](#) (1)

Step 1 — Back Cover Assembly



- Use a J000 screwdriver to unscrew all the four 4mm screws on the left-hand side of the camera.

Step 2




- Use a J000 screwdriver to unscrew the four 4mm screws on the right-hand side of the camera.

Step 5 — LCD Screen




- Use a screwdriver to remove the three 2 mm screws from the back cover plate.
- Gently lift the back cover away from the device, but do not pull or yank free.
- ⚠ The LCD screen is still connected to the motherboard via a small ribbon cable.

Step 6

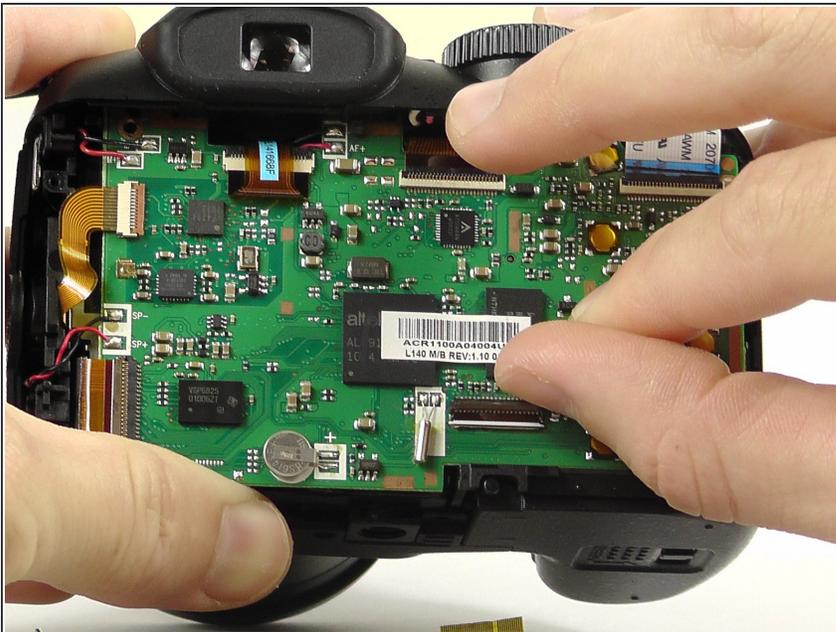

- Move the lever to disconnect the ribbon cable from the circuit board.
- ⚠ Avoid ripping the fragile micro ribbon cable.

Step 7

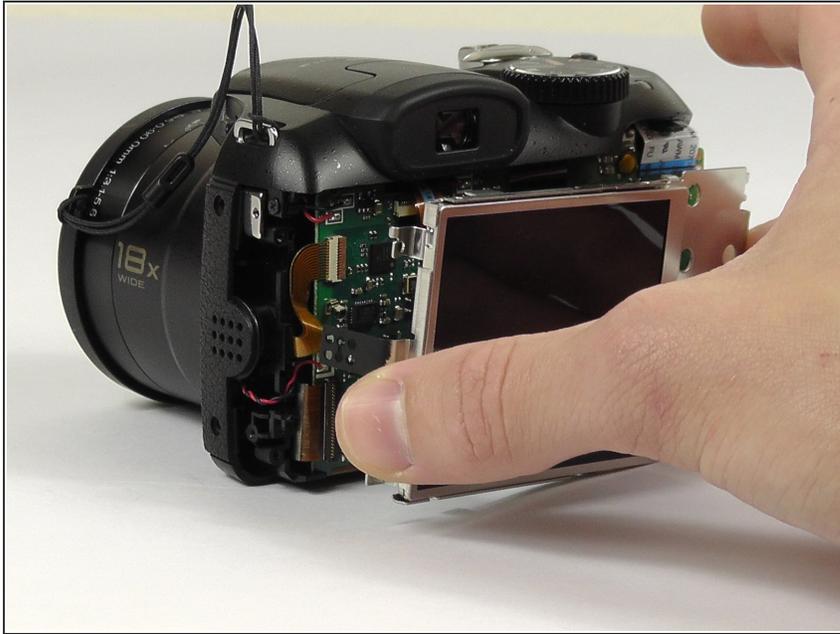

- Gently remove the LCD screen. Avoid touching it directly.

Step 8 — Top Cover



- Lift the flash.
- Using a J000 screwdriver, remove the two 4mm screws from the top of the camera.

Step 9



- Remove the 4mm screws from the left and right sides of the camera.


Step 10



- Switch the lever to disconnect the micro strip that connects the top plate.


⚠ Use caution to avoid ripping the micro strip.

Step 11

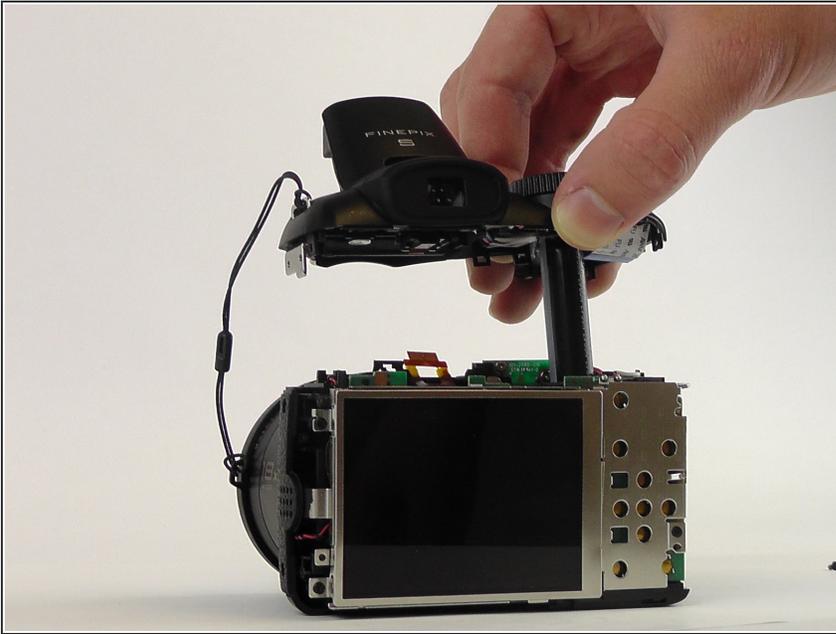

- Remove the top cover.

Step 12 — Shutter Button

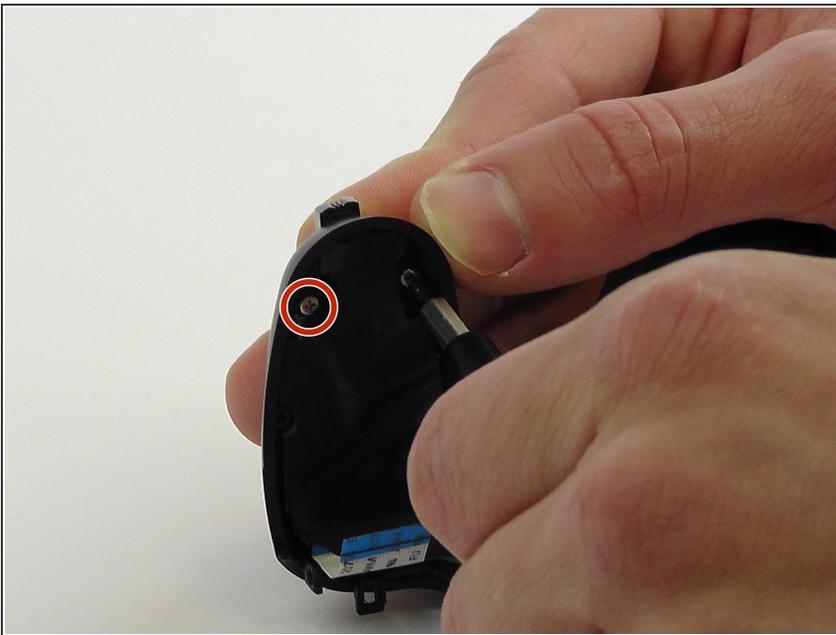

- Once the top plate cover is taken off, take the screwdriver and unscrew the two 2 millimeters screws underneath the plate.

Step 13



- Once the two 2 millimeter screws are out the button will fall right out.

To reassemble your device, follow these instructions in reverse order.