



# GATEWAY ML6720 wireless card Replacement

Detailed steps on the replacement of the laptop's wireless card.

Written By: Nathan Da Silva



 **TOOLS:**

- Flathead 3/32" or 2.5 mm Screwdriver (1)
  - Tweezers (1)
  - 1.5 mm Flathead Screwdriver (1)
-

## Step 1 — Wireless Card



- Flip the laptop on to its backside.

## Step 2



- Locate the wireless card at the middle left section of the laptop's backside.

### Step 3



- Insert the correct screwdriver mentioned in the guide.
- Loosen and remove the single screw at the top of the wireless card's cover plate.

### Step 4




- Flip the wireless card's cover plate up and off.

## Step 5



- Remove the wireless card from the compartment by first removing the two wires connected to the wireless card.

## Step 6

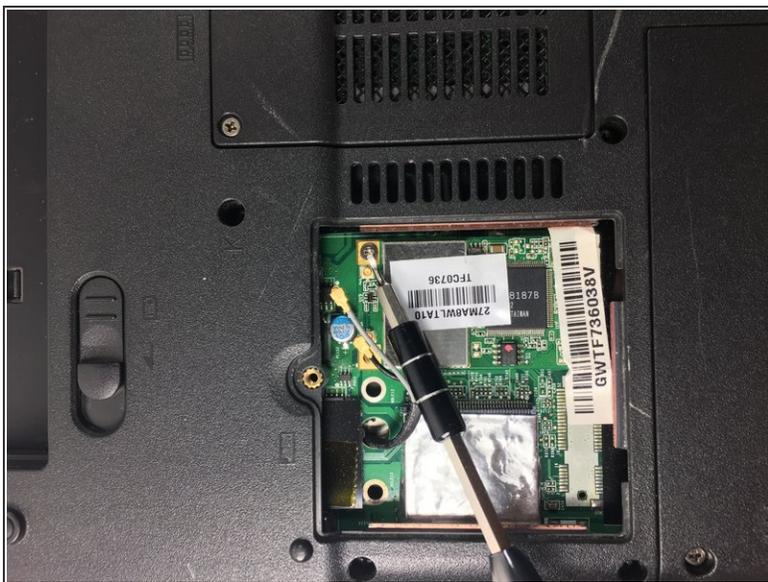

- Remove the two screws remaining at the top left and right corners of the wireless card.
- Slide the wireless card up and out of the compartment.

To reassemble your device, follow these instructions in reverse order.