



# GE 7-4836B Alarm Clock AM-FM Radio Outer Case Replacement

Replace the outer case.

Written By: Dominick Giguere



---

## INTRODUCTION


Use this guide to replace the outer case.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery Compartment Cover

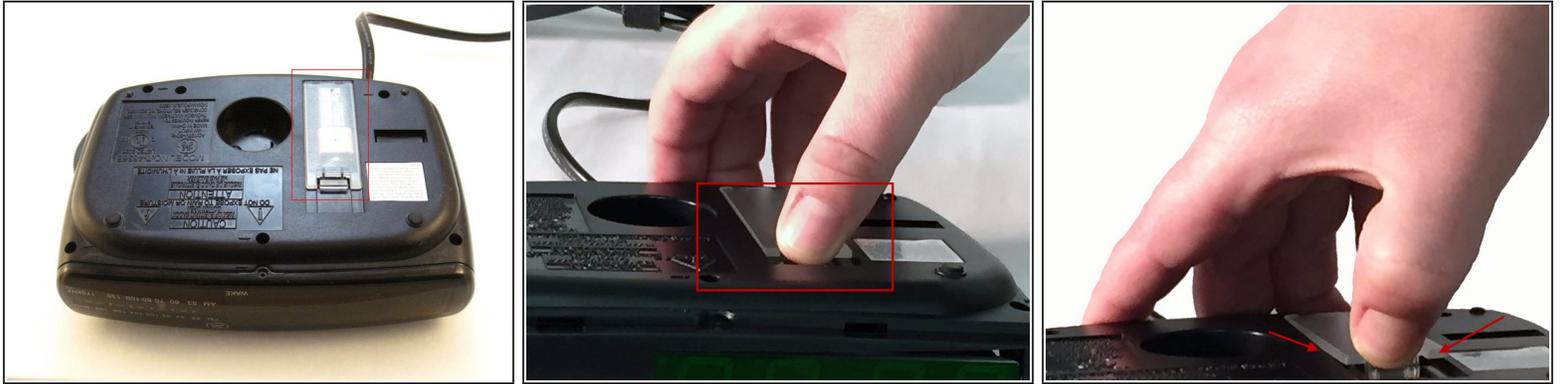

- Find the battery compartment on the bottom of the clock radio.
- Using your thumb, push the compartment cover latch toward the battery.
- With the latch pushed in, pull the compartment cover upward to remove it..

## Step 2 — Battery



- Lift the battery from the compartment.
- Pull the battery up and gently disconnect it from the battery connector.

### Step 3 — Screws



- Using a Phillips #00 Screwdriver, unscrew the six 12mm screws from around the bottom of the clock radio.

### Step 4 — LCD Cover



- Gently pull the liquid crystal display (LCD) cover off.

## Step 5 — Clock Radio



- Lift the top off. Two gray, plastic internal pieces will fall out when you do this; set them aside.

To reassemble your device, follow these instructions in reverse order.