


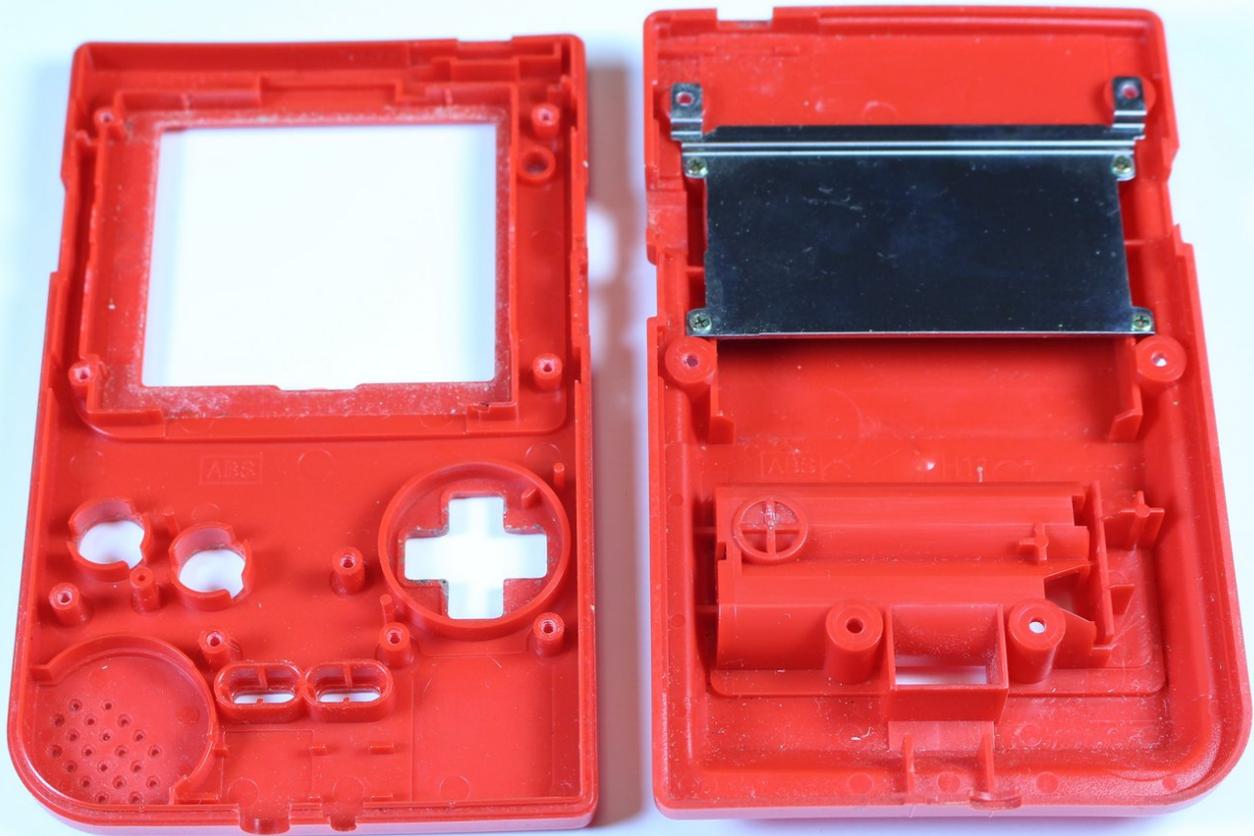

Game Boy Pocket Front Housing Replacement

Use this guide to replace a Game Boy Pocket's front housing.


Written By: Adriana Rahrig



 **TOOLS:**

- [Y1 Tri-point Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Remove the external screws

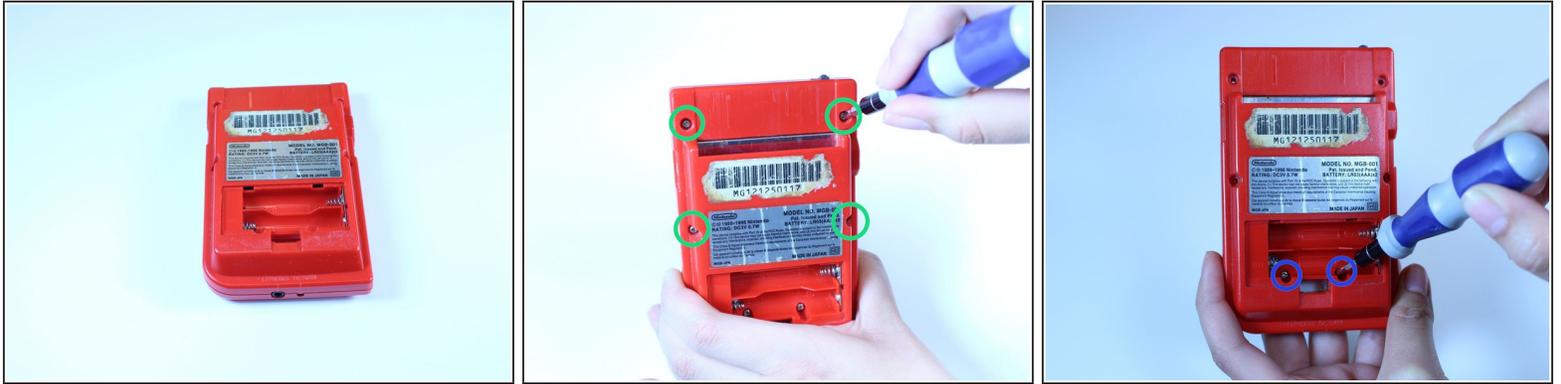

- Place the Game Boy Pocket face-down on a clean, flat surface.
- Use a Y1 tri-wing screwdriver and turn counterclockwise to remove the four external screws.
- Use a Y1 tri-wing screwdriver and turn counterclockwise to remove the two screws inside the battery compartment

Step 2 — Open the device






- Place your hands on the front and back covers of the Game Boy Pocket, and carefully separate the device.
- ⓘ Set the back cover aside. You will need it to reassemble the device

Step 3 — Remove the motherboard screws




- Use a Phillips #1 screwdriver and turn counterclockwise to remove the three screws on the motherboard.

Step 4 — Remove the clip securing the ribbon cable

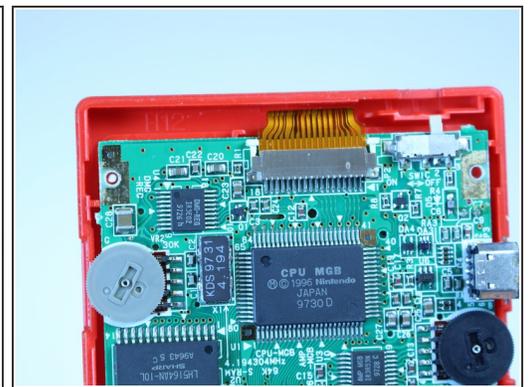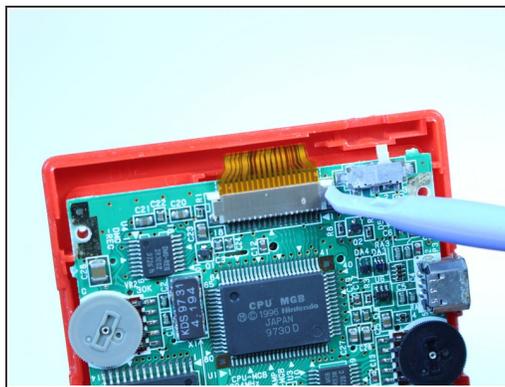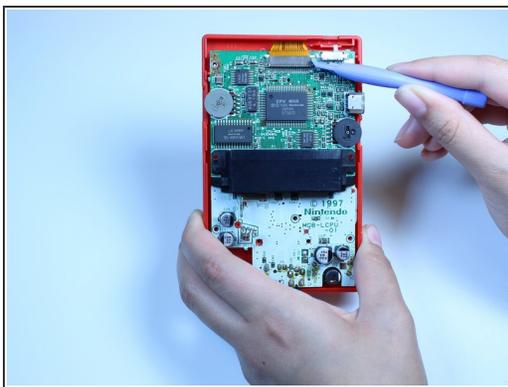

- Use a plastic opening tool to dislodge and remove the clip securing the ribbon cable.
- ⓘ Make sure you apply pressure on both sides of the clip to loosen it.

Step 5 — Dislodge the ribbon cable

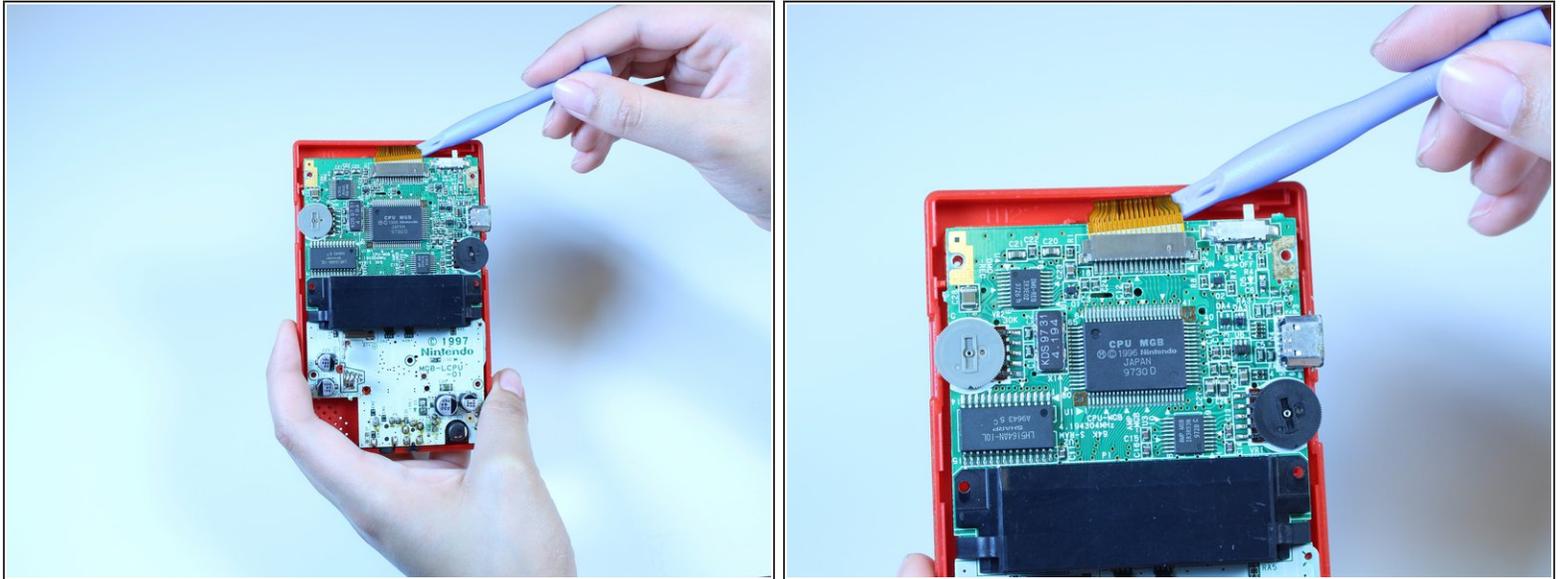

- Use a plastic opening tool to dislodge the ribbon cable.

⚠ Be gentle to prevent tearing the ribbon.


Step 6 — Remove the motherboard



- Grab the black piece protruding from the motherboard, and lift up to remove the motherboard.


ⓘ Set the motherboard aside. You will need it to reassemble the device.

Step 7 — Remove the buttons

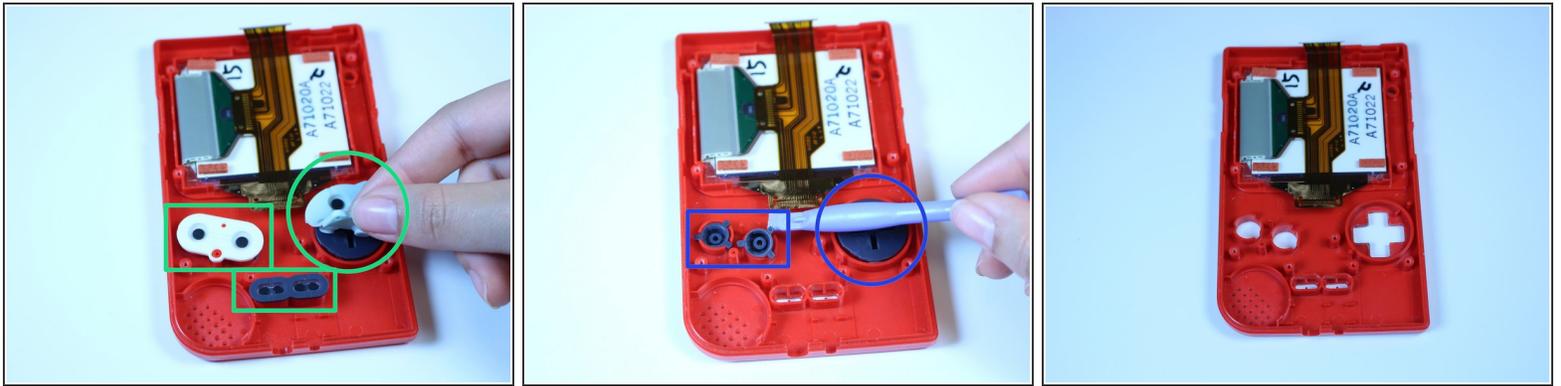

- Use your fingers to remove the three silicone button covers
- Use a plastic opening tool to remove the buttons.

Step 8 — Remove the LCD screen

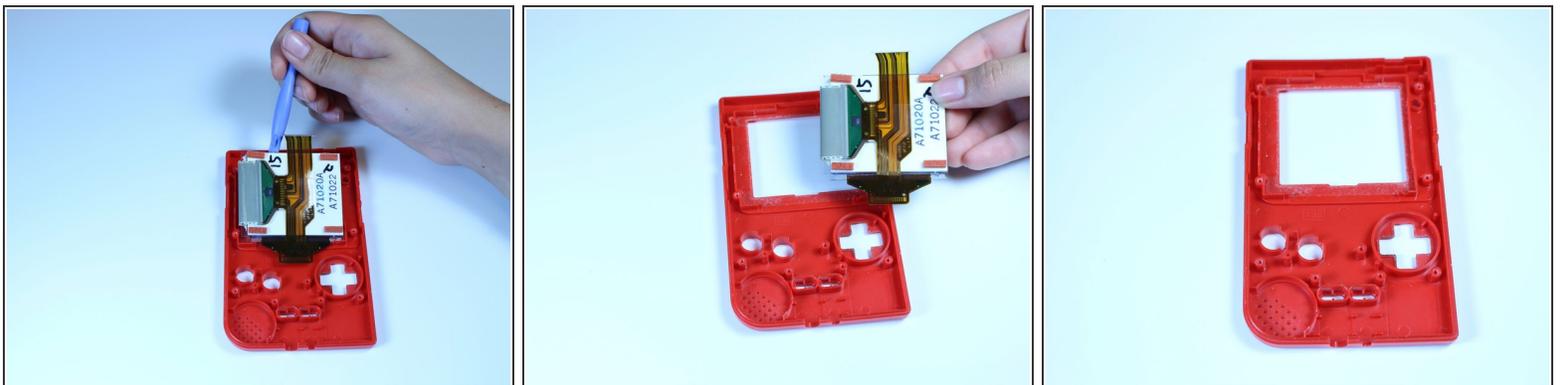

- Use a plastic opening tool to lift the LCD screen away from the front cover.
- Use your fingers to remove the LCD screen.
- ⓘ Set the LCD screen aside. You will need it to reassemble the device.

Step 9 — Replace the front housing



- Replace the front housing.

To reassemble your device, follow these instructions in reverse order.