



Garmin Edge 1000 Micro SD+SIM Card Tray Holder Replacement

This guide is intended to demonstrate how to replace the charging port and SIM card tray on the Garmin Edge 1000.

Written By: Taylor McNees



INTRODUCTION


If your Garmin Edge 1000 has stopped charging, or holding a charge, use this guide to replace the Micro SD+SIM card tray holder.



TOOLS:

- [Metal Spudger](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Back Cover

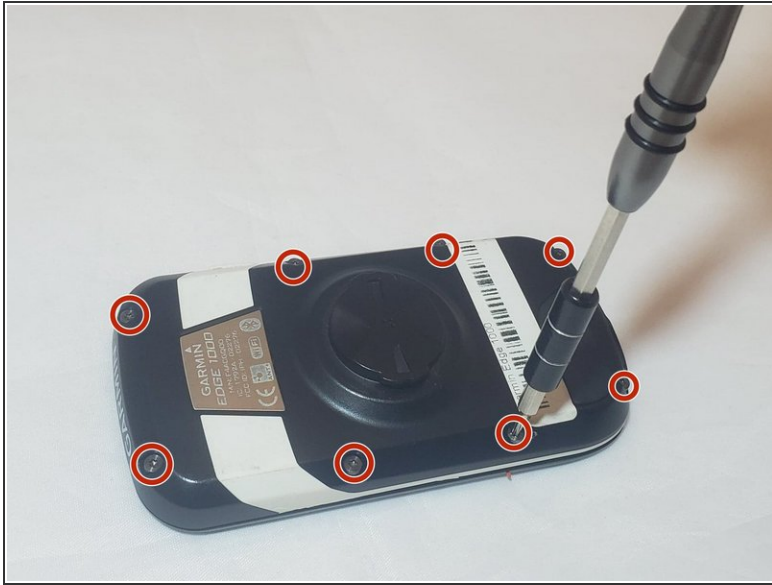

 Be sure the device is properly powered all the way off before starting the replacement.

- Hold the device front side down. Remove the eight T6 Torx screws along the backside of the device.
- Pull the front side of the device apart from the back side.

Step 2



- Disconnect the bronze SIM card flex cable from the motherboard with your finger.
- Disconnect the battery cord to completely separate the front cover from the back cover of the device with your finger.

Step 3 — Micro SD+SIM Card Tray Holder Slot Flex Cable



- Take a metal spudger and use force to push the micro USB port out of its socket on the other end.
- Use the metal spudger once again to use force and push the SIM card port out of its socket. This will allow you to remove this piece entirely and insert a new charging port into the same place.

To reassemble your device, follow these instructions in reverse order.