




Garmin StreetPilot c320 Battery Replacement

Replace the battery in your Garmin StreetPilot c320.

Written By: Arturo Barajas

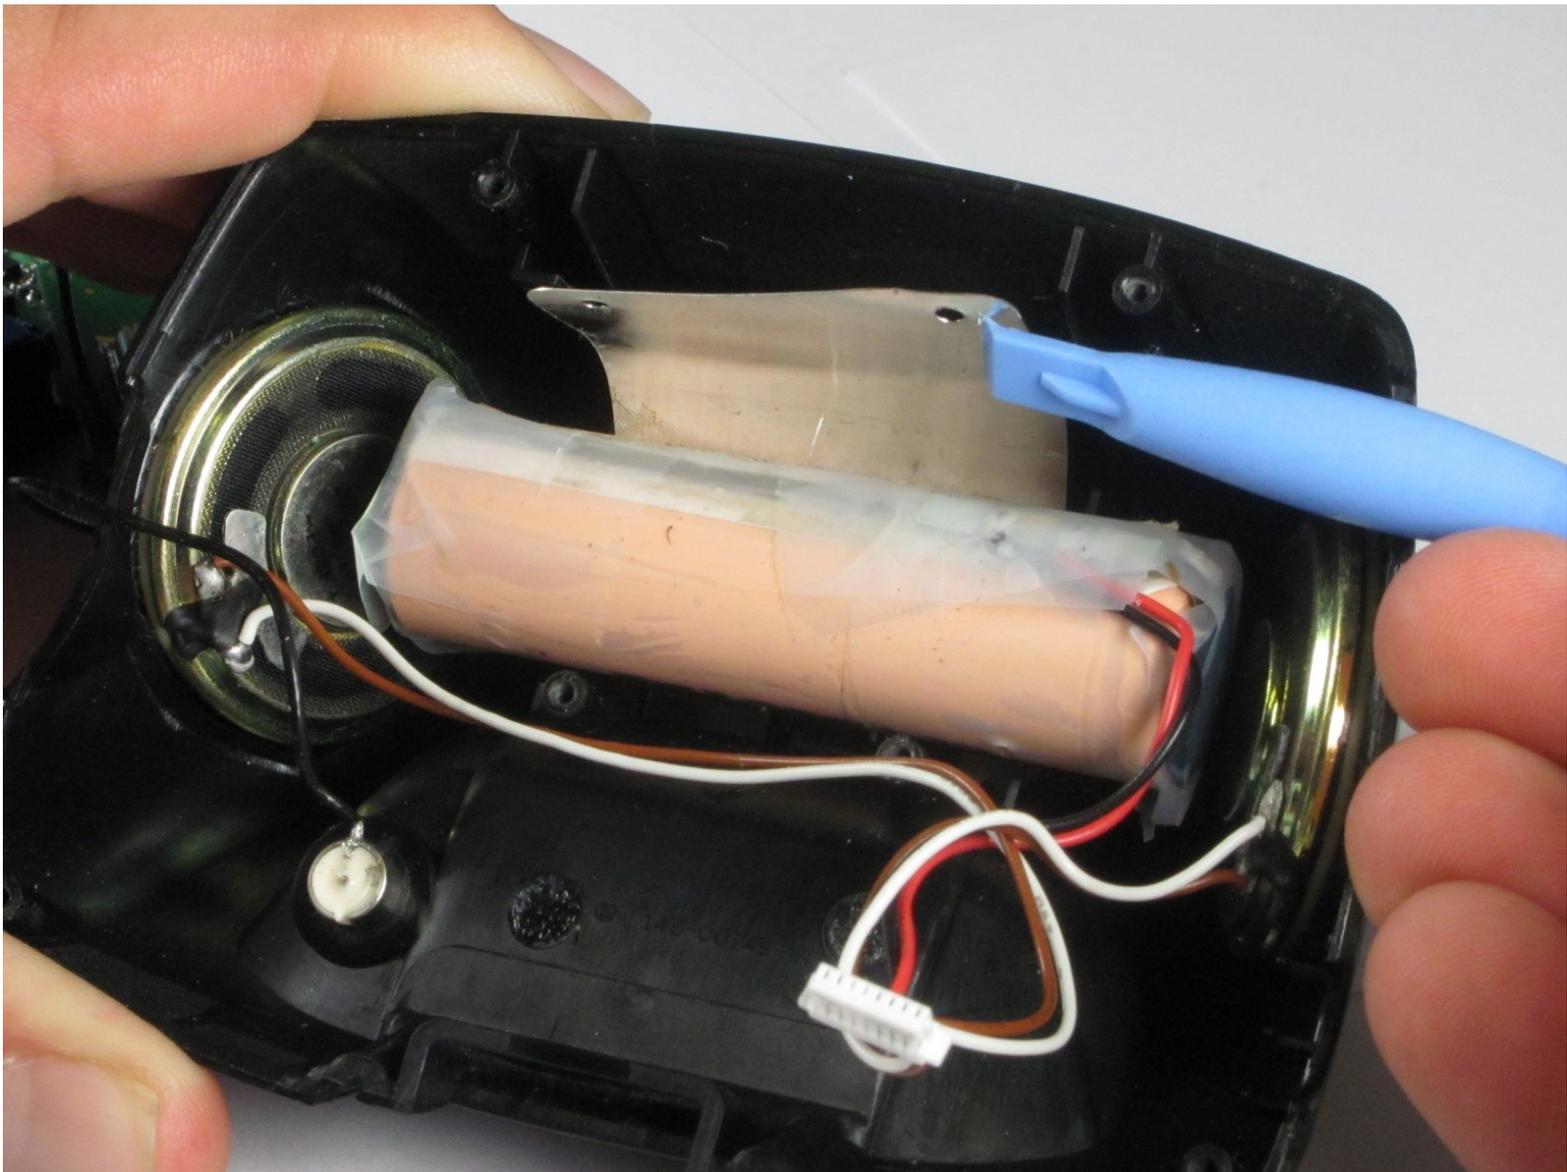

INTRODUCTION

Before disassembling anything be sure that the device is powered off. This installation is much easier for those familiar with the use of soldering irons. Those who have never used one before should look at this [guide](#).

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Rear Case Assembly




- Wedge a plastic opening tool in between the outer frame and the rear panel assembly.
 - Pry the outer frame off the perimeter of the rear panel assembly.
- i** The cover will easily pop off.

Step 2

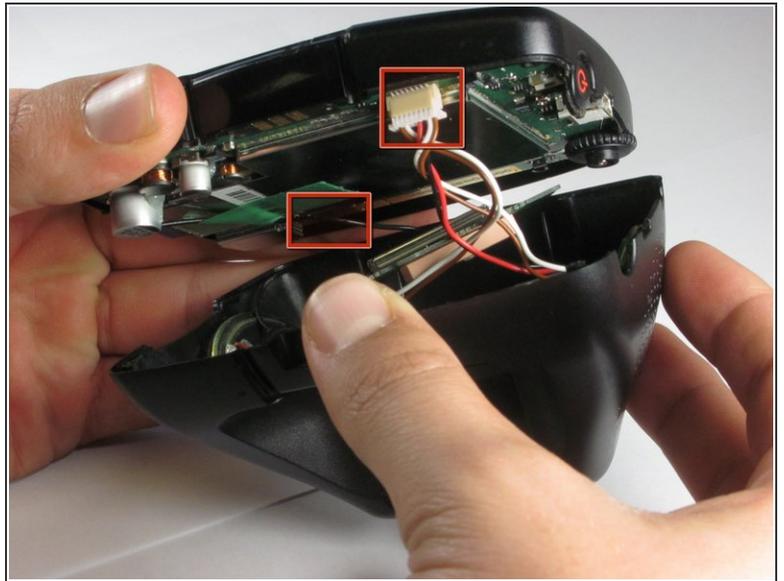


- Remove the four #00 Phillips screws securing the front case assembly to the rear case assembly.
 - Carefully lift, but do not completely separate, the front case assembly from the rear case assembly.
- ⚠ Be extremely cautious when separating both halves, as the rear case assembly is still attached to the front case assembly via a few connectors.

Step 3

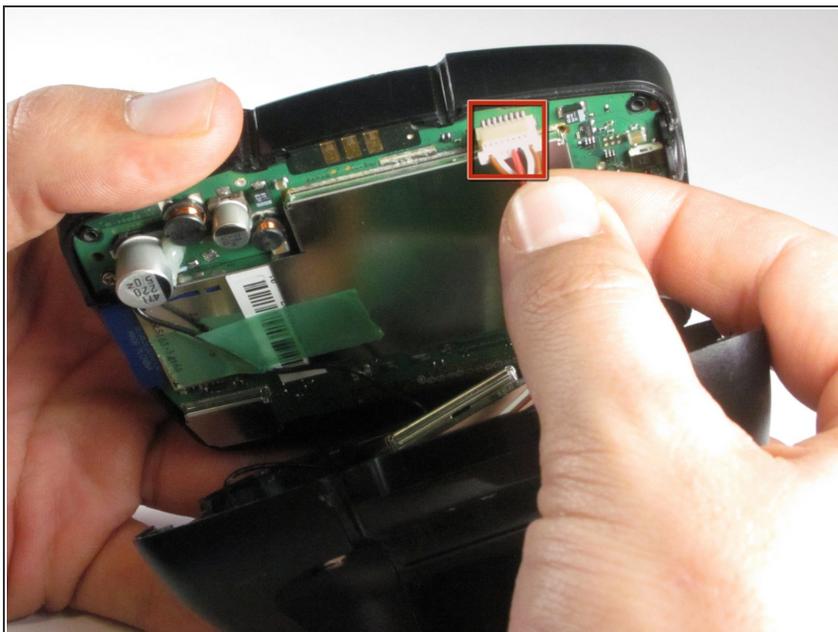



- Gently pull the battery cable connector from its socket on the motherboard.
- The second connector can remain attached to the motherboard, but be careful not to break the connector while handling both halves of the device.

Step 4 — Battery

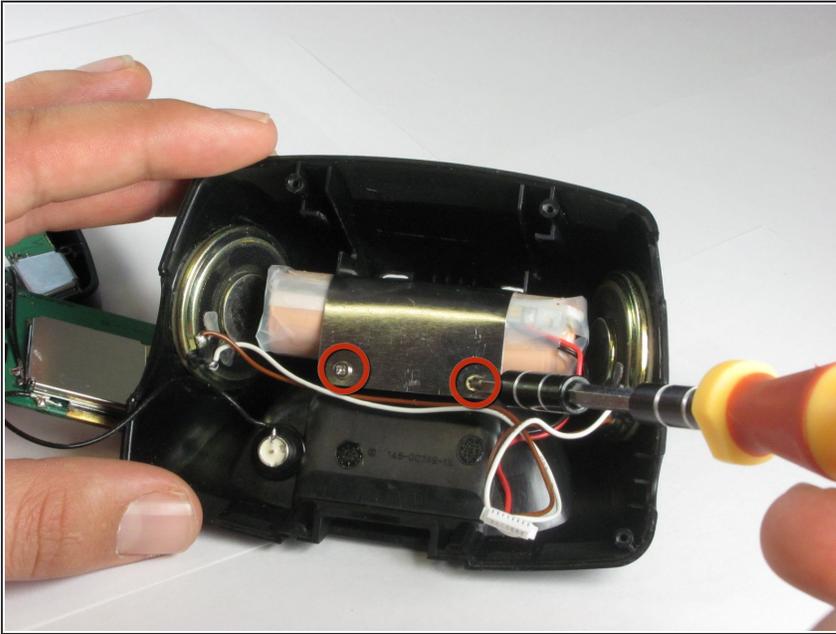

- ⚠ Do not disconnect the black wire. Doing so may cause severe damage to your device.
- Remove the two #00 Phillips screws securing the battery to the rear case assembly.

Step 5

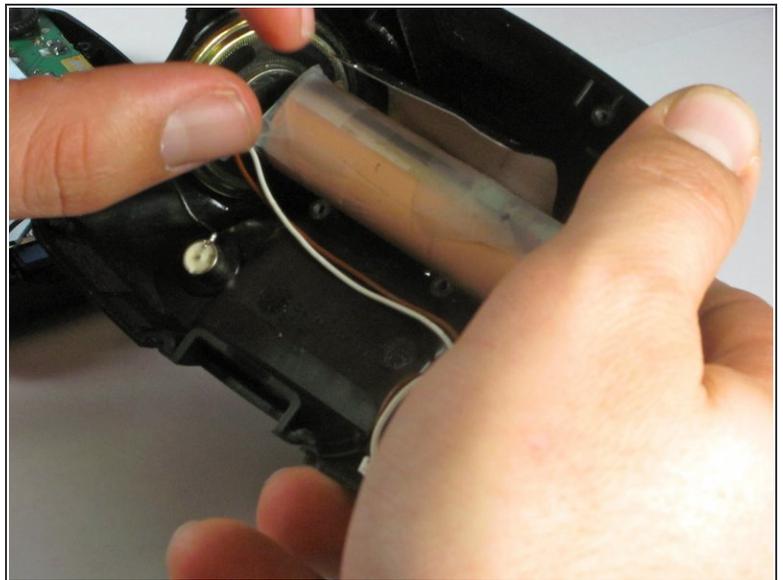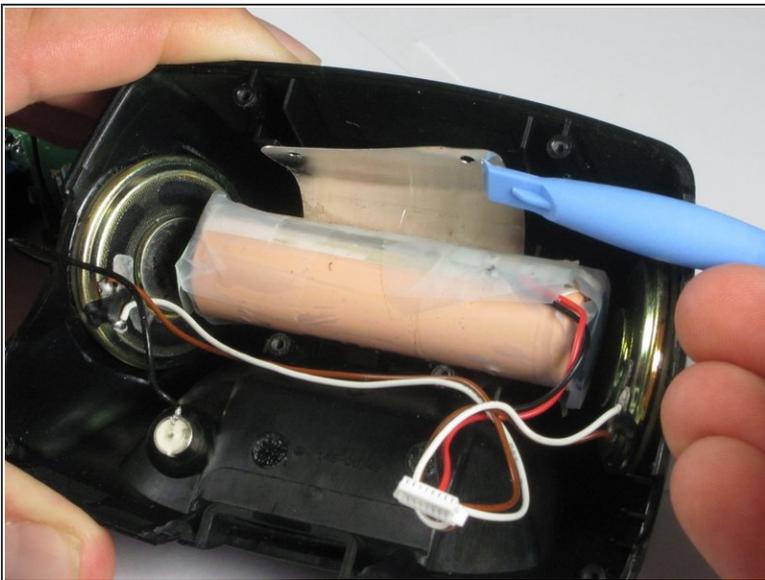

- Use a plastic opening tool to peel back the battery bracket.
- Cautiously grasp the battery and lift it out of the device.

To reassemble your device, follow these instructions in reverse order.