


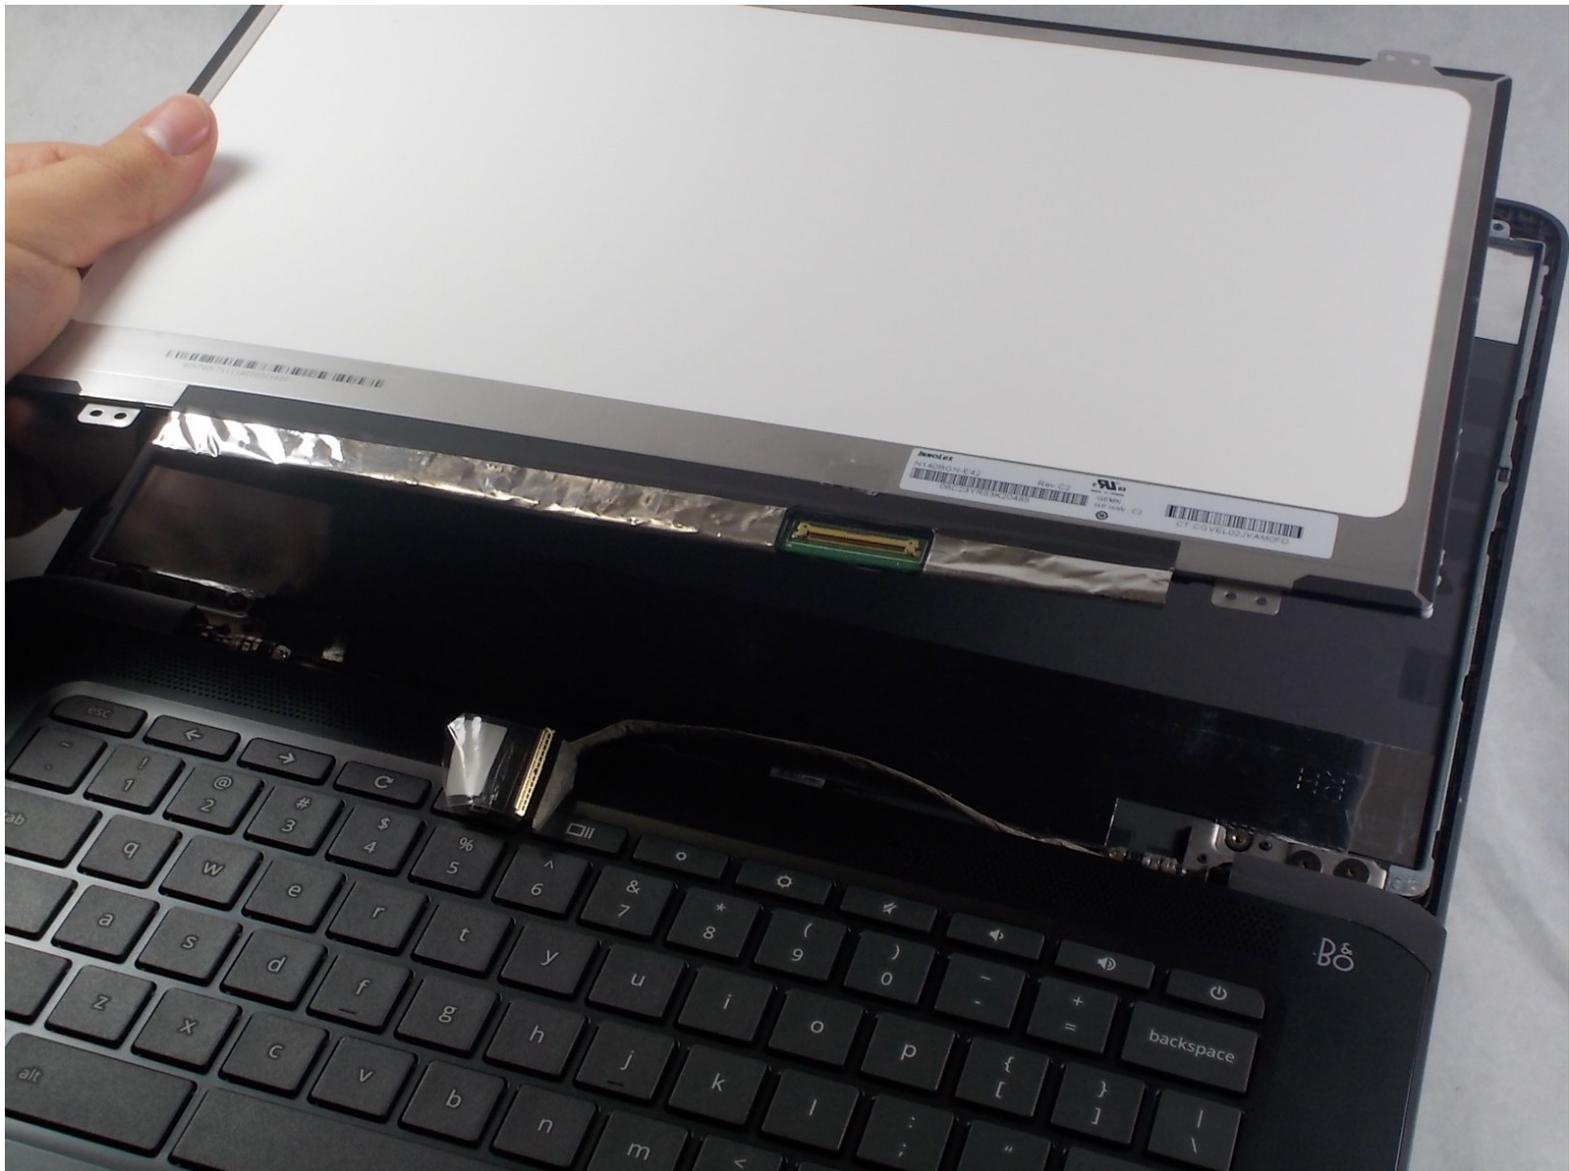

# HP Chromebook 14-ca061dx Display Replacement

How to fix display and replace screen for HP Chromebook 14-ca061dx

Written By: Jean Arevalo



## INTRODUCTION

Nowadays, laptop screens can be easily damaged. The HP Chromebook 14-ca061dx screen could be physically damaged, with broken glass, or black splotches on the display, or could be defective, without any signs of physical damage. A defective screen could display resolution lines, distorted coloring, or nothing at all. If you know these problems are caused by a broken, or defective a screen, you may just need a replacement. Follow this guide to help with your screen/display replacement.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [JIS #000 Screwdriver](#) (1)
-

## Step 1 — Display




- Flip the Chromebook so that the underside is facing upwards.
- Follow along the edge with the iFixit opening tool to unhinge the display frame.

## Step 2



- Flip the Chromebook right side up and open it to form a 180 degree angle.

## Step 3

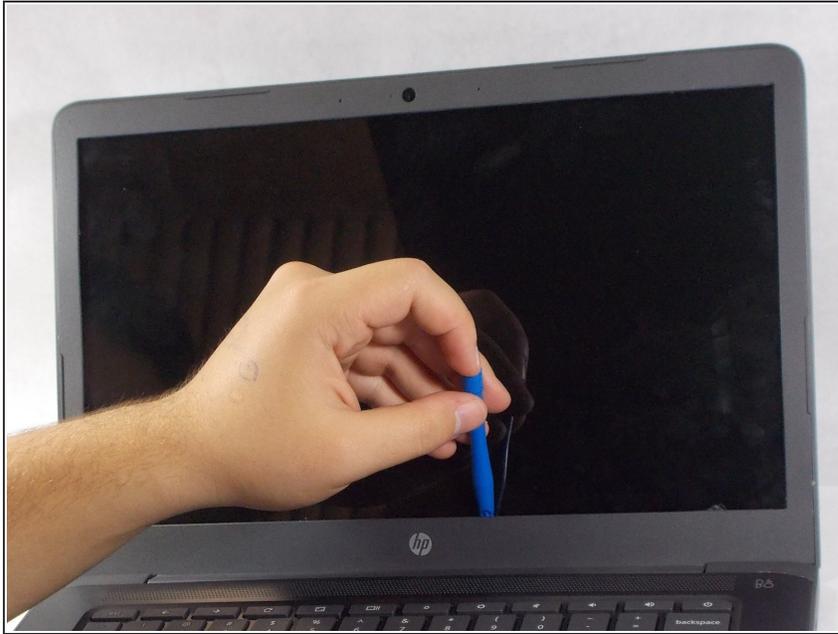



- Use the iFixit opening tool to pry open the bezel. Start from the bottom of the screen and work your way around the sides.
- ⓘ The bottom edge of the bezel may stick because there is glue holding it together.

## Step 4



- Use spudger or the iFixit opening tool to remove the bezel.
  - ⚠ When prying, be careful not to damage or snap bezel. This is made up of very, thin plastic.
- Pull bezel from the bottom, once all clips are detached.
- Remove bezel.

## Step 5

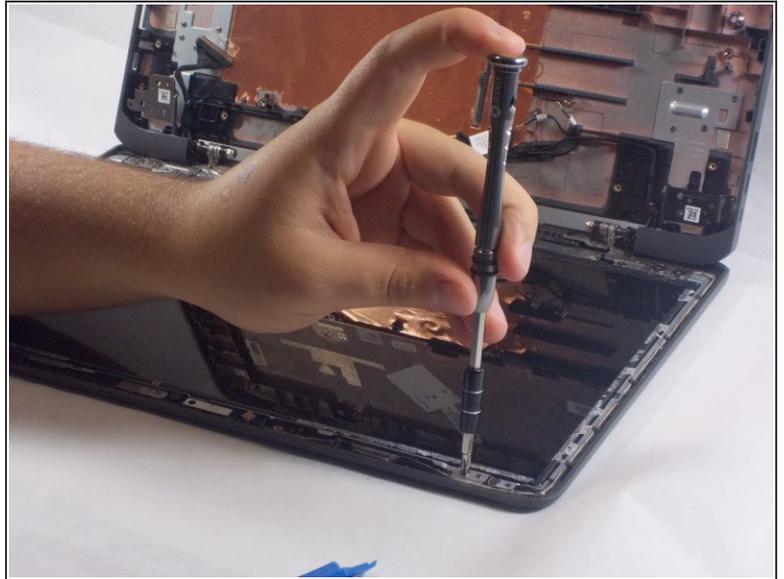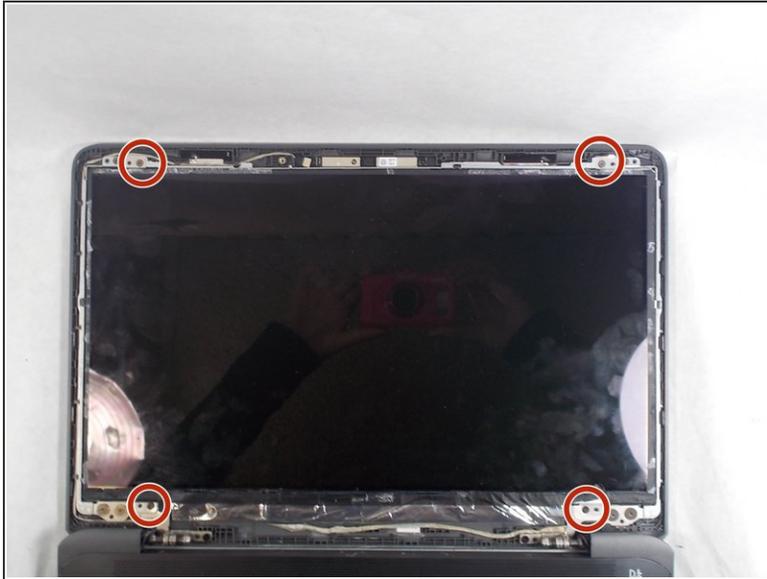

- Remove the four 2mm JIS #000 screws.

## Step 6



- Use tweezers to pull the tape back and remove the connector attached to the back of the LCD panel.

⚠ Be cautious when pulling back the tape—the connector/ribbon is fragile and could snap easily.

## Step 7



- Remove the LCD/display panel from the Chromebook frame.

To reassemble your device, follow these instructions in reverse order.