



HP Deskjet 3000 j310a Power Button Replacement

This guide will provide you with the steps to repair or replace a faulty power button in your HP Deskjet 3000 j310a.

Written By: Lee



INTRODUCTION

The power button of the HP Deskjet 3000 j310a may need to be repaired if it has broken. It may also need to be repaired if it is not functioning in the correct way. This might be caused by it dislodging from its intended location.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T8 Torx Screwdriver](#) (1)
-

Step 1 — Disconnect Printer



- Begin to disassemble the printer by disconnecting from all power sources and computers. Keep cords separate and allow the printer to cool for 5 minutes.

Step 2 — Remove Bottom Cover



- Flip the printer upside down and locate the cover on the left hand side. It is rectangular shape and is


held in place by two screws.
Unscrew these screws and take off cover.

Step 3 — Release Paper Output Tray




- To release the tray from the printer, you must manually pull it out. Hold the tray and push towards one side of the printer. Then pull away from the printer towards the other side. Keep output tray separate.

Step 4 — Unscrew Cover

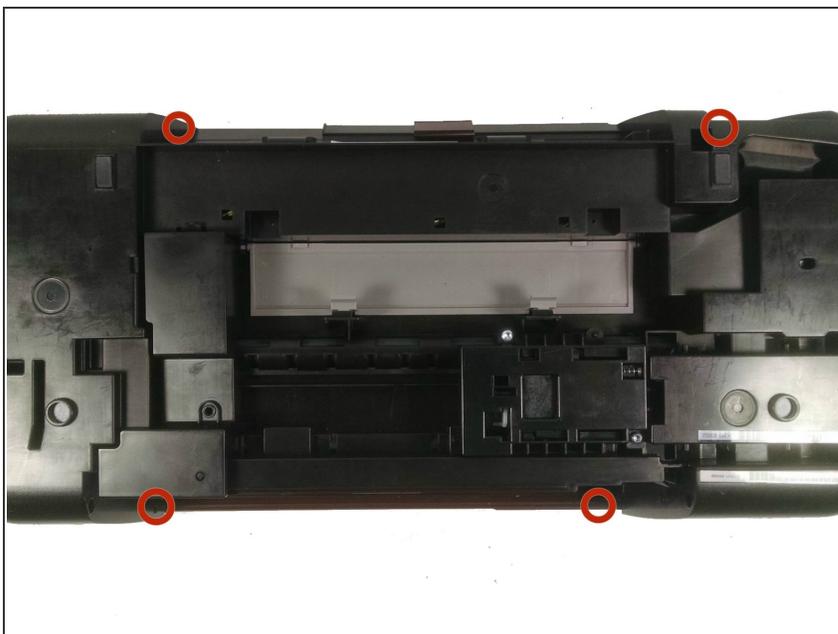

- Turn the printer upside down. Locate the four screws holding the cover in place. These will be on the edges of the cover.

Step 5

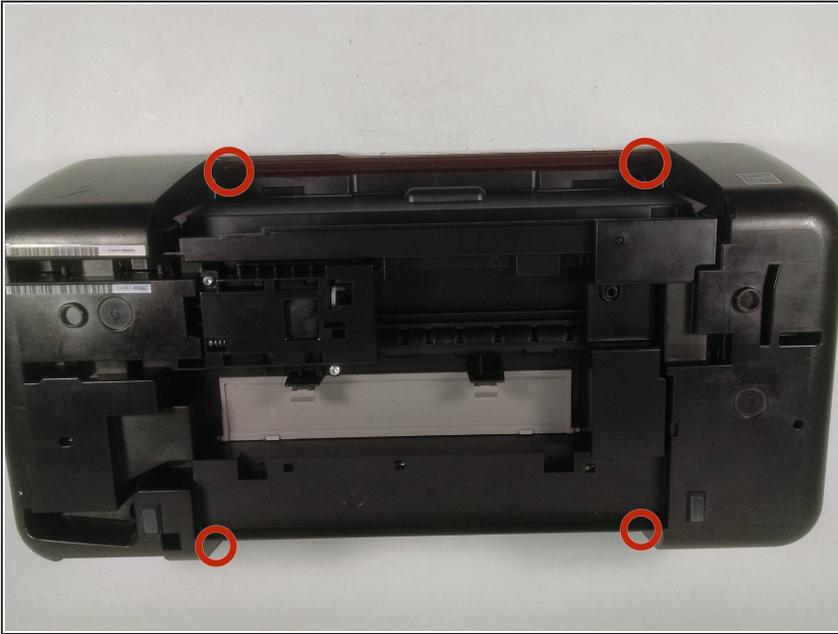

- Unscrew the four screws, keeping them separate. Turn the printer back right side up


Step 6 — Pull Off Top



- Place fingers on the edge of the red cover. Begin to pull upwards to release the top portion, working your

way around the printer. Make sure that it does not fall back into place.

Step 7 — Disconnect Cover

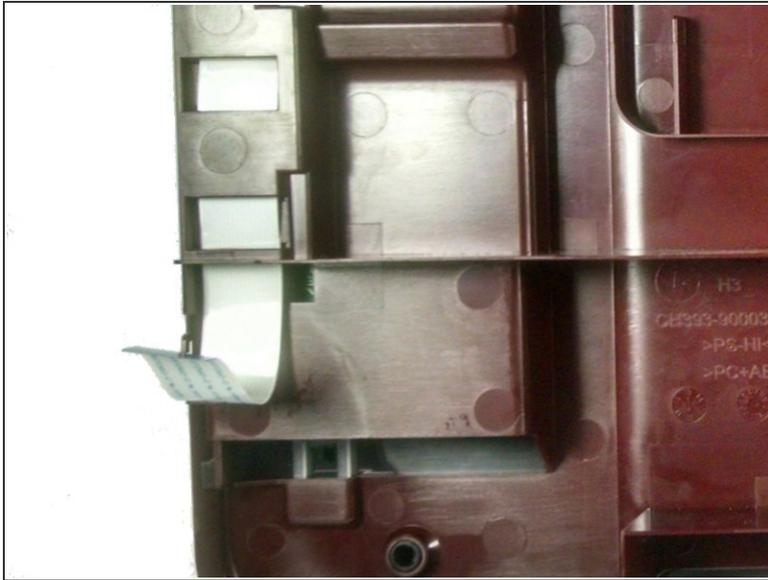

- Once the top is loose, there will still be a connection wire between the printer and the cover. This wire will be about one inch wide and white, located under the buttons.

Step 8




- Detach the wire from the printer by pulling the blue-sealed end from the white holder.

Step 9 — Power Button



- Now that the top cover is removed from the printer body you will need to separate the control panel from the maroon panel.

Step 10

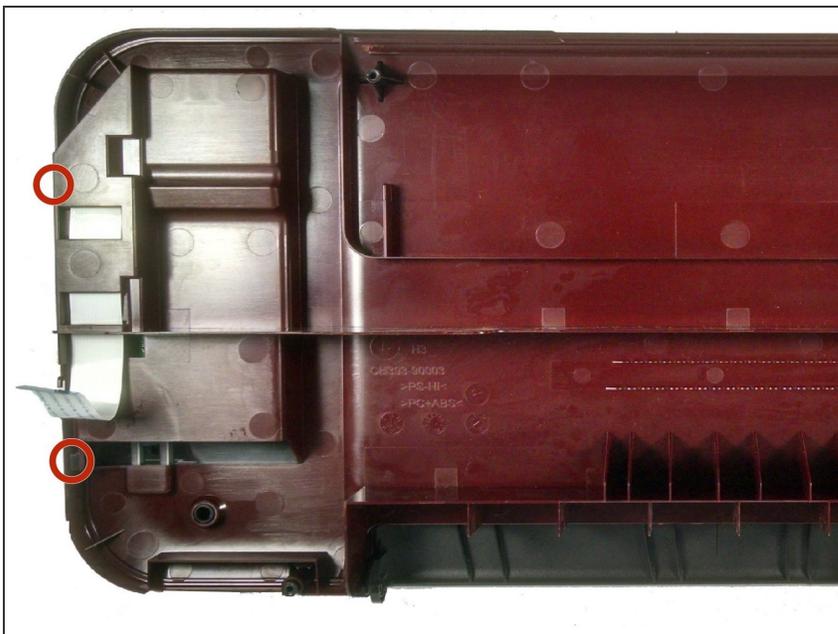


- The control panel is connected to the maroon panel by four plastic hooks (two are seen in the picture and the other two are opposite them). Using a plastic opening tool pry each hook out of its locked position.

Step 11



- You will need to remove the button, button circuit board, and screen in order to replace the control panel.

Step 12

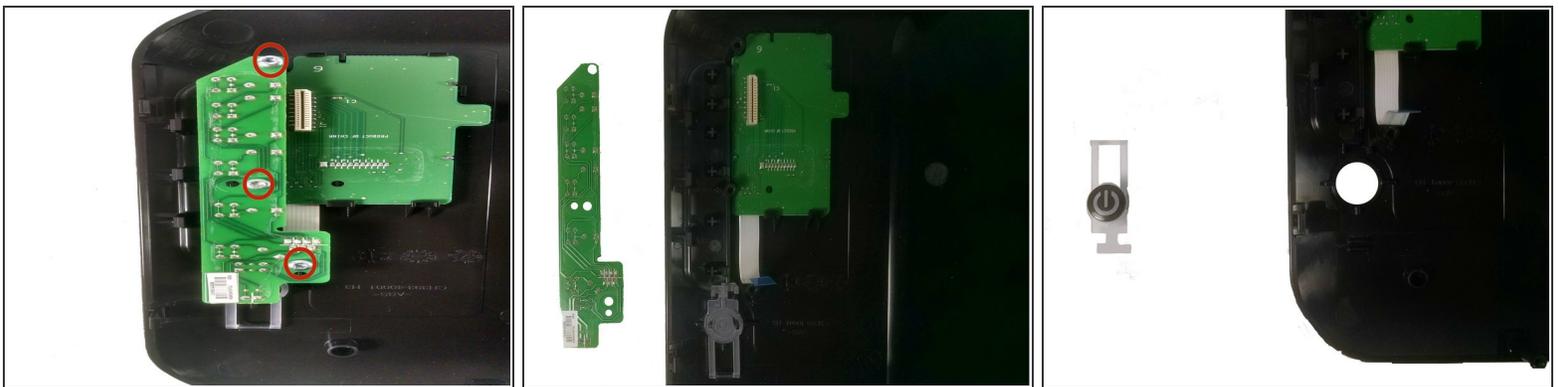

- Unscrew the three screws indicated in the image. Unplug the connection from the screen, lift up the board, and remove from the panel. Pull the button out.

To reassemble your device, follow these instructions in reverse order.