



# HP Envy Sleekbook m6-k010dx LCD Replacement

Replace your broken LCD to bring use back your HP Envy.

Written By: codi whittaker



---

## INTRODUCTION

If your computer turns on but nothing is displayed on the LCD, it might be time to replace it. This guide will walk you through each step.

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery




- Remove the twelve 9 mm Phillips #00 screws.

## Step 2

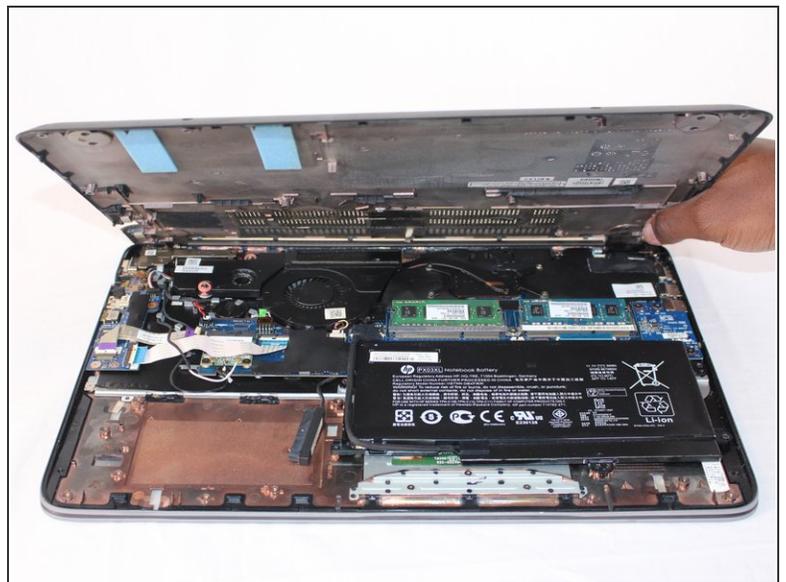


- Use the plastic opening tool and your hands to remove the bottom cover.

### Step 3

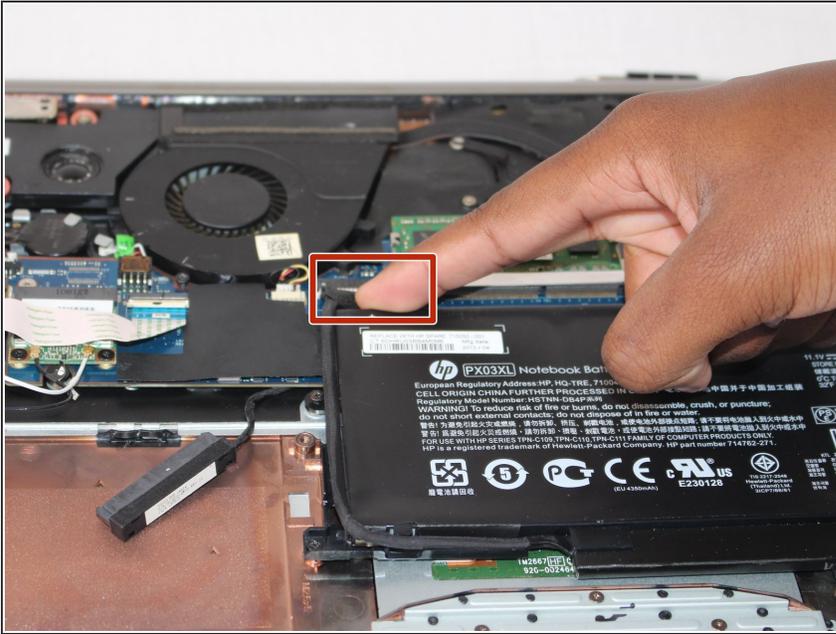


- Disconnect the battery power cable from the motherboard.

### Step 4

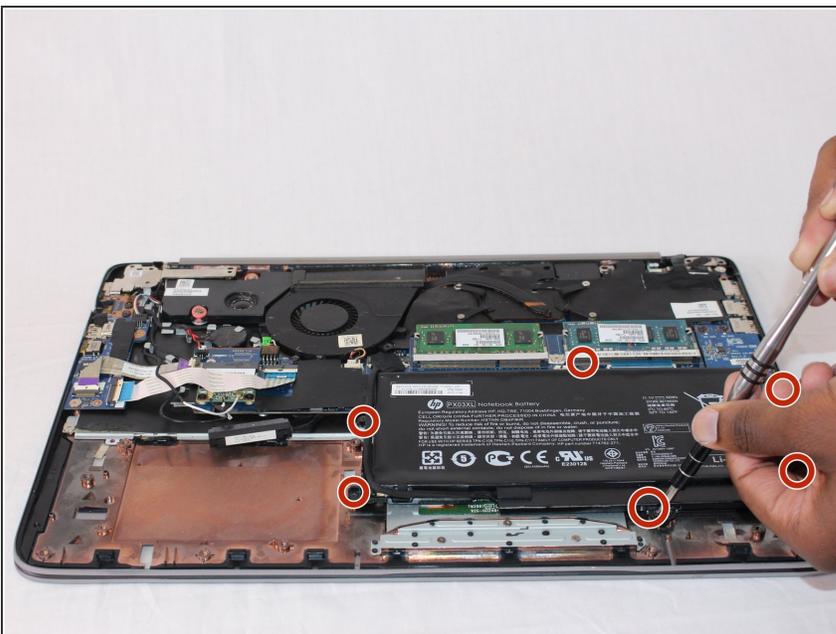


- Remove the six 6 mm Phillips #00 screws from the battery.

## Step 5

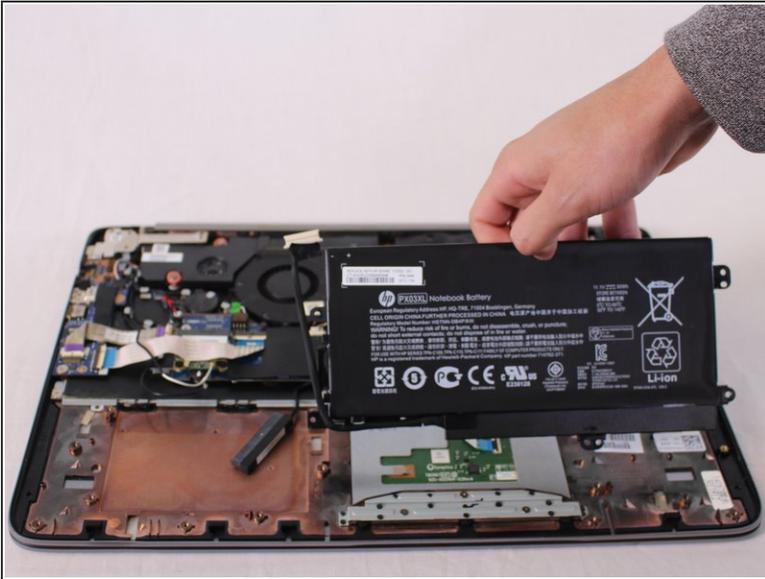

- Lift the battery out of the laptop.

## Step 6 — LCD

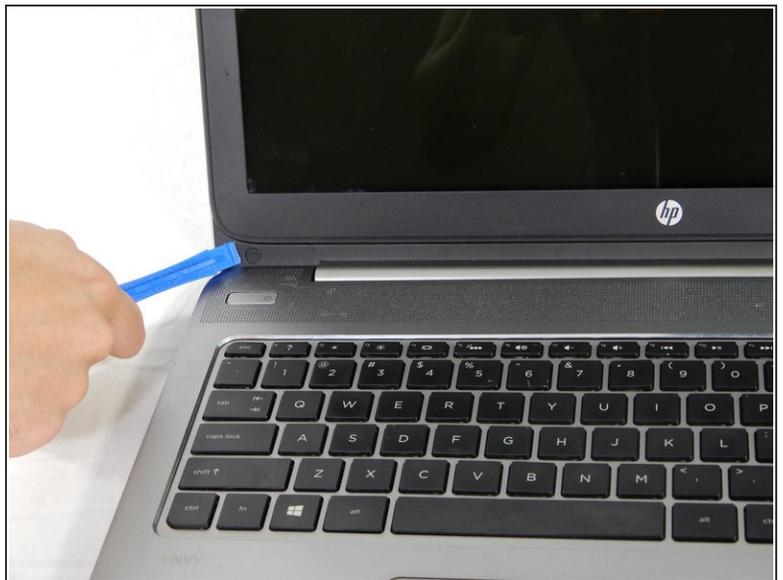

- Remove the stickers from the bottom left and right corner of the device with a plastic opening tool.

## Step 7




- Remove the two 2.5mm Phillips #00 screws found underneath the previously removed stickers.

## Step 8



- Use the plastic opening tool to pry the bezel free from the LCD housing.

## Step 9

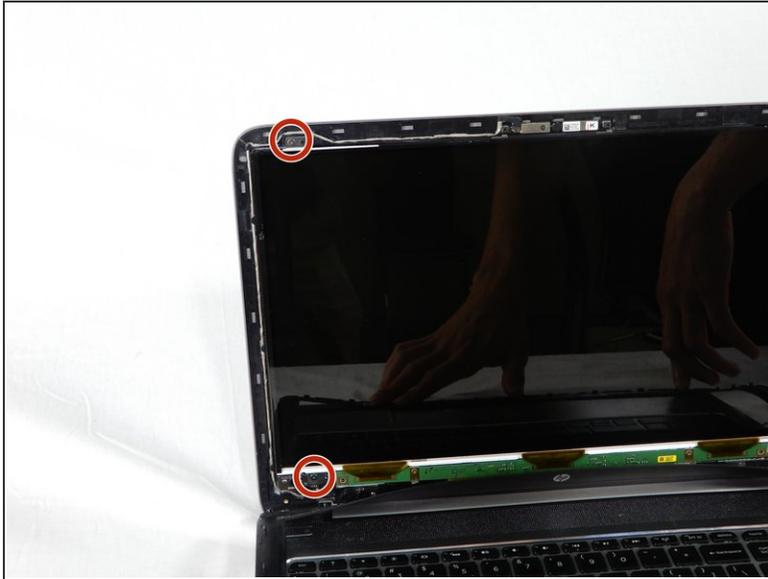

- Remove the four 2.5mm Phillips #00 screws located in each corner of the LCD screen.

## Step 10



- Use the plastic opening tool to remove the LCD screen from its housing.
- Lay the LCD screen flat on the keyboard.

## Step 11



- Disconnect the cable which connects the LCD to the motherboard.
- Pul the LCD screen out.

To reassemble your device, follow these instructions in reverse order.