



# HP Envy x360 m6-aq005dx Battery Replacement

Use this guide to remove or replace the battery of your HP Envy x360 m6-aq005dx.

Written By: Matthew Martin



## INTRODUCTION


The battery is the main power source for the laptop when not plugged in. The battery may contain a small amount of electric charge, so this guide will provide assistance in the battery's proper and safe removal.

---

### TOOLS:


- [JIS #1](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Back Panel

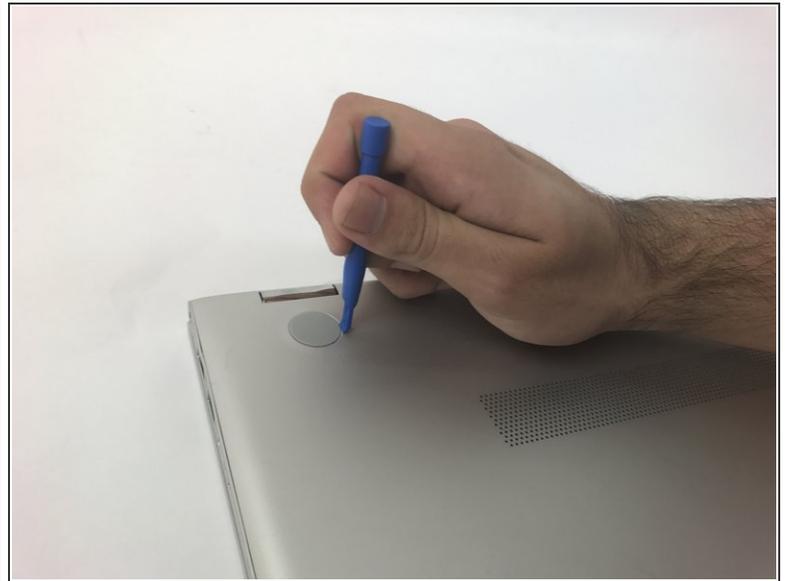


- Use the plastic opening tool to remove the gray rubber pads on the bottom of the laptop. For our device we only needed to remove the two at the top.

## Step 2

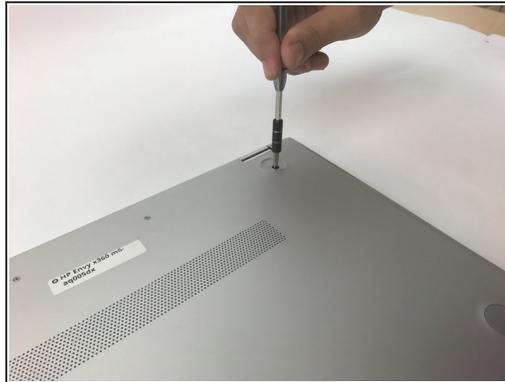


- Use a Torx T5 screwdriver to remove the six 5.1 mm screws.
- Use a JIS #1 screwdriver to remove the two 7.2mm screws.

### Step 3

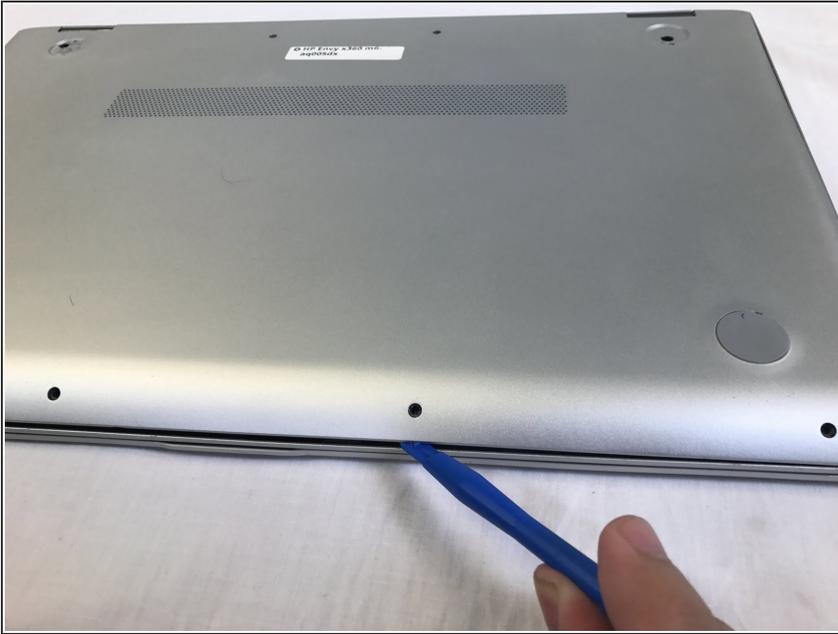

- Use a plastic opening tool to pry open the case. Go slowly around the edge. You will hear popping noises, such as due to popping open the small joints that keep the cover attached.

### Step 4 — Battery

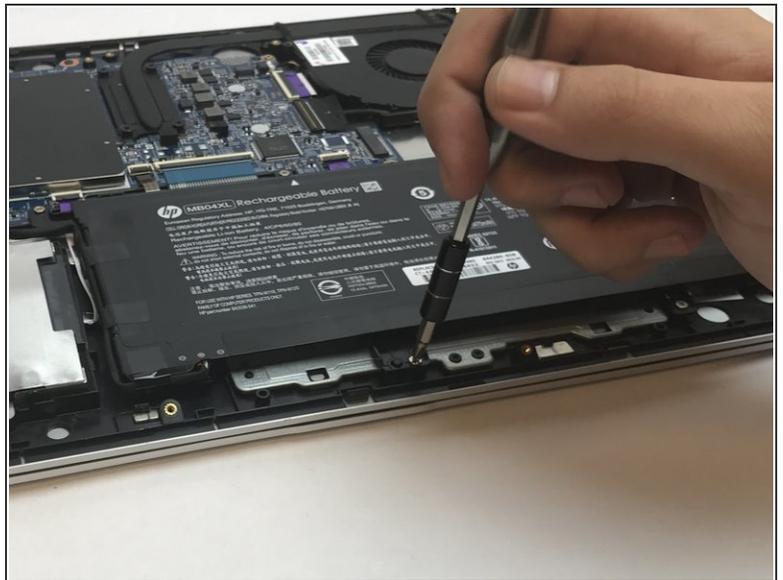

- Use a JIS #1 screwdriver to remove the six 4.7 mm screws.

## Step 5



**⚠** Battery might cause a small electric shock.

- Use tweezers to disconnect the battery from the motherboard.

To reassemble your device, follow these instructions in reverse order.