




# HP HDX 16-1160US Keyboard Replacement

This guide allows the user to replace the keyboard for the HP HDX 16-1160US.

Written By: Daniel McBroom

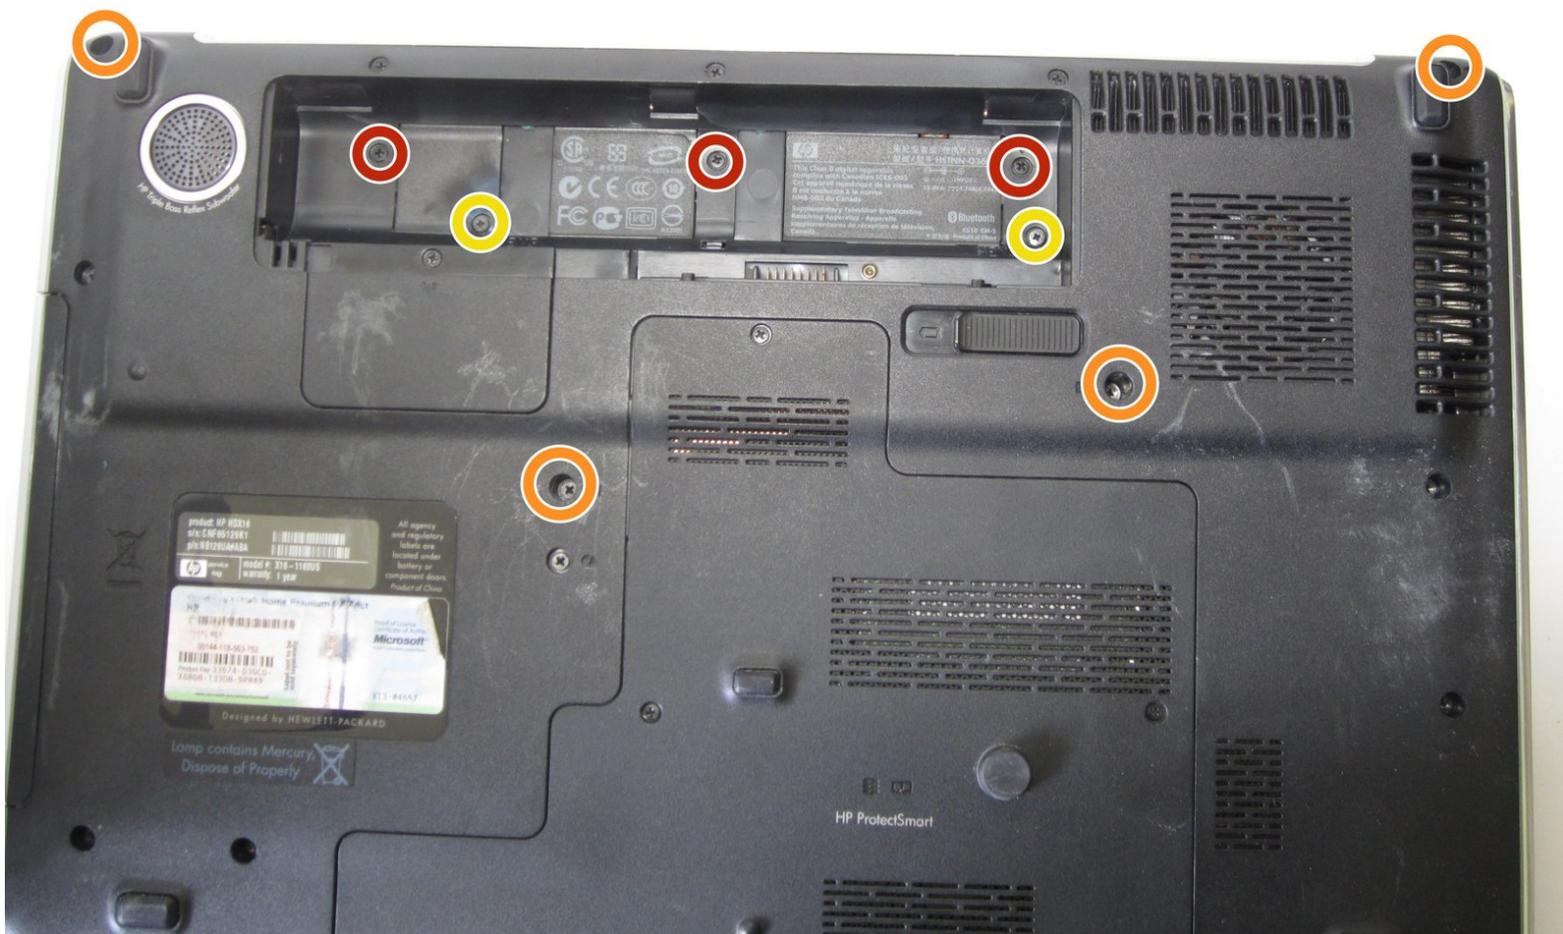

---

## INTRODUCTION

This is a guide for the removal of the keyboard for an HP HDX 16-1160US. Remember to read each step fully before attempting the repair.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Turn the device over so that the bottom side is facing up and the battery is facing away from you.

## Step 2




- Locate the slider under the right side of the battery.
- Using your thumb, slide it all the way to the left until the front of the battery lifts up.

### Step 3



- With your thumb still holding the slider to the left, use the opposite hand to lift the battery out, removing it from the computer.

### Step 4 — Keyboard

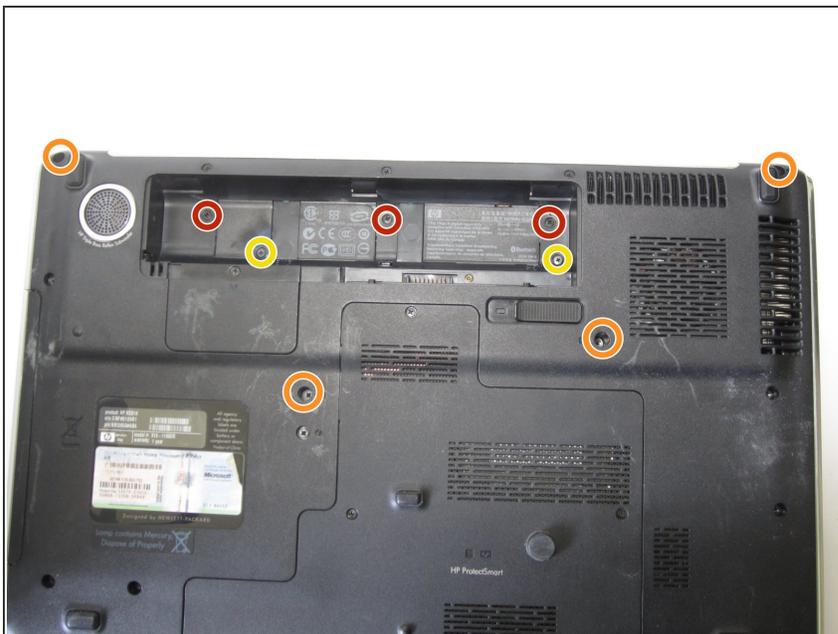

- Remove the three 4mm screws using Phillips #1 screw driver.
- Remove the four 6mm screws using Phillips #1 screw driver.
- Remove the two 3mm screws using Phillips #1 screw driver.

## Step 5



- Using your fingers, pry off the speaker cover.

## Step 6



- Use the plastic opener to pry up the chrome keyboard cover from the laptop itself. Carefully work around the edges by prying each snap individually.
  - Remove the chrome keyboard cover.
- ⚠ Be careful not to pull the chrome cover completely off because there is a black strip connecting it to the laptop itself.

## Step 7




- Locate and remove the two 4mm screws with the Phillips #1 screw driver.

## Step 8



- Using your hands, pull the keyboard out.
  - ⚠ Do not pull completely off because there is a grey strip connecting it to the laptop itself.

## Step 9

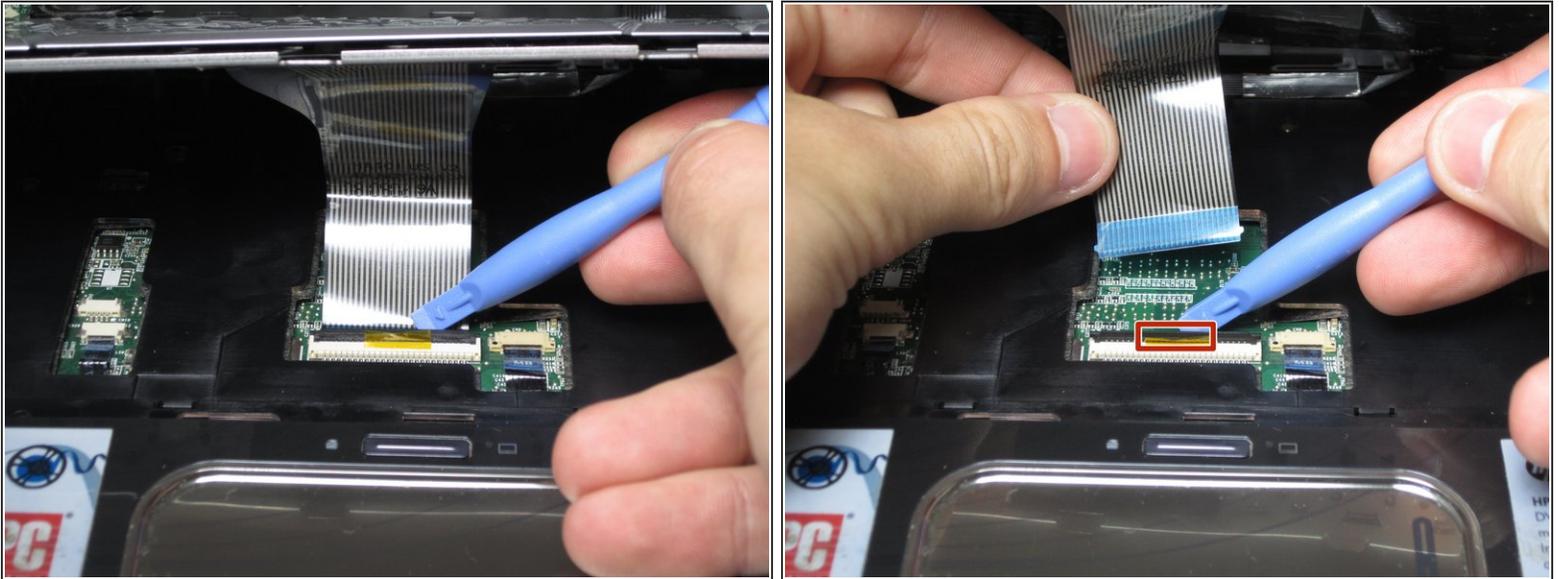

- Lift the black tab using the plastic opening tool.
- Gently pull the grey strip out, horizontally way from you. This will release the keyboard from the computer.

To reassemble your device, follow these instructions in reverse order.