




HP OfficeJet 4650 Manual One-Inch Paper-Feed Roller Replacement

This guide outlines the necessary steps to replace the HP OfficeJet 4650's manual one-inch paper-feed roller.

Written By: Stephanie Carpintero

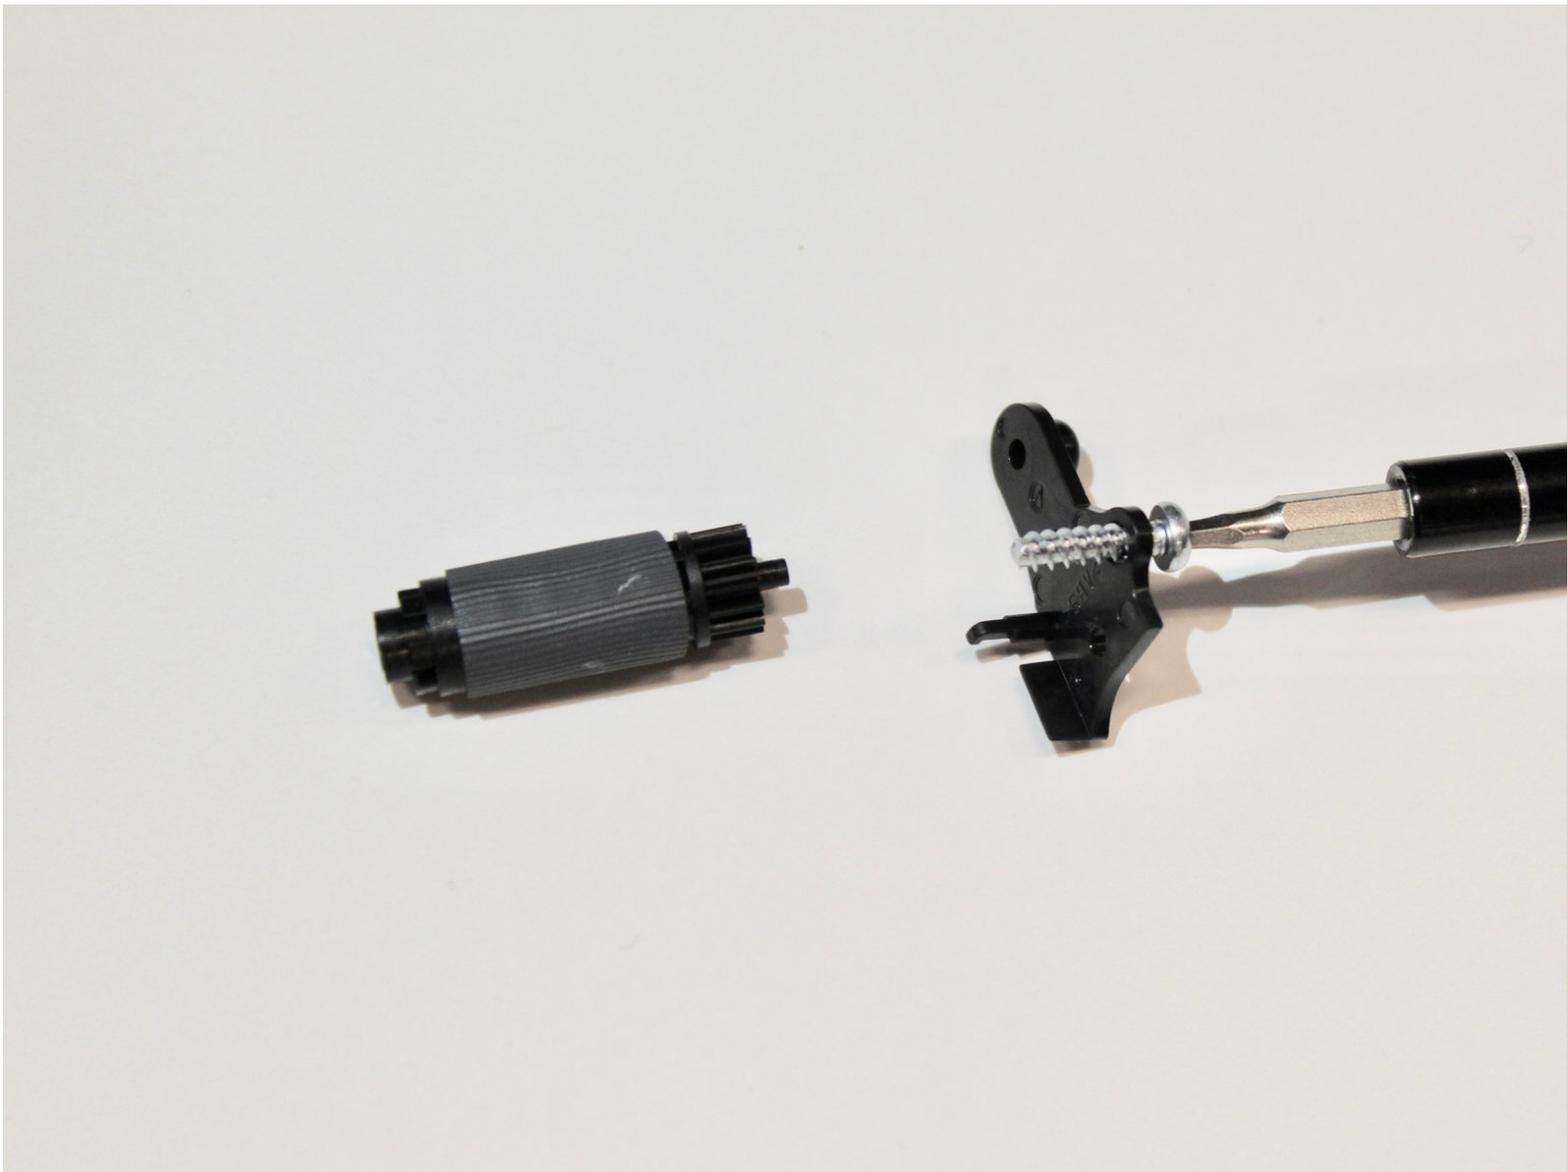

INTRODUCTION

The manual one-inch paper-feed roller is what manually feeds documents to the printer. If the manual one-inch paper-feed roller is malfunctioning, the HP OfficeJet 4650's manual functions (fax, copy) will not work. This guide will show you how to replace the manual one-inch paper-feed roller.

TOOLS:

- [2 mm Hex Screwdriver](#) (1)
-

Step 1 — Manual One-Inch Paper-Feed Roller



- Open the document feeder cover by flipping it to the left with the front panel facing you.
- ⓘ The document feeder is designed to be a bit more difficult to open, so it is okay to use a little more force.

Step 2



- Locate the manual one-inch paper-feed roller end of the document feeder cover.
- Remove the 11.0mm screw on the side of the roller with 2.0mm hex screwdriver.

Step 3



- Pull the side cover of the manual one-inch paper-feed roller to the right and remove the paper roller.

To reassemble your device, follow these instructions in reverse order.